Intermediate Merak SS Electronic System Controls

- 1. Left headlight
- 2. Left turn signal
- 3. Left fog lamp
- 4. Left side light
- 5. Warning light for headlamp (fitted only for Germany)
- 6. Pneumatic horn compressor
- 7. Relay for left fan control
- 8. Relay for right fan control
- 9. Relay for cutting out coil resistance
- 10. Left radiator fan
- 11. Radiator thermic head
- 12. Right radiator fan
- 13. Right side light
- 14. Right headlight
- 15. Right turn signal
- 16. Right fog lamp
- 17. Manometric switch for cooling compressor control
- 18. Front left brake pad with wear contact
- 19. Front right brake pad with wear contact
- 20. Motor for engine compartment heating fan
- 21. Baggage compartment lamp
- 22. Windshield wiper timer
- 23. Windshield wiper motor
- 24. Windshield washer motor
- 25. Switch for insufficient brake oil pressure signaling
- 26.Relay for passenger compartment fan
- 27. Relay for pneumatic horn control
- 28.Fog lamp relay
- 29.Stop light switch
- 30. Brake balancing switch
- 31. Warning light for parking lamps
- 32. Glove box lamp
- 33.Radio antenna
- 34. Semiconductor for cooling system
- 35.Intermittence for turn signals and HAZARD lights
- 36.Relay for headlight high beam control

- 37. Relay for headlight low beam control
- 38. Emergency switch for parking lights
- 39. Fuel level and warning light for fuel reserve
- 40. Electric control switch for radio antenna
- 41. Passenger compartment lamp switch
- 42. Rear window defroster switch
- 43.Cooling system switch
- 44. Cooling system control thermostat
- 45. Dashboard lamp
- 46.Radio
- 47. Headlights commutators unit
- 48. Commutator unit for turn signals, headlamp, and horns
- 49. Windshield wiper and washer unit switch
- 50. Revolution counter (tachometer)
- 51. Warning light for insufficient brake oil pressure with button for warning light test
- 52. Engine oil pressure gauge
- 53. Speedometer and tachometer
- 54. Starting switch
- 55. Starting switch lamp
- 56. Fog light switch
- 57.Emergency HAZARD parking light switch
- 58. Warning light for connected handbrake
- 59.Water temperature gauge
- 60.Rear window warning light
- 61. Engine oil temperature gauge
- 62. Warning light for lifted headlamp (Germany only)
- 63. Voltmeter
- 64. Warning light for brake balancing or pad wear
- 65. Electronic clock
- 66.Rheostat for dashboard instrument lights
- 67. Commutator for passenger compartment fan
- 68.Left door window switch
- 69. Right door window switch
- 70. Cigarette lighter
- 71. Light for cigarette lighter
- 72.Left door switch
- 73.Left door window motor

- 74.Left door open warning light
- 75. Handbrake switch
- 76.Left loudspeaker
- 77. Right loudspeaker
- 78. Thermic rear window
- 79. Drivers compartment light
- 80. Right door switch
- 81. Right door window motor
- 82. Right door open warning light
- 83. Alternator tension governor
- 84. Float for fuel level indicator
- 85. Bulb for engine oil temperature
- 86. Bulb for engine oil pressure
- 87. Bulb of engine water overheating warning light
- 88. Bulb for engine water temperature
- 89. Fuel pump
- 90.Battery
- 91. Engine compartment left lamp
- 92.Rear left light cluster
- 93. Alternator
- 94.Starter motor
- 95.Left side license plate lamp
- 96. Right side license plate lamp
- 97.Electromagnetic fan clutch for AC compressor
- 98.Rear red fog light
- 99. Reverse light switch
- 100 Distributor
- 101 Distributor connection
- 102 Resistor for ignition coil
- 103 Ignition coil
- 104 Bosch Electronic Ignition Unit
- 105 Engine compartment right lamp
- 106 Rear right light cluster