

Taboia 1 - Teste cilindri
Table 1 - Cylinder heads

Tableau 1 - Culasses
Tafel 1 - Zylinder Köpfe

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	5 405 833	Cylinder head cover	2
2	5 407 623	Engine lifting stand	3
3	4 405 625	Bolt Ø 12x 1.5 x 12 for head water pipe	6
4	4 405 864	Gasket Ø 12 x 18 x 1 for heads water pipe	10
5	5 405 834	Head cover gasket	2
6	5 405 608	Set screw Ø 10 x 18 between head and intake manifold	4
7	5 405 914	Rubber Ø 37.77x43.01x2.62 between head and intake manifold	6
8	5 405 619	Set screw for head oil calibration	4
9	ZD 9525 900	Nut Ø 5 x 0.8 x 4 fixing support for spark plug cables	4
10	92 33 400	Washer Ø 5 x 8 fixing support for spark plug cables	4
11	ZD 9290 200 U	Washer Ø 5x 12 for the same	4
12	5 405 862	Nut 7 x 1 h. 28 fastening of head cover and clamp seal and spark plug cables	4
13	5 405 865	Stop ring for head cover fixing nut	10
14	5 405 863	Head cover fixing nut	4
15	5 405 610	Cylinder head fixing bolt Ø 12 x 1.5 x 105	14
16	5 405 611	Cylinder head fixing bolt Ø 12x 1.5 x 105	14
17	5 405 612	Washer Ø 12.5 x Ø 2x 3 for cylinder head bolt	10
18	5 405 613	Stud Ø 7 x 1 x 78 fixing head cover	2
19	5 405 621	Rubber on the head	8
20	5 405 624	Plug Ø 14 x 1.5 x 14 for oil hole on the head	4
21	5 405 620	Gasket Ø 14.5 x Ø 2 x 1 for oil hole on the head	4
22	5 405 618	Gasket for flange and cylinder-head water-outlet manifold	2
23	5 405 616	Cylinder-head water-pipe flange	4
24	ZD 9236 300 W	Washer Ø 6x12x 1.5 for the same	4
25	ZD 9368 300 W	Bolt Ø 6 x 1 x 20 closing cylinder-head water passages	4
26	5 405 719	Nut Ø 8x1.5x6.5 fixing camshaft caps	24
27	ZD 9254 100 U	Flat washer Ø 8.4 x 17 x 2 for camshaft-cap nuts	24
28	5 405 615	Stud Ø 8 x 1.5 x 50 securing camshaft caps	24
29	5 405 609	Set screw Ø 10 x 6 for camshaft caps	24
30	5 405 724	Stud Ø 7x 1 x 23 for head cover	8
31	5 405 721	Side cap for camshaft	8
32	5 405 720	Central cap for camshaft	4
33	5 405 614	Stud Ø 8 x 1.5 x 32 fixing exhaust manifolds	12
34	5 405 727	Intake valve guide	6
35	5 405 732	Seat for intake valve	6
36	5 405 733	Seat for exhaust valve	6
37	5 405 731	Guide for exhaust valve	6
38	5 423 387	Complete cylinder head	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A
(206) 455-4449

Tavola 2 - Blocco motore
Table 2 - Engine housing

Tableau 2 - Bloc moteur
Tafel 2 - Motorgehäuse

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	ML 77699	Oil pump flange, PP	1
2	TN 67205	Cap Ø 12x1 5x 12 closing on the oil duct cover front	1
3	MB 77705	Cap for oil pressure probe on the cover	1
3	1145030 MB 79825	Fitting for oil pressure switch on cover for right-hand drive	1
4	MB 79000	Spacer for oil sump (from engine no. 500.033 onwards)	1
5	MB 78373	Oil introduction extension into the crankcase	1
6	MB 72732	Estee cylinder barrel	4
6	MB 72733	Internal cylinder liner	2
7	5 432 180	Cylinder base complete with hammer	1
8	5 405 640	Crankshaft support	1
9	5 405 835	Oil sump	1
10	5 426 106	Complete front cover	1
11	ZD 9378 700 W	Bolt Ø 8 x 1.5 x 90 fixing the front cover to the base samento	2
12	ZD 9378 300 W	Bolt Ø 8 x 1.5 x 70 fixing the front cover to the base samento, for I or I--T, II or I	1
13	ZD 9376 900 W	Bolt Ø 8 x 1.5 x 25 fixing front and upper cover	14
14	5 405 830	Bolt-Ø 01.28% 110 Fitting the oil flange to the cover front	1
15	5 405 827	Rubber Ø 5 x 2.62 for flange and oil pump	2
16	ZD 9377 900 W	Bolt Ø 8 x 1.5 x 50 fix. front cover and oil flange	5
17	ZD 9433 100 W	Bolt Ø 8 x 1.5 x 12 to close the cover water holes front	2
18	5 405 706	Gasket Ø 82x16 x 1.5 for the same	2
19	5 426 100	Engine oil blower body	1
20	5 426 107	Blowing gasket	2
21	5 426 102	Diaphragm for blower	1
22	ZD 9369 800 W	Bolt Ø 7 x 1 x 65 fastening the blower to the front cover	2
23	ZD 9248 200 W	Flat washer Ø 7.4x14x 1.5 for the same	2
24	ZD 9376 700 W	Bolt Ø 8 x 1.5 x 20 fix. front cover to the base	2
25	ZD 9254 100 U	Flat washer Ø 84x17 x2 for the same	36
26	5 405 822	gasket for arionto eo rie Complete with rubbers	1
27	5 437 648	Gasket between head and crankcase complete with rubbers	2
28	5 405 608	Set screw Ø 10 x 18 between base and front cover	6
29	5 406 167	Rubber Ø 9.75 x 36.87 x 3.53 between front cover base	1
30	5 405 619	Set screw for oil calibration in the crankcase	2
31	5 405 644	Stop for «RENOLD» chain tensioner	1
32	5 405 821	Gasket for water entry into the crankcase	2
33	5 405 650	Crankshaft support fixing stud	8
34	5 405 653	Set screw Ø 12x25 on the base for crankshaft support	8
35	5 425 908	Nut fixing crankshaft support and bulkhead	4
36	5 405 652	Washer Ø 12x24 x3 for the same	8
37	5 405 649	Head fixing stud	16
38	5 411 893	Set screw Ø 10 x 16 on the clutch side crankcase	2
39	ZC 9508 093 U	Stop ring for the same	2
40	5 401 604	Rubber Ø 4.47 x 8.03 x 1.78 between head and base	4
41	5 412 178	Engine oil filler cap	1
42	5 405 643	Plug Ø 4 x 1.5 for oil duct on the crankcase	1
43	5 405 641	Gasket Ø 4.5 x Ø 9.8 x 0.8 for the same	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
44	5 410 882	Dipstick for checking engine oil level (up to engine no mere 500.032)	1
44	1145030 ML 80562	Dipstick for checking engine oil level (from engine no ro 500.033 onwards)	1
45	5 406 199	Sheath for engine oil dipstick	1
46	5 426 105	Bundy tube on front cover. \	1
47	5 405 831	Pipe for draining oil from the blower	1
48	5 424 411	Oil pressure drain pipe seal ring	1
49	5 412 158	Rubber on the oil dipstick sheath	1
50	5 406 193	Oil dipstick sealing clamp	1
51	5 405 864	Gasket Ø 12.5x 18 x 1 for oil hole closing cap on the front cover	1
52	5 422 463	Gasket Ø 5.5x30x 1 for oil hole closing cap on the front cover	1
53	5 422 548	Gasket Ø 30.6 x 36.6 x 2.8 for oil drain plug from the cup, and, or, I - I °	1
54	5 405 832	Plug Ø 30 x 1.5 for draining oil from the sump	1
55	5 405 841	Front oil sump bulkhead	1
56	ZD 9365 800 U	Bolt Ø 5x0.8 x 10 fixing sump bulkhead	8
57	ZD 9231 200 W	Flat washer 5.3x 10x 0.8 per said	8
58	5 405 842	Rear bulkhead sump oo	1
59	ZD 9526 6600 U	Nut Ø 12 x 1.5 x 10 for fixing the support to the base	2
60	5 405 837	Oil sump gasket	2
61	ZD 9377 300 U	Bolt Ø 8 x 1.5 x 35 fixing oil sump to the crankcase	8
62	5 405 651	Nut Ø 12 x 1.5 x 24 fixing support to the base	2
63	5 432 186	Stud Ø 10 x 1.5 x 46 fixing starter motor	2
64	5 405 877	Right engine support	1
64	5 405 876	Left engine support	1
65	ZD 9238 900 U	Flat washer Ø 9 x 18 x 2.5 fixing support to the engine	6
66	5 405 906	Bolt Ø 9 x 1.5 x 30 fixing engine support	6
67	5 405 647	Gasket Ø 7.5 x 12 x 1 for oil cap on the crankcase	1
68	ZD 9371 700 W	Plug bolt Ø 7x1x10 for oil duct on the crankcase	1
69	5 405 642	Gasket Ø 6.3 x 1.2 x 1 for oil hole plug on the base	2
70	ZD 9367 900 W	Bolt Ø 6 x 1 x 12 on the crankcase for oil delivery hole to the head	2
71	5 406 192	Sleeve for prolonged introduction of oil into the crankcase	1
72	5 405 603	Rubber Ø 76 x 78.4 x 1.2 for cylinder barrel	6
*	122 MB 122 173	Engine gasket set	1

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.
(206) 455-4449

TELEX: 272048 MY UR

Tabella 3 - Organi mobili del motore
Table 3 - Moving parts

Tableau 3 - Organes mobiles du moteur
Tafel 3 - Triebwerksteile

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	5 439 775	Crankshaft with connecting rod	1
1	5 439 758 E	Crankshaft class = 10 complete with caps and gears Thu distribution command	1
1	5 439 759 R	Crankshaft class = 15 complete with caps and gears Thu distribution command	1
1	5 439 760 B	Crankshaft class = 25 complete with caps and gears Thu distribution command	1
1	5 439 761 M	Crankshaft class = 30 complete with caps and gears Thu distribution command	1
1	5 439 762 Y	Crankshaft class = 35 complete with caps and gears Thu distribution command	1
1	5 439 763 J	Crankshaft class = 40 complete with caps and gears Thu distribution command	1
1	5 439 764 V	Crankshaft class = 45 complete with caps and gears Thu distribution command	1
1	5 439 765 F	Crankshaft class = 50 complete with caps and gears Thu distribution command	1
1	5 439 766 S	Crankshaft class = 55 complete with caps and gears Thu distribution command	1
1	5 439 767 C	Crankshaft class = 60 complete with caps and gears Thu distribution command	1
1	5 439 768 N	Crankshaft class = 65 complete with caps and gears Thu distribution command	1
1	5 439 769 Z	Crankshaft each shaft = 70 complete with caps and gears Thu distribution command	1
1	5 439 770 K	Crankshaft class = 75 complete with caps and gears Thu distribution command	1
1	5 439 771 W	Crankshaft class = 80 complete with caps and gears Thu distribution command	1
1	5 439 772 G	Crankshaft class = 85 complete with caps and gears Thu distribution command	1
1	5 439 773 T	Crankshaft class = 80 complete with caps and gears Thu distribution command	1
1	5 439 774 D	Crankshaft class = 95 complete with caps and gears Thu distribution command	1
2	5 413 505	Complete connecting rod: class = 10	6
2	5 413 506	Complete connecting rod: class = 15	6
2	5 413 507	Complete connecting rod: class = 25	6
2	5 413 508	Complete connecting rod: class = 30	6
2	5 413 509	Complete connecting rod: class = 35	6
2	5 413 510	Complete connecting rod: class = 40	6
2	5 413 511	Complete connecting rod: class = 45	6
2	5 413 512	Complete connecting rod: class = 50	6
2	5 413 513	Complete connecting rod: class = 55	6
2	5 413 514	Complete connecting rod: class = 60	6
2	5 413 515	Complete connecting rod: class = 65	6
2	5 413 516	BleHa complete: class = 70	6
2	5 413 517	Complete connecting rod: class = 75	6
2	5 413 518	Complete connecting rod: class = 80	6
2	5 413 519	Complete connecting rod: class = 85	6
2	5 413 520	Complete connecting rod: class = 90	6
2	5 413 521	Complete connecting rod: class = 95	6
3	5 432 189	Piston for Ø 1.6 barrel complete with pin and segments tl (up to engine no. 040)	6

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
3	5	Piston for Ø 1.6 barrel complete with pin and segments tl (from engine no. 041 onwards)	6
3	5	Piston for Ø 1.8 barrel complete with pin and segments tl (up to engine no. 040)	6
3	5	Piston for Ø 1.8 barrel complete with pin and segments tl (from engine no. 041 onwards)	6
4	5 405 662	Piston pin (up to engine no. 040)	6
4	5	Piston pin (from engine no. 041 onwards)	6
5	5	Piston for barrel Ø 1.6 (up to engine n. 040)	6
5	5	Piston for barrel Ø 1.6 (from engine n. 041 onwards)	6
5	5	Piston for barrel Ø 1.8 (up to engine no. 040)	6
5	5	Piston for barrel Ø 1.8 (from engine n. 041 onwards)	6
6	5 432 193	Oil-control ring for barrel Ø 16	6
6	5	Oil-control ring for barrel Ø 1.8	6
7	5 432 192	Lower barrel segment @ 916	6
7	5	Lower segment for Ø 16 barrel	6
8	5 432 191	Upper segment for Ø 1.6 barrel	6
8	5	Upper segment for Ø 1.6 barrel	6
9	5 410 070	Connecting rod bolt	12
10	5 405 674	Nut for connecting rod bolt	12
11	5 405 667	Connecting rod bushing (1st)	12
11	5 405 668	Connecting rod bushing (2)	12
11	5 405 669	Connecting rod bushing (3)	12
12	5 405 676	Plug for crankshaft hole	6
13	5 422 549	Oil pump tow bar	1
14	5 405 681	timing control gear on the crankshaft	1
15	5 405 675	Seal ring Ø 10 x 120 x 12 on the crankshaft	1
16	5 405 678	Set screw Ø 10 x 15 between crankshaft and flywheel	1
17	5 405 679	Stop ring Ø 11.5x 1.5x2 for the same	1
18	ZC 9620 111 U	Bearing Ø 15 x 42 x 13 on the crankshaft	1
19	ZC 9620 501 U	Stop ring for the same	1
20	5 405 629	Main bearing (1)	8
20	5 405 630	Main bearing (2)	8
20	5 405 631	Main bearing (3)	8
21	5 405 632	Upper shim washer (1)	2
21	5 405 634	Upper shim washer (2) B	2
21	5 405 635	Upper shim washer (3) C	2
22	5 405 633	Lower shim washer (1)	2
22	5 405 636	Lower shim washer (2) BB	2
22	5 405 637	Lower shim washer (l) CC NO	2

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A
(206) 455-4449

YELEX: 173040 THOSE UR

Table 4 - Timing

Tafel 4 - Ventilsteuerung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	5 405 685	Central distribution control shaft complete	1
2	5 413 848	Complete exhaust side camshaft	2
3	5 413 847	Intake side camshaft	2
4	5 405 725	Cap for camshaft	8
5	5 422 304	Stop nut Ø 5 x 0.8 x 9.5 fixing the skate on the head	4
6	5 422 303	Gasket Ø 5.1x8.4x 1.3 for the same	4
7	5 422 302	Chain slider on the head	2
8	5 405 709	Chain tensioner bush fixing screw	2
9	5 405 693	Bush for chain tensioner sprocket	2
10	5 405 692	Complete chain tensioner sprocket	2
11	5 421 042	Pin Ø 8 x 1.5 x 35 fixing tensioner	4
12	5 405 684	Double upper chain	2
13	5 405 708	Bush on the tensioner support	2
14	5 421 108	Complete chain tensioner support	2
15	5 405 705	Rubber Ø 12.37 x 17.67 x 2.65 for chain tensioner on the head	2
16	5 405 707	Stop nut Ø 8 fixing the chain tensioner on the head	4
17	5 405 706	Gasket Ø 8.2 x 16 x 1.5 for chain tensioner on the head	4
18	5 405 689	Chain slider on the head cover	2
19	ZD 9464 00011	Screw Ø 5x0.8x 12 for the same	4
20	5 405 699	Screw Ø 6x 1 x 15 fixing the shoe on the base	4
21	ZD 9236 300 U	Washer Ø 6.5 x 12 x 1.5 for the same	4
22	5 405 690	Slider for chain on the base	2
23	5 423 424	Joint for distribution chain	2
24	5 405 698	Ring nut on the camshaft	4
25	5 405 697	Camshaft drive toothed ring nut	4
26	5 405 696		4
27	5 405 683	Lower double corona	1
28	5 405 710	Oil seal ring Ø 30 x 40 x 7 on the crankcase	2
29	ZD 9368 100 U	Bolt Ø 6x 1 x 16 fixing the skate to the base	2
30	ZD 9236 300 U	Washer Ø 6.5 x 12 x 1.5 for the same	2
31	5 405 686	Lower chain slider	1
32	5 405 266	Key for central distribution control shaft	1
33	5 405 714	Bolt Ø 1/4" x20 UNC 1"3/4 fixing chain tensioner to base	2
34	5 405 712	Bush for chain tensioner slider	1
35	5 426 216	«RENOLD» automatic chain tensioner slide	1
36	5 426 217	«RENOLD» chain tensioner	1
37			
38	5 405 726	Valve control cup	12
39	5 405 798	Valve clearance adjustment pad, pro numbering	
	5 405 818	progressive from 3 to 3.5 mm. with variation of 0.025 in 0025 mm	6
39	5 402 894	Valve clearance adjustment pad, pro numbering	
	5 402 913	progressive from 3.5 to 4 mm. with variation of 0.025 in 0025 mm	6
40	5 405 734	Valve cotters	24
41	5 434 450	Upper plate for valve spring	12
42	5 434 449	Valve spring	
43	5 432 608	Lower plate for LL valve spring	12
44	5 412 026	Oil seal for intake valve	6
45	5 405 729	LL exhaust valve	6
46	5 405 728	Intake valve	6
47	5 405 704	Cap for central distribution control shaft	1
48	5 422 844	Cap closing hole for chain tensioner housing	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
MASERATI INFORMATION EXCHANGE P. O. BOX 772 MERCER ISLAND, WASHINGTON 98040 U.S.A. (206) 455-4449			

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.
(206) 455-4449

~~TELEX: 272048 MINEI UN~~

Tabella 5 - Pompa olio e filtro
Table 5 - Oil pump and filter

Tableau 5 - Pompe à huile et filtre
Tafel 5 - Ölpumpe und filter

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 CS 77229	Radiator for engine oil cooling	1
2	MN 76991	Sleeve Ø 0 x 300 connecting intermediate pipes to the radiator	1
3	FRN 37827	bulb	2
4	RNT 67011	Clamp I Ø 5 x 35 fixing the sleeve to the intermediate pipes	4
5	BNT 47019	Flat washer @ 6 oil radiator fixing	4
6	122 CS 77051	Bolt Ø 6x 1x20 for the same	6
6	122 CS 79678	Upper intermediate pipe assembly for oil delivery to RA	1
7	122 CS 77050	dialator (mounted up to chassis no. 186)	1
7	122 CS 79677	Upper intermediate pipe assembly for oil delivery to RA	1
8	122 CS 77162	dialator (mounted from chassis no. 188 onwards)	1
9	122 CS 77163	Lower intermediate oil return pipe assembly from radiator	1
10	122 CS 77164	dialator (mounted up to chassis no. 186)	1
11	DNT 47047	Lower intermediate oil return pipe assembly from radiator	1
12	122 CS 77347	dialator (mounted from chassis no. 188 onwards)	1
13	122 CS 77346	Intermediate pipe support bracket assembly	3
14	114.5030 ML 78049	Intermediate pipe support bracket, ce	3
15	114.5030 MB 79001	felt insulation for bracket	3
16	5 423 094	Nut Ø 6x1 supporting tubes to the frame	3
17	5 406 243	Flexible pipe from engine to intermediate pipe	1
18	5 406 231	Flexible hose from engine to intermediate pipe	1
19	5 406 232	Complete oil filter	1
20	5 406 233	Suction pump oo	1
21	5 406 234	Sheathed pipe from the blower to the air filter	1
22	5 406 235	fixing cone other than oil pressure	1
23	5 406 241	Oil pressure adjustment valve body	1
24	5 406 228	Ball for oil pressure valve	1
25	5 406 217	Seat for oil pressure valve ball	1
26	5 406 216	Spring for oil pressure valve	1
27	5 406 921	Lower valve spring cup	1
28	5 406 222	Stop ring for oil pressure valve	1
29	5 406 218	Seal ring on the oil pump body	1
30	5 405 827	Oil pressure adjustment valve	1
31	5 405 609	Spring for oil pressure valve	1
32	ZD 9236 300 U	Washer Ø 8 x 14 x 2 on the pressure valve spring cap, oil	1
33	ZD 9368 100	Gasket Ø 2.5 x Ø 8 x 1 for oil pressure valve	1
34	5 406 167	Cap with guide pin	1
35	5 406 238	Rubber Ø 5 x 2.62 on the oil pump body	1
36	ZD 9254 100 U	Set screw Ø 10 x 6 for oil pump body	4
37	ZD 9377 300 U	Tooth washer, internal QD 6 fixings oil pump suction tube	2
38	5 406 240	Bolt Ø 6x 1 x 16 fixing oil pump suction tube	2
39	5 406 203	Rubber Ø 30x36 x 3 for oil suction	1
40	ZD 9377 900 W	Complete oil pump body	1
41	5 406 204	Washer Ø 8.4 x 17 x 2 fixing oil pump to the support	3
42	5 406 205	front engine	3
43	5 425 912	Bolt Ø 8 x 1.5 x 35 fixing oil pump body	1
44	5 406 239	Drain pipe on the oil pump body	1
45	5 406 223	oil pump driven gear	1
46	ZD 9345 100 U	Bolt Ø 8x 1.25 fixing oil pump body	1
		oil pump driving gear	1
		Rubber Ø 86.64 x 1.78 for oil pump cover	1
		Upper oil suction bulkhead	1
		Oil pump cover complete with bushing	1
		Washer Ø 7.4 x 14 x 2 fixing oil pump cover	4
		Bolt Ø 7 x 1 x 18 fixing oil pump cover	4

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
47	5 425 909	Rubber spacer for suction bulkhead	4
48	ZD 9236 300 U	Flat washer Ø 6.4 x 1.5 x 12 for fixing the suction bulkhead	4
49	5 425 910	Bolt Ø 6x1 x 15 fixing the suction bulkhead	4
50	5 436 644	Thread @ 250 for fixing the suction bulkhead	1
51	5 408 838	Flame extinguisher net for blowing	1
52	ZD 9614 039 U	Blown hose clamp	1
53	5 423 093	Plastic tube for blower tube	1
		<i>Oil Fil</i> filter+t	
		lb E-253	
		UFI Ø 3/02.00	
		PA FT 403	
		FRIAPA PS	
		<i>Air</i>	

Tabella 6 - Raffreddamento del motore
Table 6 - Engine cooling

Tableau 6 - Refroidissement du moteur
Tafel 6 - Motorkühlung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	BNT 47014	Bolt Ø 8 x 1.5 x 45 for anti-vibration support	2
2	RN 76734	Washer Ø 8.5 x 40.2 for anti-vibrator support	2
3	RNT 55379	Washer Ø 8 x 18 x 2 for anti-vibrator support	2
4	DST 53397	Nut Ø 8 x 1.5 x 10 for anti-vibration support bolt	2
5	FRN 37832	Clamp fixing the rubber sleeve on the intermediate pipes	12
6	FRN 66995	Clamp Ø 7x 11 fixing the sleeve to the copper pipe	4
7	MN 65943/1050	Sleeve Ø 6 x 12 x 1050 from the radiator to the copper pipe	2
8	122 CR 76168	Rubber sleeve from the radiator to the water delivery pipe to engine (dex)	1
9	PFN 59963	Grommet Ø 6 x 10 x 14 for radiator exhaust pipe	1
10	122 CR 77092	Right water return pipe from the radiator	1
11	MIN 57231/0090	Sleeve Ø 40x49 between the water delivery and return pipes radiator	1
12	FRN 44674	Copper pipe fixing clamp	3
13	VAT 49513	Self-tapping screw Ø 3.58 for the same	3
14	TRN 73689	Copper pipe Ø 6 x 3200 from the radiator to the tank, of exhaust	2
15	RNT 67011	Flat washer @ 6 support fixing or 	6
16	RDI 32690	Serrated washer @ 6 support fastening	6
17	DNT 47047	Nut Ø 6x1 fixing fan support tube n. 189	6
18	122 CR 76165	Water return pipe from the radiator (up to car no. 186)	1
19	122 CR 79692	Water return pipe from the radiator (from vehicle no. 188 onwards)	1
20	DNT 47046	Nut Ø 5x0.8 fixing the clamp	1
21	RNT 35345	Flat washer @ 5 for the same water door to the radiator	1
22	FRN 64861	Clamp fastening the water loading pipe to the radiator	1
23	122 CR 76242	Rubber hose for loading water to the radiator	1
24	MN 65943/900	Sleeve Ø 6 x 12 x 900 connection to supplementary tank	1
25	DNT 47031	Nut Ø 8 x 1.5 x 6.5 fixing additional tank	2
26	RNT 55379	Flat washer Ø 8x 1.25% 16 fixing additional tank	2
27	FRN 64861	Water radiator filling hose fixing clamp	2
28	TPN 56118	Plastic pipe Ø 7 x 12 x 800 for venting extra tank	1
29	122 CR 76169	Water inlet outlet sleeve from the engine to the internal pipes	2
30	MIN 65943/800	Sleeve Ø 6 x 12 x 800 connecting copper pipe to the ser additional bathtub	1
31	122 CR 77168	Felt under the water pipe support bracket	4
32	122 CR 77170	Water pipe support bracket	4
33	122 CR 77169	Water pipe support bracket assembly	4
34	DST 68045	Bracket fixing nut Ø 6x1	4
35	122 CR 76164	Water delivery pipe to the radiator (up to the 186th car)	1
36	122 CR 79691	Water delivery pipe to the radiator (from the 188th car onwards)	1
37	122 CR 77091	Water delivery pipe to the left radiator	1
38	122 CR 76166	Sleeve connecting water delivery pipe to the radiator (Bin)	1
39	5 406 284	Silentbloc for water radiator	2
40	122 CR 76163	TP water radiator, «CHAUSSEON» complete with motor conveyor and fans	1
41	122 BR 77190	TP water radiator, «CHAUSSEON» complete, for vehicle with air conditioning	1
42	5 414 714	Fan motor retainer and washer	2
43	5 406 309	water diator	2
44	5 414 713	10-blade fan for fan motor	2
45	5 414 712	Seal gasket on the support	2
46	5 414 712	Bolt Ø 6 x 25 for support	6
47	5 415 427	Support for fan motor	2
48		Fan motor	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
45	5 406 272	Supplementary tank, for loading water into the tank	1
46	5 412 346	Closing cap for additional tank	1
47	5 406 262	Water pump cover	1
48	5 406 268	Rubber Ø 123.4x130.46x3.53 on the water pump cover	1
49	5 406 263	Water pump impeller fixing nut	1
50	5 406 264	Safety washer for water pump impeller	1
51	5 406 265	Washer Ø 12.5 x Ø 4 x 25 for pom impeller fixing nut pa water	1
52	5 406 266	tab Ø 3x5 for water pump impeller	1
53	5 406 261	Water pump impeller	1
54	5 406 267	Seal ring Ø 2 x 42.84 x 49 x 12.85 on the pom body pa water	1
55	5 406 287	Fitting Ø 5 x 0.8 x 20 on the thermostatic valve cover	1
56	5 406 288	Thermostat retaining cover	1
57	ZD 9346 400 W	Bolt Ø 7 x 1 x 22 fixing thermostat cover	2
58	ZD 9248 200 W	Flat washer Ø 7.4x14x1.5 for the same	2
59	5 406 285	Thermostat, 2	1
60	5 406 286	Rubber Ø 58.42 x 63.7 x 2.12 for 'ter retaining cover must	1
61	5 406 303	Head water outlet manifold	1
62	5 405 618	Seal for the same	2
63	ZD 9368 300 W	Bolt Ø 6 x 1 x 20 fixing flange closing water holes heads	4
64	614 039	Water pump sleeve fixing clamp	2
65	5 406 304	Sleeve Ø 35 x 43 x 55 of the water outlet pipe from the heads to the pump	1
66	241 117	Manifold side support	2
67	5 402 247	Brush holder with brush 2	2
68	5 402 248	Series of pieces	2
69	5 402 245	induced	2
70	5 402 246	Command side support	2
71	5 414 714	Series of pieces	2
72	5 406 313	Sheath for fan motor	2
73	ZD 9378 700 W	Bolt Ø 8 x 1.5 x 90 fixing water pump cover	2
74	114 5030 ML 80023	Diaphragm on the crankcase water inlet pipe	1

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.
(206) 455-4449

favola 7 - Equipaggiamento elettrico
Table 7 - Electrical equipment

Tableau 7 - Equipement électrique
Tafel 7 - Elektrische Ausrüstung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	107/2 ME 66199	Cardboard with spring for distributor cap	2
2	RDI 55690	Serrated washer Ø 8.5 for distributor fixing	1
3	DNT 47024	Nut Ø 10 x 1.5 x 8 for fixing the starter motor	2
4	107 ME 60013	Alternator shielding capacitor	1
5	5 406 186	3-way bracket for fixing high voltage cables	3
6	5 406 187	2-way bracket for fixing high voltage cables	1
7	5 412 344	Connection plate for high voltage cables	1
8	5 412 977	Ignition coil. 2	2
9	5 418 110	Spark plug cap	6
10	5 417 768	Spark plug BOSCH W 175 T30	6
11	5 406 166	Stop ring Ø 31 x 32.6 for pinion	1
12	5 406 169	Drive pinion	1
13	5 406 165	Elastic pin Ø 5x30	1
14	5 406 167	Rubber Ø 9.75 x 36.87 x 3.53 on the distributor	1
15	122 ME 81029	Capacitor support o	1
16	5 403 133	Capacitor	2
17	5 416 250	Box with breaker 0.2	1
18	5 413 631	Rotating brush	1
19	5 413 632	Cap for solenoid	1
20	5 425 892	Distributor fixing bracket	1
21	ZD 9254 100 U	Flat washer Ø 8.5 x 15 x 2 distributor fixing	1
22	ZD 9376 900 W	Ø 8 x 1.5 x 25 distributor fixing bolt	1
23	5 430 189	Complete distributor	1
24	5 419 925	Wire harness for spark plugs, distributor and coil	1
25	S 532 112	Refer to the parts for assembling the pulley 1	1
26	5 407 214	"Gates polyflex 7 M 775" driving belt	1
27	S 532 134 A	Cast iron fulcrum with nn na	1
28	S 532 180 A	Sheet metal fan	1
29	5 407 215	Steel spacer	1
30	S 532 135 A	Command side support	1
31	ZC 9620 103 U	Ball bearing Ø 17 x 40 x 12	1
32	5 407 217	Shutdown	1
33	5 420 669	Stator	1
34	5 420 668	Rotor	1
35	ZC 9620 316 U	Ball bearing Ø 12x 32x10	1
36	S 532 141 A	Bearing cage seal	1
37	S 532 147 A	Bushing side support	1
38	GX 11 156 01 A	Support cap	1
39	5 420 672	Complete diode holder	1
40	S 532 161 A	Set of connecting screws	1
41	S 532 109 A	Brush holder support	1
42	S 532 165 A	Shock absorbing bracket	1
43	S 532 114 A	Series of parts for fixing the cover	1
44	S 532 148 A	Alternator + A 18116" 14 TOA. (SA)	1
45	5 413 882	Support bushing	1
46	5 419 459	Solenoid cap	1
47	5 419 455	Fork pin	1
48	5 419 460	Command side support	1
49	5 419 476	Complete solenoid	1
50	5 419 472	Set of tie rods	1
51	5 419 477	Set of coupling stop pieces	1
52	5 419 456	starter clutch. LL.	1
53	5 419 468	Set of fork parts	1
54	5 419 465		

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
55	5 419 464	Set of parts for solenoid adjustment	1
56	5 419 469	Intermediate support	1
57	5 419 470	Set of sealing parts	1
58	5 419 457	Set of tie rods for solenoid	1
59	5 419 466	complete armature	1
60	5 419 462	Shock absorber pad	1
61	5 419 461	Connection for inductor	1
62	5 407 221	Motor screen No	1
63	5 419 475	Inductor series. 2	1
64	5 423 371	Series of brushes with springs	1
65	5 419 467	Manifold side support	1
66	5 419 474	Series of clutch parts	1
66	5 424 688	Set of clutch parts	1
67	5 419 473	Stand cover	1
68	5 407 223	Starter motor «6211 A»	1
69	ZD 9260 200 U	Washer Ø 10.5x22x2.5 for the same	2
70	HY 535 1 A	Alternator regulator	1
A. } AN 1 AA dA PÒ Ap			
Listed in Masenti A 13 RES. (PBI)			
/ {> MU E p2-1'tv 7 Ap			
(MOD eten"			
N utt 466			
MASERATI INFORMATION EXCHANGE			
P. O. BOX 772			
MERCER ISLAND, WASHINGTON 98040 U.S.A			
(206) 455-4449			

Tabella 8 - Collettore e filtro aria
Table 8 - Air intake manifold and filter

Tableau 8 - Tuyau d'aspiration et filtre a air
Tafel 8 - Saugrohr und Luftfilter

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	107 03 MC 72824	Knob for air filter on carburetors	4
2	114 5030 MC 78333	Air filter cartridge	1
3	114 5A MC 78357	Complete air filter	1
4	DNT 47046	Nut Ø 5x0.8x4 fixing body and spherical pin	1
5	C114/1 MC 66905	Body and ball stud assembly	2
6	117 FC 78408	Complete carburetor control cable	1
7	BNT 50460	Bolt Ø 6 x 1 x 35 fixing car control cable support	2
8	RNT 67011	buratori	2
9	122 MC 76204	Fiat washer Ø 64x13x 1.5 for the same	2
10	BNT 50309	Accelerator control sheath stop	1
11	BNT 47475	Bolt Ø 5x 0.8 x 8 accelerator sheath retainer	1
12	RNT 74163	Bolt Ø 8 x 1.5 x 30 fixing intake manifold	2
13	RNT 47047	Fiat washer Ø 8.4x17x2 for the same	6
14	RAT 45679	Nut Ø 6x 1x 15 on the threaded rod	6
15	RNT 69021	Wavy washer Ø 6.4x 11x05 for the same	6
16	DN 66854	Fiat washer Ø 5.3x 10x 0.8 for car control lever	6
17	RN 51581	burato i e e e e. or - or - or	12
18	BNT 66845	Nut Ø 8x 1.5 x 6.5 for fixing carburetors	12
19	114/2 MT 75807	Washer Ø 8x14x2 for the same	1
20	114/MT 161	Bolt Ø 8 x 1.5 x 65 fixing intake manifold	1
21	BNT 67443	Intake manifold	1
22	GN 32001	Intake manifold complete with studs	6
23	107/3 MC 65829	Bolt Ø 8x 1.5 x 12 for manifold boss closure	6
24	NPL 48847	Gasket Ø 82x16 x 1.5 for the same	1
25	FGN 57260	Nipples for starter control cable	1
26	5 405 928	Nipples for starter control sheath	1
27	5 405 923	Steel wire Ø 1.2 x 30 for starter control	2
28	5 405 969	Body for corner joint	2
29	5 405 939	Threaded spherical pin	2
30	5 405 932	Stopper for corner joint	3
31	5 405 947	Lever on the carburetor	1
32	5 405 918	Split pin Ø 1.3x 10 for the same	1
33	5 401 680	Lever on the central carburetor	12
34	122 BV 80553	Connecting rod for carburetors	1
35	5 405 006	Stud Ø 8x 1.5 x 37 for carburettor fixing	1
36	5 405 008	Cicetto starter control complete with plug and cable	1
37	5 405 007	Solenoid valve for distributor control depression	2
38	RMN-79500	Canister for doping pressure on distributor control and starter	1
39	BNT 61985	fairly or	1
40	DNT 62557	Fixing clamp for vacuum tank	1
41	RNT 54507	Rubber collar for vacuum tank	1
42	MN 79509	Three-way fitting for connecting vacuum pipes	1
43	MN 64444	Bolt Ø 4x0.7x 12 fixing the cylinder clamp	1
44	MN 79509	pressure 2	1
45	MN 79509	Nut Ø 4x0.7x32 for the same	1
		Washer Ø 4.3x9x0.8 for the same	1
		Sleeve Ø 3.5 x 6.5 from the intake manifold to the boom	1
		bola empty em. 60	1
		Maincotto Ø 8x 14 between solenoid valve and hand fittings	2
		nicotto en 5	1
		Sleeve Ø 3.5 6.5 from the empty cylinder to fitting three	1
		vie cem tf	1
		Sleeve Ø 3.5 x 6.5 from the solenoid valve connection to the spin	1
		terogen cm. Ø 0	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
46	122 BM 79757	Left carburetor air intake box	1
46	122 BM 79758	Right carburetor air intake box	1
47	TFC 79191	Flexible cardboard tube for air delivery to the carburetors L =	2
		= IIII PP PP I I e = eu "Pu E Cr NS NE CRE NED NP E EB Ep	
			
		FRAM C-136€ (nd)	
MASERATI INFORMATION EXCHANGE P. O. BOX 772 MERCER ISLAND, WASHINGTON 98040 U.S.A (206) 455-4449			

Tabella 9 - Carburatore
Table 9 - Carburetor

Tableau 9 - Carburateur
Tafel 9 - Vergaser

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	114 50 30 MC 78346	Complete 42 DCNF 31 external carburettor	2
1	114 50 30 MC 79276	Central carburettor 42 DCNF 32 complete or	1
2	107/2 MC 69673	Carburettor cover	3
3	107/3 MC 69674	Carburettor cover gasket	3
4*	107/3 MC 69719	Centering device	6
5*	107/3 MC 69718	Diffuser	6
6*	107/3 MC 69720	Starter jet	6
7*	107/3 MC 69687	Pump delivery valve	3
8*	107/3 MC 69688	Pump jet	3
9	GN 58330	Seal for pump jet	3
10	107/3 MC 69721	Circclip for starter bush	6
11	107/3 MC 69722	Starter spring guide bush	6
12	107/3 MC 69723	Spring for starter valve	6
13*	107/3 MC 69724	Starter valve	6
14*	107/3 MC 69680	Brake air jet	6
15*	107/3 MC 69686	Emulsifier tube	6
16*	107/3 MC 69689	Main jet	6
17	VNT 69735	Carburetor cover fixing screw	12
18	107/3 MC 69731	Filter element, LL	3
19	107/3 MC 69730	Cap for filter element	3
20	GN 36072	Gasket for filter cap	3
21	107/3 MC 69727	Filter inspection cap	3
22	GN 69678	Needle valve seal	3
23	107/3 MC 69679	Needle valve	3
24	107/3 MC 69684	Floating	3
25	SN 69677	Floating fulcrum pin	3
26	VNT 64700	Pump cover fixing screw	12
27	RSN 33189	Split washer QD 4 for the same	12
28	107/3 MC 69683	Complete pump cover	3
29	107/3 MC 69701	Pump diaphragm	3
30	107/3 MC 69700	Pump loading spring	3
31	107/3 MC 69717	Complete starter cover	3
32	BNT 57199	Wire stop screw, 2	3
33	33 107/3 MC 69682	Leverage	3
34	107/3 MC 69681	Complete square lever	3
35	107/3 MC 69676	Bushing for bellcrank 0.0. LN	3
36	VNT 60788	Bell crank fulcrum screw	3
37	107/3 MC 71181	Air adjustment screw	6
38	DNT 47046	Nut for air adjustment screw	6
39	107/3 MC 68363	Filter screen 2	3
40	107/3 MC 69716	Throttle adjustment screw	3
41	101 MC 50352	Spring for throttle and mixture adjustment screw	9
42	107/3 MC 69715	Bush for throttle adjustment screw	3
43	115/A MC 74747	Idle mixture adjustment screw	6
44	DNT 32484	Shaft fixing nut	6
45	101 MC 52224	Safety escutcheon	6
46	107/3 MC 69690	Idle jet	6
47	GN 69691	Gasket for minimum jet holder	6
48	107/3 MC 69675	Minimum nozzle holder	6
49	RN 69704	Shaving gosette	3
50		Pump control barrel, yes,	3
51	RN 69738	Clearance washer	3
52	RAT 69711	Clutch washer	6
53	107/3 MC 69709	Bearing presser cup	6

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
54	CSC 50855	Ball bearing	6
55	107/3 MC 69706	Main shaft	3
56	107/3 MC 69707	Butterfly valve, CL	6
57	VNT 48796	Throttle fixing screw e.,	12
58	107/3 MC 69710	Spacer bushing	6
59	107/3 MC 69712	Throttle control lever return spring	3
60	107/3 MC 69713	Throttle control lever	3
61	5 405 994	Trumpet air intake	3
62	5 405 977	Gasket between carburettor and air filter box	6
63	ZD 9525 900 W	Nut Ø 5x0.8 fixing trumpet air intake	12
64	ZD 9233 300 U	Split washer Ø 5 for trumpet fixing	12
65	ZD 9231 200 W	Flat washer D 5 for trumpet fixing	12
66	5 405 975	Stud fastening trumpet to carburettor	12
67	5 405 978	Seal ring between trumpet and carburettor body	6
68	5 405 864	Fitting gasket	3
69	5 423 866	Fitting for connecting petrol inlet pipe to the carburetor	3
70	5 405 931	Intermediate gasket for carburetor	3
71	5 405 959	Carburetor gasket	6
		(In the request for details marked with * indicates calibration). I	e la
		or	
		Na >IXN	
		to,	
		ET IN KE	
		And CD	
		or fails	
		(MI	
		E	
		N Tm	

44 DCNF

0.001

2.1
1.10
N Tm

Tableau 10 - Embrayage
Tafel 10 - Kupplung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	RNT 47210	Washer Ø 7 x 14 for bracket fixing bolt	1
2	TVN 47035/O. 100	Plastic tube Ø 18 x 0.100 on the clutch lever return spring "tion_oLi_n" a" Li.e.-lor	1
3	TPN 73446/O. 350	Plastic pipe Ø 4 x 5.7 x 350 for draining oil from secondary pump	1
4	CN 32502	Cotter pin Ø 2 x 25 for dust seal on the fork with I send clutch	1
5	CN 32723	Cotter pin Ø 4 x 45 holding clutch fork	1
6	RDI 32635	Serrated washer Ø 8 for clutch assembly fixing	6
7	RNT 55379	Flat Vorcella Ø 8 for overall tightening of the clutch	6
8	MN 76138	Engine flywheel complete with crown	1
9	ZD 9345.030.XW	Bolt Ø 7x 16 for crankcase bracket	1
10	5 411 223	Bracket for spring on crankcase	1
11	5 416 824	Dust cap	1
12	5 407 030	Bleed screw	1
13	ZD 371 900 U	Bolt Ø 7 x 20 fixing secondary clutch pump	1
14	ZD 9503 700 U	Rubber Ø 18.4 x Ø 3.8 x 2.7 for secondary clutch master cylinder	1
15	5 416 821	Stop ring nut for secondary clutch master cylinder	1
16	5 405 105	Protective cap for secondary clutch master cylinder	1
17	5 4063 34	Return spring	1
18	5 416 823	Secondary clutch pump push rod	1
19	5 411 224	Bracket for return spring	1
20	5 406 354	Adjustment screw	1
21	5 417 794	Rubber dust cover on the clutch control fork	1
22	5 411 219	Clutch control fork	1
23	5 411 221	Articulating ball for fork	1
24	ZC 9621 360 W	Hexagon socket screw Ø 7x1 x 25 fixing the patella to the the articulation	1
25	5 411 213	Ball thrust bearing 0.2	1
26	5 411 216	Return spring	1
27	5 406 315	Clutch assembly (up to Ø77 engine)	1
27	122 TF 79715	Clutch assembly (from engine 0.78 onwards - April '73)	1
28	ZD 9379 500 W	Bolt Ø 8 x 1.5 x 20 clutch assembly fixing	6
29	5 406 316	Clutch disc «FERODO»	1
30	5 405 677	Bolt Ø 12 x 1.5 x 25 fixing engine flywheel	1
31	9617 091 U	Centering dowel for clutch assembly	1
32	5 407 219	Starter crown	1
33	5 409 640	Clutch control pump on the bell housing complete	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
MASERATI INFORMATION EXCHANGE P. O. BOX 772 MERCER ISLAND, WASHINGTON 98040 U.S.A (206) 455-4449			

Tavola 11 - Scatola cambio
Table 11 - Transmission housing

Tableau 11 - Boite de vitesse
Tafel 11 - Getriebe Gehäuse

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	TC 122 237	Complete bell housing gearbox: R = 8/35	1
1	TC 122 238	Complete bell housing gearbox: R = 7/34	1
2	122 TC 122 046	Gearbox and clutch bell	1
3	122 TC 75694	Rear gearbox casing	1
4	RAT 47078	Wavy washer @ 7 for fixing the support half collar	4
		rear gearbox	4
5	122 TC 78518	Rear crankcase cover assembly	1
6	122 TC 78470	Oil delivery plate at 5th gear	1
7	CHN 34021	Nail Ø 3x 10 for the same. I	2
8	ZD 9345 700 W	Bolt Ø 9 x 35 fixing the clutch bell to the base	4
9	5 411 375	Nut Ø 12x 1.75 fastening gearbox to bellhousing	4
		clutch 2	4
10	5 411 374	Washer Ø 12x 18 x 2.5 for the same	4
11	ZD 9616 023 U	Stud Ø 12x74 fastening gearbox to cam	2
		clutch pan 0.2	2
12	5 406 361	Rubber cap @ 25 on the clutch bell	1
13	5 411 381	Seal for semi-axle support	2
14	5 411 392	Gearbox breather	1
15	ZD 9372 000 W	Bolt Ø 7 x 1 x 25 fixing axle shaft support	12
16	5 412 197	Right semi-axle support	1
17	ZD 9383 800 W	Bolt Ø 9 x 1.5 x 75 fixing axle shaft support	2
18	ZD 9345 230 W	Bolt Ø 7 x 1 x 70 fixing axle shaft support	2
19	ZD 9382 700 U	Bolt Ø 9 x 1.5 x 30 fixing half-shaft support	15
20	5 413 095	Set screw Ø 7.6 x 10 x 16.5 upper cover centering	4
21	ZD 9383 100 W	Bolt Ø 9 x 1.5 x 40 fixing gearbox to cam	3
		gullone grizzone, 28 upper cover fixing o	4
22	ZD 9372 100 W	Bolt Ø 7 x 1 x 28 fixing upper cover	3
23	ZD 9345 900 W	Bolt Ø 7x1 x 35 fixing upper cover	3
24	ZD 9372 500 W	Bolt Ø 7 x 1 x 50 fixing upper cover	3
25	A 132 1	Plug Ø 16 x 1.5 for introducing and draining oil from the drain	2
		gearbox	3
26	ZD 9247 800 U	Gasket Ø 16.3 x Ø 2x 1 per said	1
27	5 406 363	Upper box cover with cap	2
28	5 411 380	Column screw Ø 7 x 1 x 85.5 fix. lid with cap	1
29	5 405 892	Semicollar for rear gearbox support	5
30	ZD 9372 200 W	Bolt Ø 7x1 x40 fixing rear cover	2
31	ZD 9373 200 W	Bolt Ø 7x 1x95 fixing rear cover	2
32	ZD 9383 700 W	Bolt Ø 9 x 1.5 x 70 fixing bell to base	2
33	ZD 9383 400 W	Bolt Ø 9 x 1.5 x 50 fixings, clutch bell at the base	2
34	5 412 196	Left semi-axle support	1
35	5 412 214	Plastic tube Ø 5x7 x 185 on the semi-axle support	2
36	ZC 9613 007 U	Pressure cap @ 12 on the gearbox	2
37	9616 065 U	Stud Ø 12 x 92 fastening gearbox to cam	2
		clutch pan. I - or "I"	4
38	ZD 9372 800 W	Bolt @ Tx 1 x 65 fixing gearbox to bellhousing	1
		clutch, or" If and " or, I know or I	4
39	5 411 384	Magnetic gearbox oil drain plug Ø 16 x 1.5	1
40	ZD 9372 800 W	Bolt Ø 7 x 1 x 38 fixing bell housing to gearbox	2
41	ZD 9372 400	Bolt Ø 7x 1 x 45 fixing gearbox to bellhousing	1
		clutch	1
42	ZD 9241 700 U	Gasket Ø 9.2 x 14 x 2 for oil level control cap	1
43	ZD 9382 100 W	Plug Ø 9 x 1.5 x 16 for oil level check	1
44	5 412 308	Pipe Ø 8x88.5 on the rear crankcase	1
45	ZD 9382 500 U	Bolt Ø 9 x 1.5 x 25 fixing rear crankcase or	3

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
46	ZD 9383 600 W	Bullone Ø 9 x 1,25 x 65 fissaggio coperchio per carter post.	1
47	5 413 599	Bullone Ø 7 x 31 centraggio coperchio posteriore	3
48	ZD 9248 200 U	o o Top cover cover	4
	122 TC 75916	Differential bell gearbox assembly complete with brakes	1
M.L.E. CORP WORLD'S LARGEST VINTAGE MASERATI SALES, RESTORATION & PARTS P.O. Box 772 Mercer Island, Washington 98040 Tel 206 - 455 4449 FAX 206 - 646-5458			

Tableau 12 - Engrenages de la boîte
Tafel 12 - Getriebe Innenteile

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
35	5 411 443	Adjustment washer for differential pinion Ø 36x58 x2.46	1
35	5 411 444	Adjustment washers for differential pinion Ø 36 x SE x2.40	1
35	5 411 445	Adjustment washer for QI differential pinion 36x58 x2.53	1
35	5 411 446	Adjustment washer for differential pinion Ø 36 x56x2.57	1
35	5 411 447	Adjustment washer for differential pinion Ø 38 x SB x 2.61	1
35	5 411 448	Adjustment washer for differential pinion Ø 38x58 x265	1
35	5 411 449	Adjustment washer for differential pinion Ø 36x58 x2.60	1
35	5 411 450	Adjustment washer for differential pinion Ø 38x SBx2.73	1
35	5 411 451	Adjustment washer for differential pinion Ø 38x58 x2.77	1
35	5 411 452	Adjustment washer for differential pinion Ø 36x58x281	1
35	5 411 453	Adjustment washer for differential pinion Ø 38x58 x 265	1
35	5 411 454	Adjustment washer for differential pinion Ø 38x58 x280	1
35	5 411 455	Adjustment washer for differential pinion Ø 38x58x2.99	1
35	5 411 456	Adjustment washer for differential pinion Ø 36x38 x 287	1
35	5 411 457	Adjustment washer for differential pinion Ø 36 x SEX 3.01	1
35	5 411 458	Adjustment washer for differential pinion Ø 36x SBx 3.05	1
35	5 411 459	Adjustment washer for differential pinion Ø 38x38 x 3.09	1
35	5 411 460	Adjustment washer for differential pinion Ø 36x58 x 3.13 Ø	1
36	5 411 413	Intermediate train, gear/driven >> and # speed Z = 2 + Z = 3	1
37	9620 333 U	Double oblique contact bearing Ø 30 x 78 x 82.56 x 30.40 On the	1
38	5 406 376	INPUT TO DIFFERENTIAL SHAFT	1
38		Input conductor Ø for 5 speed Z = 28 (mount up to vehicle N. A)	1
39	5 411 679	Input conducted for 8" speed. Z = 37 (mounted by car N	1
40	5 411 680	Cup for pinion guide, mile counter	1
41	9924 400 W	Km counting pinion guide LL LL LEL	1
42	5 406 463	Nut Ø 10 x 1.25 for Km counting pinion thrust bearing	1
43	5 411 416	Thrust bearing Ø 10 x 1.90 for Km counting pinion	1
44	5 411 398	Ingranaggio, reverse 2 n anscolo reverse gear POST	1
45	5 411 399	Shaft Ø 18 x +13.5 for reverse gear	1
46	ZD 9524 100 W	Screw Ø 7 x 1x 31 for fixing the RM rail	1
47	5 406 446	Nut Ø 7x1 for the same	1
47	5 406 447	Synchronizer clutch lever Ø 52x 12.45	1
47	5 406 447	Engagement lever for synchronizer Ø 53x12.45	1
47	5 406 447	Engagement levers for synchronizer dd S4x 12.48	1

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A
(206) 455-4449

Tavola 13 - Comandi cambio
Table 13 - Transmission control

Tableau 13 - Commandes boîte de vitesse
Tafel 13 - Getriebe schaltung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	5 406 223	Rondella piana Ø 7.4 x 14 x 2 fissaa. supporto leva cambin	4
2	RDI 60333	Serrated washer Ø 7x 13 x 0.88 fixing lever support change	4
3	122 TC 76639	Gear shift sheath fixing column	1
4	122 TC 76887	Support assembly with gear lever	1
4	122 TC 79988	Support assembly with gear lever (for driver from right)	1
5	122 TC 76444	Joint on the gear shift rod	2
6	RNT 55379	Fiat washer 2 8 fixing the gear shift rod joint	2
7	RDI 55890	Serrated washer @ 8 fixing the control rod joint. change	2
8	DNT 47031	Nut Ø 8 x 1.25 fixing the gear shift rod	4
9	122 TC 76432	Front rod adjustment tie rod	2
10	CN 64833	Split pin Ø 1.3 x 10 to hold gear control cable	2
11	122 TC 76418	Front gear shift control rod	1
12	DNT 47024	Nut Ø 10 x 1.25 for gear shift rod adjuster	1
13	122 TC 76431	Rear gear shift control rod	1
14	122 TC 76483	Rocker arm fixing pin for com. change to support	1
15	RNT 53869	Fiat washer Ø 14 x Ø 8 x 3 for the same	1
16	117 FC 71332	Bush on rocker arm LL.	1
17	122 TC 76445	Rocker arm for gear shift rod complete with bushing	1
18	RNT 47087	Fiat washer Ø 10 x Ø 2 x 2.5 fixing balancer for rod gear shift command 0 LV	1
19	DST 51421	Self-locking nut Ø 10 x 1.25 fixing balancer for rod gear shift command. 0.	1
20	122 TC 76226	Flexible cable complete with sheath for gear control	1
21	122 TC 76428	Intermediate gear shift control rod	1
22	122 TC 76222	Reverse control fork	1
23	122 TC 76123	Rod for 5th speed control fork 1st and 2nd speed control fork	1
24	122 TC 76219	Bail Ø 9.52 to stop the gear control rod	4
25	SFN 36593	Reverse control fork rod	1
26	122 TC 76114	Selector for 5th speed control rod	1
27	122 TC 76221	Rod for 3rd and 4th speed control forks	1
28	122 TC 76125	Rod for 1st and 2nd speed control forks	1
29	122 TC 76116	Nose for reverse control rod	1
30	122 TC 76111	3rd and 4th speed control fork	1
31	122 TC 76220	Spring on the gear control shaft	1
32	122 TC 79442	Gear control shaft assembly	1
33	122 TC 76218	Washer Ø 18.5 x 12.5 x 2 on the selection lever holding pin	1
34	RN 76565	PEA gear e	1
35	ZD 9372 000 W	Bolt Ø 7x1x25 for fixing gear lever support	4
36	5 406 392	Pin Ø 7x1x32 for reverse gear insertion	1
37	ZD 9236 300 W	Fiat washer Ø 6 x 12x 1.5 for com. cable seal. change	1
38	5 406 409	Knob for gear control lever	1
39	ZD 9535 300 W	Self-locking nut Ø 7x1 fixing com. rod. change	3
40	ZD 9248 200 W	Fiat washer Ø 7.4x14x 1.5 for the same. n	3
41	5 413 012	Bush for gearbox control rod joint	6
42	5 413 013	Grommet for gear shift rod joint	3
43	5 406 424	Pemo DB 7x1	3
44	5 406 430	Terminal for adjusting intermediate gear control rods	1
45	5 406 385	Support flange for gear shift rod	1
46	5 406 384	Dust cover on the intermediate gear control rod	1
47	5 406 414	Rubber ring on the intermediate gear control rod	1
48	5 406 386	Semi-bush for intermediate rod support com. change	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
49	5 411 464	Safety set screw Ø 5 x 12 for 3rd, 4th, 5th speed control rod	2
50	617 056	Ø 2x pin on the rod for holding the safety set screw	1
51	5 406 432	Security set screw Ø 9.5 x 78 for gear control rods	1
52	ZD 9382 500 W	Bolt Ø 9 x 1.5 x 25 fixing rear control fork gear and f' speed	4
53	5 411 465	Safety set screw Ø 9.5 x Ø 2.2 for control rod	2
54	5 411 466	Spring for gear control rod stop ball	4
55	5 411 463	Bolt Ø 9x 15 fastening the fork to the rod	4
56	DX 334 20	5th speed control fork	1
57	ZD 9502 900 U	Rubber on the gear control shaft	2
58	ZD 9530 400 U	Nut Ø 9 x 1.25 fixing the transmission support and selection lever gears	1
59	5 413 198	Relay support for gear selection	1
60	5 413 014	Plug Ø 5x Ø 8.8 for gear selection cable	1
61	5 413 015	Washer Ø 9.5 x Ø 2 x 2 on the selection lever holding pin in L arcia e. o n the PA	1
62	5 406 402	Gear selection return lever	1
63	5 413 195	Pin for gear selection lever	1

Tabella 14 - Differenziale
Table 14 - Differential

Tableau 14 - Differential
Tafel 14 - Hinterachse

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 TP 75524	Right half shaft	1
2	122 TP 75525	Left drive shaft	1
3	5 406 451	Crown and pinion paired R = 8/35 (assembled up to the glass i ture n). - It's " n o, e	1
3	5	Crown and pinion paired R = 7/34 (fitted by the car n Inpo). 2	1
4	5 411 592	Spacer washer for differential case bearing Ø 74x82.8x29	1
4	5 411 593	Spacer washer for differential case bearing Ø 74x82.8x33	1
4	5 411 594	Spacer washer for differential case bearing Ø 74x82.8x37 No	1
4	5 411 595	Spacer washer for differential case bearing Ø 74x82.8x41	1
4	5 411 596	Spacer washer for differential case bearing Ø 74x82.8x45	1
4	5 411 597	Spacer washer for differential case bearing Ø 74 x 82,8 x 4,9	1
5	5 411 600	Internal spacer for adjusting the differential box bearing ferential Ø 72x82.8x3.0	1
5	5 411 601	Distance. inter. for adjustment cushion differential box Ø 72 x 82,8 x 3,05	1
5	5 411 602	Distance. inter. for adjustment cushion differential box Ø 72 x 82,8 x 3,10	1
5	5 411 603	Distance. inter. for adjustment cushion differential box Ø 72x82.8x3.15	1
5	5 411 604	Distance. inter. for adjustment cushion differential box Ø 72 x 82,8 x 3,20	1
5	5 411 605	Distance. inter. for adjustment cushion differential box Ø 72 x 82,8 x 3,25	1
5	5 411 606	Distance. inter. for adjustment cushion differential box Ø 72x82.8x3.30	1
5	5 411 607	Distance. inter. for adjustment cushion differential box Ø 72 x 82,8 x 3,35	1
6	ZC 9408 451 U	Roller bearing Ø 40 x 80 x 19.5 on the differential box	2
7	5 411 580	Bolt Ø 12 x 1.5 x 30 for fixing the crown to the box differential	5
8	5 411 579	Bolt Ø 12 x 1.5 x 41.75 for fixing the crown to the casing differential tola. 2	3
9	5 411 581	Spacer washer for planetarium Ø 40.5 x 62.5 x 1.52	2
9	5 411 582	Spacer washer for planetarium Ø 40.5 x 62.5 x 1.58	2
9	5 411 583	Spacer washer for planetarium Ø 40.5 x 62.5 x 1.64	2
9	5 411 584	Washer for planetarium Ø 40.5 x 62.5 x 1.70	2
9	5 411 585	Spacer washer for planetarium Ø 40.5 x 62.5 x 1.76	2
9	5 411 586	Spacer washer for planetarium Ø 40.5 x 62.5 x 1.82	2
10	5 411 574	Planetary (16 teeth)	2
11	5 411 573	Differential box	1
12	5 411 591	Spacer Ø 74x82.8 x 21 between bearing and support half shaft e	1
13	5 411 613	Oil seal washer Ø 35x715. 2	2
14	5 411 615	Seal ring	2
15	5 411 614	Spacer Ø 30.2 x 38 x 8.5 between bearing and axle shaft	2
16	ZC 9620 267 U	Bearing Ø 30x72 x Ø 3.8 on the axle shaft	2
17	5 411 610	Bolt Ø 7x1 x 15 to stop the ring nut on the support. semi-axe	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
18	5 411 609	Ring nut Ø 74 x 1.5 for bearing seal. on the semi-axe support	2
19	ZC 9508 440 U	Bolt Ø 6x11x11 fixing the axle shaft seal nut to the support	2
20	5 411 678	Nut Ø 30 x 1.5 for holding the axle shaft to the support	2
21	5 411 587	Shim washer Ø 15.5 x 31 x 1.535 for sca satellites differential tola	4
21	5 411 588	Shim washer Ø 15.5 x 31 x 1.615 for sca planets differential tola	4
21	5 411 589	Shim washer Ø 15.5 x 31 x 1.695 for planetary sce differential tola	4
21	5 411 560	Shim washer Ø 15.5x31x1.775	4
22	5 411 575	Satellite for differential case (10 teeth)	4
23	5 411 577	Pin Ø 15x 495 for satellite	2
24	5 411 578	Cruise Ø 5 x 42 x 22 for satellite	1
25	5 411 576	Pin Ø 15 x 116 for satellite	1

Iavola 15 - Telaio
Table 15 - Frame

Tableau 15 - Châssis
Tafel 15 - Rahmen

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 CT 77529	Frame complete with sheet metal and spare wheel support crosspiece	1
1	122 CT 80386	Frame complete, sheet metal and spare wheel support crossbar (right-hand drive)	1
2	122 CT 77530	Preparing the front part of the frame	1
2	122 CT 80089	Preparing the front part of the frame: guide from	1
3	122 CT 77848	Steering box compartment closing sheet metal assembly	1
4	122 CT 78167	Right fan compartment closure door	1
5	122 CT 77201	Frame nose assembly	1
6	122 CT 122 050	Preparing the floor for the front chassis, O.L.	1
7	122 CT 77825	Luggage compartment closing plate	1
8	122 CT 77036	Door closing the pressure accumulator compartment	1
8	122 CT 80165	Pressure accumulator door (for right-hand drive)	1
9	122 CT 122 073	Lower front pin assembly	1
9	122 CT 80470	Lower front assembly (for right-hand drive)	1
10	122 CT 77531	Front part of the air-conditioning box frame, TO	1
10	122 CT 80208	Front part of the air-conditioning box frame (for right-hand drive)	1
11	122 CT 79311	Driving column and pedal support assembly	1
11	122 CT 80369	Steering column and pedal support assembly (for right-hand drive)	1
12	122 CT 79830	Assembly of sheet metal for windscreen wiper compartment closing door	1
13	122 CT 78165	Left headlight compartment closing door	1
14	122 CT 122 048	Preparation of front suspension support and left mudguard	1
15	122 CT 122 048	Preparation of front suspension support and right mudguard	1
15	122 CT 122 202	Preparation, front suspension support and right mudguard (right-hand drive)	1
16	122 CT 122 082	Preparation of right side complete with side member and platform	1
16	122 CT 122 175	Preparation of right side complete with side member and platform (right guides)	1
17	122 CT 122 083	Preparation of the left side complete with yoke and floor	1
17	122 CT 122 177	Preparation of left side complete with side member and platform (right-hand drive)	1
18	122 CT 77096	Upper tunnel parts assembly	1
18	122 CT 811 81	Tunnel upper bolt assembly (for right-hand drive)	1
19	122 CT 77502	Floor complete with tunnel and rail	1
19	122 CT 80320	Platform complete with tunnels and side member (for right-hand drive)	1
20	122 CT 122 060	Complete right rear cross beam	1
21	122 CT 78831	Right fuel tank bottom protection plate	1
22	122 CT 78936	Right fuel tank protection plate	1
23	122 CT 122 060	Complete left rear cross beam	1
24	122 CT 78927	Left fuel tank bottom protection plate	1
25	122 CT 78967	Left fuel tank protection plate	1
26	122 CT 77377	Complete engine separation bulkhead from the passenger compartment	1
27	122 CT 122 130	Preparation of the right rear mudguard	1
28	122 CT 122 138	Partial preparation of the right rear tubular part with mudguard	1
29	122 CT 122 137	Partial preparation of the left rear tubular door with persfanguis	1
30	122 CT 122 131	Preparation of the left rear mudguard	1
31	122 CT 77745	Overall beam connection pylon support shock absorber po	1
		shock absorber	1
32	BN 77872	Bolt and 10 x 1.5 x 70 rear shock absorber upper fixing	2
33	DST 54897	Stop nut Ø 16 x 1.5 x 14.8 for the same	2
34	122 CT 75327	Rear frame doors	1
35	122 TC 77770	Rear gearbox support assembly	2
36	122 CT 79014	Right engine elastic support	1
36	122 CT 79015	Left engine elastic support	1
37	BNT 53247	Bolt Ø 10 x 1.5 x 20 fixing engine support to the frame	6
38	RSN 33112	Washers Ø 10.2 x 16.8 x 2.2 fixing the engine support to the frame	6
38	RNT 69539	Flat washer Ø 10.5 x 18 x 2 fixing engine supports	6
40	DNT 47031	Nut Ø 6 x 1.9 x 6.5 holding stop buffer to the frame	4
41	RDI 55890	Rondella Ø 16 stop buffer fixing	4
42	RNT 55379	Washer Ø 8 x 12 x 2 fixing stop buffer	4
43	122 SA 79C13	Spacer for upper shaking end stop	2
44	SLN 76747	Front suspension upper shock stop buffer	2
45	SLN 75407	Yamponne front suspension lower shock limit switch	2
46	SLN 73511	Rear suspension upper shock stop buffer	2
47	BNT 47028	Bolt Ø 10 x 1.5 x 25 fixing accessory holder plate to the frame	4
48	RAT 45981	Washer Ø 10 fixing accessory door plate	4
49	RNT 47087	Washer Ø 10 fixing accessory holder plate	4
50	BNT 60994	Bolt Ø 10 x 16 fixing air conditioning compressor, or jointer	4
51	BN 77775	Bolt Ø 10 x 1.5 x 120 after fixing, engine to the support	6
52	BNT 66912	Bolt Ø 7 x 1x22 fixing high pressure pump	1
53	RDI 60333	Washer Ø 7 fixing high pressure pump	2
54	RNT 47210	Washer Ø 7 fixing high pressure pump	2
55	122 FI 77084	Bracket on the frame for, accessory holder plate support	2
55	122 FI 77083	Support plate welding assembly for compressor alternator	2
		Ø high pressure oil pump	1
57	122 FI 77237	Joint seal plate, only mounted on cars with air conditioning	1
58	122 FI 79826	Sealing rod for coupler	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
59	BNT 76636	Bolt Ø 7x1 x70 fixing pressure regulator	2
60	BNT 55366	Bolt Ø 8 x 1.5 x 50 fixing cap	1
61	120 CP 76232	Belt tensioner rod for alternator	1
62	BNT 47017	Bolt Ø 8 x 1.5 x 25 fixing the belt tensioner tip	1
63	DN 79038	Nut Ø 16 x 1.0 5 x 8 fixing motor to support	1
64	122 CS 77349	LLI oil radiator bulkhead assembly	2
65	5 412 042	Washer for engine support	1
66	5 405 898	Lower nut on engine mount	1
67	5 406 484	Accessory plate plug	2
68	5 405 891	Elastic semi-bushing for rear support, change	2
69	122 CT 78059	Fuel tank connection pipe	1

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.
(206) 455-4449

Tabella 16 - Sospensione anteriore
Table 16 - Front suspension

Tableau 16 - Suspension av.
Tafel 16 - Vorderaufhängung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	BNT 75592	Bolt fixing shock absorber to the frame	2
2	SLN 68369	Flambloc for lower and upper suspension arm joint	8
		anterior sion. 0.2	2
3	117 SA 72189	Upper arm. ae	18
4	RDI 55938	Washer fixing shock absorber and upper arm	6
		VB 12x21.5x1	12
5	DNT 64308	Nut fixing shock absorber to the arm Ø 12x 1.5 x 10	6
6	DST 68049	Fixed stop nut. lower arm and above on the tel. Ø 12x 1.5 x 12	6
7	BNT 65444	Upper arm fixing bolt to the frame Ø 12x 1.75 x 75	1
8	122 SA 79330	Front stabilizer bar @ 16 (replacement 78399 2 14)	2
9	115 SA 68198	Reduction bush for front stabilizer bar	2
10	117 SA 68199	Try for supporting the front stabilizer bar lever	2
11	BNT 56900	Stabilizer bar shaft lever holding bolt Ø 8x 1.0 x 40	2
12	RNT 71306	Flat washer Ø 8x 15 x 1.5 for the same	2
13	DST 53397	Nut Ø 8x 1.25 for the same	2
14	117 SA 117 662	Lever for stabilizer bar. front complete with esambloc	2
15	117 SA 71990	Spacer for lower arm support. front suspension	vari
15	117 SA 74084	Spacer for lower arm support. front suspension	vari
15	117 SA 74085	Spacer for lower arm support. front suspension	vari
16	117 SA 73271	Lower arm support fixing on the bonnet. anterior scaponaion	4
17	BNT 34174	Serrated washer for the same Ø 10x18x2	8
18	RNT 65593	Toned lever bolt to stabilizer cup. Ø 12x 125 x 56	8
19	RDI 54211	Estambloc for connecting rod and front stabilizer bar lever	4
20	BNT 72188	Connecting rod complete with stem	2
21	SLN 71233	Connecting rod assembly	2
22	117 SA 117 023	Shock absorber fixing bolt. to the arm Ø 12x 1.5 x 80	2
22	117 SA 68197	Lower spacer for front shock absorber	4
23	BNT 73007	Lower right arm complete with estambloc	1
24	117 SA 73006	Lower left arm complete with estambloc	1
25	117 SA 117 016	Lower arm assembly front suspension left	1
25	117 SA 117 017	Lower arm assembly left front suspension left	1
25	117 SA 72033	Front shock absorber	2
25	117 SA 72032	Spring for front suspension (replace 77320) or	2
26	122 SA 71920	Bolt fixing arm to dowel Ø 12x1.5x60	4
27	122 SA 79136	Spacer for lower arm	2
28	BNT 72186	Plug for lower arm ball joint	2
29	117 SA 71391	Spacer for lower arm	6
30	117 SA 71926	Stop ring for ball joint seal Ø 45	4
31	117 SA 71932	Ball joint for lower arm	4
32	ART 62859	Nut fixing the lower ball joint to the spindle	2
33	117 SA 69546	Copiglia for the same	4
34	DCN 76178	Steering lever holding nut on the steering knuckle Ø 12x 1.5 x 7	12
35	CN 33032	Nut fixing the upper ball joint to the spindle	2
36	DNT 64309	Lower and upper joint covers	4
37	DCN 76173	Lower part joint cover sealing ring	4
38	117 SA 76984	Seal ring with upper part	4
39	117 SA 76985	Upper shaking end stop buffer	2
40	117 SA 76986	Lower shaking end stop buffer	2
41	SLN 75747	Serrated washer D 10 for the same	6
42	SLN 75407	Nut @Ø 8x1.5x 6.5 for the same	4
43	RDI 55990	Steering control lever	2
44	DNT 47031		
45	117 FA 71587		

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
46	PN 72248	Stud fastening the steering control lever to the steering knuckle	4
		Ø 12x1.5x84x 1.25	1
47	117 SA 72325	Left steering knuckle with studs and sheet metal	1
47	117 SA 72326	Right steering knuckle with studs and sheet metal	1
48	117 SA 67997	Spacer on the steering knuckle for the front wheel hub	2
49	RN 72751	Washer fixing hub to spindle Ø 16.5x30.4	2
50	DCN 68394	Crowned nut fixing hub to left spindle. Ø 16 x 1.5 x 14	1
50	DCN 47105	Crowned nut fixing hub to right spindle. Ø 16 x 1.5 x 14	1
51	CN 33039	Cotter pin for fixing the hub to the spindle	2
52	BNT 47016	Protection plate fixing bolt Ø 6x1 x 10	6
53	RNT 32690	Serrated washer D 6 for the same	6
54	RDI 52134	Flat washer Ø 6x 16 x 1 for the same	6
55	117 SA 72837	Lower joint boot protection plate	2
56	CHN 64803	Nail fixing the cover protection plate Ø 3x12	4
57	RNT 55379	Stop buffer fixing washer	4
58	RNT 47085	Pin and joint fixing washer	4
59	117 SA 72003	Rubber thickness for front suspension spring (a request)	2
60	117 SA 72004	Iron spacer for front suspension spring (ref requested)	2

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.
(206) 455-4449

Tabella 17 - Sospensione posteriore
Table 17 - Rear suspension

Tableau 17 - Suspension ar.
Tafel 17 - Hinteraufhängung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	RDE 58718	Serrated washer Ø 16x28 x 1.3 cushioned fixing	4
2	DNT 56249	Nut Ø 16 x 1.5 x 8 upper shock absorber fixing	2
3	122 SP 77242	Upper shock absorber and butterfly holding pin	2
4	107 SP 55230	Reduction bush for rear shock absorber silentbloc	2
5	122 SP 122 035	upper part	2
6	BNT 65419	Rear shock absorber with bushes and silent blocks	2
7	117 SP 68419	Shock absorber fixing bolt Ø 12 x 1.5 x 90	2
8	RNT 71349	Reduction bush for rear shock absorber silentbloc	2
9	DST 68049	Washer Ø 12 x Ø 0 x 2 fixing shock absorbers and connecting rod	6
		Nut Ø 12 x 1.5 x 12 fixing upper and lower arms	10
10	122 SP 77247	and shock absorbers	2
11	CN 43776	Brace for rear suspension lower limit stop	4
12	RNT 65593	Cotter pin Ø 1.8 x 15 holding strap	8
13	BNT 65444	Washer Ø 10.5 x 18 x 2 brace seal	8
14	SLN 68369	Bolt Ø 12 x 1.5 x 75 fixing upper arm	8
15	122 SP 76379	Flanbloe for lower arm joint and rear lever	8
16	122 SP 75570	Spacer for rear lever arm upper support	16
17	117 SP 67762	Upper support for rear suspension lever arm	4
		Washer for lower and upper suspension arm joint	8
18	GOM 67774	posterior slons	8
19	GRN 48095	Rubber seal Ø 33.5 x Ø 8.5 x 2.82 on the lower arm	8
20	117 SP 67772	lower and upper	8
21	117 SP 67773	Dowel Ø 3x5 thrust ring seal	8
22	117 SP 67763	Thrust ring for lower and upper arm n	8
23	GOM 67775	Lower and upper suspension arm joint bushing	8
24	122 SP 77241	posterior slon	8
25	RDI 54211	Internal bush for lower arm joint, and above susp. post	8
26	BNT 34174	Rubber seal Ø 40x32.5x3.53 on the internal bushing	2
27	122 SP 122 030	Pin holding suspension arms and brace	8
28	122 SP 122 031	Washer Ø 10 x 18 x 1 fixing lever arm support	8
29	SLN 73679	Bolt Ø 10 x 1.5 x 35 fixing lever arm support	1
30	122 SP 77095	Upper right arm complete with Silentbloc	1
31	A 6G54 12572 44117	Left upper arm complete with Silentbloc	1
32	109 SA 59732	Rear stabilizer bar @ 15	4
33	BN 69847	Silentbloc for connecting rod	4
34	RAT 45681	Connecting rod assembly with Silentbloc	2
35	DST 65851	Support for anti-roll bar elastic plug	2
36	DN 71685	Elastic plug for stabilizer bar	4
37	112 TP 70665	Bolt Ø 10 x 1.5 x 22 fixing stabilizer bar support	4
38	GH 79392	Washer @ 10 fixing stabilizer bar support	4
		Nut Ø 12 x 1.5 x 14.6 fixing stabilizer bar	16
		Nut Ø 14 x 1.5 x 35 fixing wheel to hub	8
38	GH 79393	Rear wheel fixing column -- l. or	1
		Ring nut with right thread Ø 35 x 1.5 x 13 hand fixing	1
		cooked at the hub	1
		Ring nut with left thread Ø 35 x 1.5 x 1.3 hand fixing	1
		cooked at the hub	2
39	117 TP 68440	Washer for the same	1
40	122 TP 76328	Rear hub mounting assembly, with column	2
41	117 TP 75385	External bearing protection sheet	2
42	CSC 68677	Watertight bearing Ø 50 x90 x Ø 0 x 2 on the hub	4
		rear	1
43	122 TP 122 034	Rear suspension arm complete with studs	2
44	122 TP 75367	Spacer between bearings on the rear hub	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
45	122 TP 77870	Disc assembly for bearing seal	2
46	122 TP 75512	Sleeve on the right semi-axle connection hub	1
46	122 TP 75513	Sleeve on the left half-axle connection hub	1
47	117 SP 67884	Upper spring support	2
48	122 SP 79152	Spring for rear suspension	2
49	117 SP 67887	Lower spring support	2
50	117 SP 67883	Ring for centering and lower spring support	2
51	117 SP 67882	Half ring for spring locking	4
52	VNT 71131	Screw Ø 10 x 1.5 x 60 fixing the axle shaft to the sleeve	16
53	RDI 54211	Serrated washer 2 10 for the same	16
54	117 SP 76258	Plate for half-axle fixing net	12
55	DST 51417	Stop nut Ø 6 x 1 x 5.8 fixing bearing seal disc	8
56	PN 45719	Stud Ø 6 x 1 x Ø 1.5 fixing bearing seal disc	12
57	BNT 65443	Bolt Ø 12 x 1.5 x 70 fixing lower arm	4
58	122 SP 122 032	Right lower arm assembly with flambloc	1
58	122 SP 122 033	Left lower arm assembly with flame block	1
59	FRN 76261	Clamp @ 73 holding the half-shaft bellows	4
60	117 TP 76259	Driveshaft softer	4
61	FRN 76262	Semi-shaft bellows sealing clamp	4
62	117 TP 68498	Tp semi-axle assembly, LOBRO	2
63	DST 54896	Stop nut Ø 14 x 1.5 holding the lower arm to the support	2
64	BNT 68407	Bolt Ø 14 x 1.5 x 200 holding lower arm	1
65	117 SP 75069	Spacer for rear shock absorber spring	1

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.
(206) 455-4449

Tabella 18 - Guida e pedaliera
Table 18 - Steering parts pedals

Tableau 18 - Direction pedalier
Tafel 18 - Lenksaule pedale

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	BNT 47028	Bolt Ø 10 x 1.5 x 25 fixing column support	1
2	BNT 49097	Bolt Ø 7 x 1 x 25 column support fixing	2
3	RAT 47078	Washer DD 7x 12 x 18 for the same	4
4	RAT 47210	Flat washer Ø 7x14x 1.5 for the same	6
5	122 GS 77416	Column support (from car no. 82 onwards)	1
5	122 GS 79169	Column support (up to car no. 80)	1
6	122 GS 77417	Flange for steering wheel or sub-diameter positioning	2
7	ANT 52733	Flat washer Ø 10 x Ø 0 x 25 for column support fixing	1
8	RNT 45681	Spring washer Ø 10.5 x 18 x 0.8 fixing plant support	1
9	DNT 44352	Nut Ø 10 x 1.5 x 6 for fixing column support	1
10	RNT 55379	Flat washer Ø 8 x 18 x 2 fixing upper collar	4
11	RDI 55990	Serrated washer Ø 8x 15 x 0.8 super collar fixing	4
12	DNT 47031	Nut Ø 8x 1.5 x 6.5 fixing upper collar	5
13	DNT 47046	Nut Ø 5 x 0.8 x 4 fixing steering wheel molding	2
14	TRG 78498	MASERATI plate on the steering wheel	1
15	122 GS 76268	Steering shaft	1
16	DST 67431	Nut Ø 10 x 1.5 x 8.3 fixing adjustment lever	1
17	122 GS 78680	Universal joint for steering control shaft	1
18	BNT	Bolt Ø 7 x 1 x 35 fixing direction joint	2
19	FRN 73126	Headset fixing clamp for elastic joint	1
20	117 GS 75223	Column joint protection cap	1
21	122 GS 76237	Fork and steerer welding assembly	1
22	DST 48038	Nut Ø 7 x 1 fixing elastic joint	6
23	101 13531 48119	Elastic joint on the steering column	1
24	122 GS 73237	Flexible joint connection fork	1
25	VN 78925	Hexagon socket screw Ø 6x1 x20 fork fixing	2
		elastic joint	2
26	RDI 72811	Serrated washer Ø 6 for the same	2
27	DST 65794	Nut Ø 12 x 1.25 fixing, handbrake accelerator pedal	3
28	RNT 71349	Flat washer Ø 12 x Ø 0 x 2 fixing accelerator pedal,	3
		brake and clutch	3
29	122 FC 75957	Self-lubricating bush on the accelerator and brake pedal	6
		clutch	2
30	122 FC 78615	Spacer for accelerator and clutch pedal	6
31	RN 78638	Shim washer for accelerator, brake and clutch pedals	1
32	BNT 65441	Bolt Ø 12 x 1.5 x 60 accelerator pedal support	2
33	DNT 32484	Nut Ø 6 x 1 x 4 fastening accelerator pedal stop	1
34	122 FC 75951	Mild accelerator pedal (up to car no. 186)	1
34	122 FC 79893	Bare accelerator pedal (from car no. 188 onwards)	1
34	122 FC 122 028	Accelerator pedal complete with bushing and pedal cover	1
35	BNT 72497	Bolt Ø 6x1 x28 accelerator pedal retainer	2
36	117 FC 68337	Accelerator pedal cover	1
37	122 FI 78483	Roller-holder connecting rod for braking distributor on the brake master cylinder	1
38	122 FC 76160	Threaded pin for washer holder connecting rod signaling	1
39	ART 45863	Stop ring Ø 8 for threaded pin	1
40	DNT 47046	Nut and 5x 0.8 x 4 fixing threaded pin for adjustment	1
		brake pump pressure	1
41	122 FC 75955	Plate on the brake control pedal	2
42	CHN 72912	Nail Ø 3x 14 fixing the plate on the brake pedal or	1
43	122 FC 75956	Bare brake control pedal (up to car no. 186)	1
43	122 FC 79863	Control pedal, brakes bare (from car no. 188 onwards) 	1
43	122 FC 122 026	Brake control pedal complete with bushings and pedal cover	1
44	122 FC 78616	Spacer for brake pedal	1
45	BNT 65444	Bolt Ø 12 x 1.5 x 75 brake pedal support	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
46	109 FC 57849	Bolt Ø 6x1 x20 stopper for frank pedal: 2	2
47	BNT 53968	Pin for clutch pedal joint	1
48	107 FC 53911	Clutch pedal joint sealing pin	1
49	CN 33539	Clutch control pedal (up to car no. 186)	1
50	122 FC 75948	Clutch control pedal (from car no. 188 onwards)	1
50	122 FC 79889	Clutch control pedal complete with bushing and pedal cover	1
50	122 FC 122 027	Bolt Ø 12 x 1.5 x 60 clutch pedal support	1
52	BN 79349	Pin for clutch servo assistance adjustment	1
53	122 FC 77564	Plate for clutch servo assistance adjustment	1
54	122 FC 77560	Spring for clutch control servo assistance	1
55	122 FC 77853	Clutch assistance servo spring cover	1
56	122 FC 79355	Clutch pedal end stop buffer	1
57	117 BM 74730	Bush for column locking	1
58	122 GS 79194	Bolt Ø 9 x 20 fixing the steering wheel positioning flange	4
59	ZD 9382 300 W	Car support bush or if l	1
60	5 406 818	Stem support. No	1
61	5 406 817	Upper collar	1
62	5 406 819	Bushing with spring	1
63	5 406 802	External cap fixing nut for column hub H =	1
64	5 406 793	27 x 150 e 8	1
65	5 406 789	External bush for column hub	1
66	ZD 9270 900 U	Ball for column hub	32
67	5 406 788	Internal bushing Ø 36 x 45x 48x10	2
68	5 408 786	Complete column support	1
69	5 406 824	Terminal support	1
70	5 406 803	Steering wheel closing plate	1
71	ZD 9345 500 W	Steering wheel fixing bolt	3
72	5 406 809	Naked steering wheel 2	1
73	5 406 807	Molding with padding for steering wheel	1
74	5 406 796	Column control anti-friction washer	3
75	9275 200 W	Column locking washer	1
76	5411 231	Retaining clip for brake distribution plate on	1
		the pump	1
77	5411 232	Plate for braking distribution on the brake master cylinder	1
78	5 410 184	Pin for brake distributor on the brake master cylinder	1
79	5 406 782	Washer for column locking	1
80	ZC 9624 016 U	Spring washer	7
81	5 406 794	Column locking pin	1
82	5 406 783	Adjustment screw	1
83	5 406 798	Column locking sleeve	1
84	5 406 800	Adjustment lever	1
85	5 410 644	Knob for adjustment lever	1
86	5 403 117	' Switch with anti-theft device	1
*	122 GC 81308	Ignition key and steering lock	1

Guida e pedaliera per guida destra
Table 19 - Steering parts pedals for ring steering

Tableau 19 - Direction pedalier direction à droite
Tafel 19 - Lenksaule pedale Rechtslenkung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 GS 80393	Complete column upper part	1
2	116 GS 68988	Light and wiper control unit	1
3	116 GS 67265	Joint between the steering columns	1
4	SN 59538	Conical pin Ø 7 x 28 fixing joint to the terminal	2
5	DNT 47046	Nut Ø 5x0.8x4 for the same	2
6	RDI 58544	Serrated washer QD 5 for the same	2
7	RNT 52530	Flat washer Ø 5x 11 x 1 for the same	2
8	116 GS 69979	Switch with anti-theft device	1
9	116 GS 69017	Steering lock cover block	1
10	VNT 72481	Screw Ø 6x12 securing the anti-theft switch	1
11	RDI 53899	Serrated washer @ 6 for the same	1
12	VNT 60196	Screw Ø 5 x 15 fixing steering lock cover plug	1
13	RDI 58544	Serrated washer Ø 5.3x9.7x 0.5 for the same	1
14	117 GS 75993	Column support	1
15	116/A GS 71087	Cap on the upper part of the column	1
16	116 GS 71069	Steering wheel positioning adjustment sliding sleeve	1
17	115/A GS 69917	Spacer for steering wheel positioning adjuster	1
18	115/A GS 69901	External and internal clutch discs positioning register, steering wheel	1
19	DST 53386	Stop nut Ø 8x1x 10 position stop pin adjustment, steering wheel	1
20	RAT 61309	Spring washer Ø 8x 18x 1 for the same	2+2
21	107/A GS 65895	External shim ring for sliding sleeve	1
22	116 GS 66623	Complete column	1
23	116 GS 66389	Complete terminal	1
24	116 GS 67332	Manifold for horn	1
25	116 GS 66613	Bushing for horn manifold	1
26	101/7 ME 66616	Insulating bush for sliding contact	1
27	RVN 30898	Manifold fixing rivet for horn	1
28	107/A GS 65304	Cable duct for horn	1
29	116 GS 67521	Knob locking the steering wheel to the column support	1
30	116 GS 66619	Sliding contact for horn	1
31	116 GS 66628	Flushing on the sleeve	1
32	116 GS 66629	Without sleeve sealing ring on column	2
33	116 GS 67418	Steering wheel positioning spring	1
34	TVN 51194	Vipia tube Q 22 positioning spring protection, steering wheel cm. 12	1
35	109 BP 67415	Knob on the stop sleeve control lever	1
36	116 GS 68142	Complete silentbloc bush	1
37	SLN 66392	Silentbloc for column support rotation bush	2
38	BNT 47475	Bolt Ø 8x1x30 for the same	2
39	RDI 55980	Serrated washer @ 8 for the same, the, and,	2
40	RNT 55379	Flat washer Ø 85x18 x2 for the same	2
41	117 GS 73194	Steering wheel position stop pin	1
42	117 GS 75987	Spacer and cams for steering wheel position adjustment	1
43	117 GS 73191	Steering wheel positioning locking block	1
44	117 GS 73193	Steering wheel positioning control lever	1
45	117 GS 73192	External clutch disc for steering wheel positioning	1
46	117 GS 76979	Spacer for column support I	2
47	VNT 66622	Screw Ø 4x0.7 Xx 25 fixing column support or	2
48	RDI 58543	Serrated washer @ 4 for the same	2
49	122 GS 80395	2-group deformable shockproof steering wheel	1
49	122 GS 80379	Complete steering wheel hub	1
50	122 GS 80459	Coated deformable sleeve	1
51	117 GS 80077	Bolt @ 5 fixing sliding contact	2
52	BNT 53969	Split washer Ø 5.3 for the same	2
53	RSN 32497	Split washer Ø 5.3 for the same	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
54	RNT 52530	Flat washer DD 5 for the same	2
55	ART 43121	Stop ring holding the sliding sleeve to the column	1
56	GH 53874	Ring nut Ø 16 x 1 x 7 for fastening the steering wheel to the column	1
57	RL 73588	Lock washer for the same	1
58	VN 56553	Screw Ø 3x 0.5 x 6 fixing tab on the column end	6
59	LN 56547	Tab Ø 45 x 5.2 x 61 on the floor terminal	3
60	GRL 59167	Roller cage Ø 30 x 37 x 20 on the sliding sleeve	2
61	CSC 66304	Adjustable radial bearing Ø 5 x 52x18 on the terminal	1
62	ART 43993	column	1
63	BNT 44294	Snap ring @ 25 E bearing seal at the term. column	2
64	RDI 58544	Bolt Ø 5 x 0.8 x 25 fix. column lights and wiper control	1
65	SN 67409	Serrated washer D 5 for the same	2
66	CN 43776	Pin Ø 6x 19 holding lever and position return spring	1
67	BNT 53968	flying chin	1
68	RSN 32690	Split pin Ø 1.8x 15 for the same	2
69	RNT 52134	Bolt Ø 6 x 1 x 20 fixing silentbloc door bush	6
70	GRN 73203	Split washer QI 6x 16 x 1 for the same	6
71	BN 66818	Equal washer Ø 6x 16 x 1 for the same	6
72	BNT 47021	Dowel on the cam spacer for position adjustment, steering wheel	1
73	RSN 32690	Bolt Ø 5x08 x 12 holding the swinging bearing at the top	2
74	RNT 67011	I bring the column to,	2
75	BNT 49603	Bolt Ø 6 x 18 fixing the steering wheel on the deformable body	4
76	RDI 58544	Split washer @ 6 for the same	4
77	RNT 52530	Flat washer Q 6 for the same	4
78	VNT 66622	Bolt Ø 5 x 20 fixing the deformable body to the hub	4
79	RDI 58543	Washer 2 5 for the same	4
80	116 GS 66901	Flat washer D 5 for the same	4
81	115/A GS 69902	Screw Ø 4 x 0.7 x 25 fixing column support	2
82	LN 69908	Serrated washer @ 4 for the same	2
83	116 GS 71778	Internal shim ring for sliding sleeve	1
84	116 GS 72348	Internal clutch disc for steering wheel positioning	2
85	116 GS 72380	Tab Ø 2.5 x 3.7 x 9.66 centred, plant stop command	2
85	116 GS 72336	Horn button return spring	1
86	116 GS 72347	Retaining ring for warning compass	1
87	122 FC 75951	Horn button complete with spring	1
87	122 FC 122.028	Horn button (button only)	1
88	122 FC 79973	Socket for horn button	1
88	122 FC 122.219	Bare accelerator pedal	1
89	122 FC 79974	Accelerator pedal complete with bushings	1
89	122 FC 122.220	Bare brake pedal	1
90	ART 43992	Brake pedal complete with bushings	1
		Bare clutch pedal	1
		Clutch pedal complete with bushings	1
		Stop ring Ø 56.2 x 2 bearing seal on column	1

Tabella 20 - Sterzo
Table 20 - Tie rods

Tableau 20 - Barres d'accouplement
Tafel 20 - Lenkung und Lenkgestänge

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	117 GC 72182	Steering box complete with tie rods and sleeve (assembled up to the vehicle, n	1
1	117 GC 80013	Steering box complete with tie rods and sleeve (assembled from car no	1
1	117 GC 75782	Steering box complete with tie rods and right steering sleeve (fitted up to car n)	1
1	117 GC 80012	Steering box complete with tie rods and right steering sleeve (mounted by car no	1
2	DCN 76093	Crowned nut Ø 10 x 1 x 19 fixing heads and tie rod joints	2
3	117 GC 76092	Dust cover for tie rod ends	2
4	117 GC 76094	Retaining ring for joint head dust cover	2
5	117 GC 76091	Tie rod joint body complete with cap, stopper and nut	2
6	DNT 63296	Stop nut on tie rod Dd 14x 15	2
7	117 GC 72968	Tie rod for steering box	2
8	117 GC 80073	Worm screw (for right-hand drive)	1
8	117 GC 75818	Worm screw (fitted up to car no	1
8	117 GC 80009	Worm screw (fitted by car no	1
9	CSC 75832	Worm screw bearings	2
10	ANT 75833	Seal ring for worm screw	1
11	117 GC 74735	Grease seal cap	1
12	117 GC 74788	Spring on the grease seal cap	1
13	FRN 66995	Band @ 11 for the same	1
14	117 GC 80071	Steering gear rack (for right-hand drive)	1
14	117 GC 75817	Steering gear rack (assembled up to vehicle no	1
14	117 GC 80010	Steering gear rack (assembled from vehicle no	1
15	FRN 75835	Clamp @ 18 fastening the headset to the cable	1
16	117 GC 75836	Bellows on the right side steering box arm	1
17	FRN 75800	Bellows clamp on the steering box	3
18	117 GC 73183	Steering box without tie rods (assembled up to vehicle no	1
18	117 GC 80008	Steering box without tie rods (mounted by vehicle no	1
18	117 GC 75754	Steering gear without tie rods (right-hand drive) (assembled up to to car n)	1
18	117 GC 80011	Steering gear without tie rods (right-hand drive) (assembled by car n) 2	1
19	117 GC 75819	Gib for rack	1
20	117 GC 75820	Clothespin for saying	1
21	GOM 75834	Eraser for the same	1
22	117 GC 75822	Thickness between gutter and cover	1
22	117 GC 75823	Thickness between gutter and cover	1
22	117 GC 75824	Thickness between gutter and cover	1
23	117 GC 75821	Cover on the steering gear rack rail	1
24	BNT 75831	Bolt Ø 8x 1.5 x 27 for the same	5
25	RSN 77299	Split washer Ø 8x 14x2 for the same	5
26	117 GC 75823	Steering box front cover	1
27	GN 75830	Front cover gasket	1
28	117 GC 75823	Shim on the front cover	1
28	117 GC 75827	Shim on the front cover	1
28	117 GC 75828	Shim on the front cover	1
28	117 GC 75829	Shim on the front cover	1
29	117 GC 74613	Bellows on the left side steering gear, or	1
30	117 GC 75575	Sleeve sealing ring to steering box, I I I or	1
31	117 GC 75574	Sleeve holding shock absorber to steering box	1
31	117 GC 75783	Shock absorber sealing sleeve to the right steering box	1
32	117 GC 74784	Pin for shock absorber attachment to the steering box	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
33	DNT 64307	Nut Ø 10x 1.5 x 8 fixing the shock absorber to the seat of the guide	1
34	RDI 54211	Serrated washer Ø 10 x 18 x (for the same	2
35	RNT 65593	Serrated washer Ø 10x5x 18x2 for the same	1
36	117 GC 72537	Tubular steering control damper	1
37	117 GC 74622	Clamp holding shock absorber to steering box	1
38	BNT 47396	Bolt Ø 6 x 1 x 30 fixing shock absorber seal band	2
39	RDI 53889	Rondella serrata OD 6 for the same	2
40	DNT 47047	Nut Ø 6x 1x5 for the same	2
41	BNT 34174	Bolt Ø 10 x 1.5 x 36 holding shock absorber to the clamp on the steering gear	1
42	DNT 47024	Nut Ø 10x1.5x8 for the same	1
43	BNT 48831	Bolt Ø 10 x 1.5 x 30 fixing the guide box to the frame	4
44	RDI 45681	Washer Ø 10.5 x 18 x 0.8 for the same	4
45	ANT 76635	Centering bush for rack	1

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.

(206) 455-4449 _so—7

Tabella 21 - Freni anteriori ventilati
Table 21 - Front cooled brakes

Tableau 21 - Freins av. ventilées
Tafel 21 - Vordere gelüftbremse

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	117 FA 71070	Right front brake disc protection plate	1
1	117 FA 71071	Left front brake disc protection plate	1
2	BNT 70762	Bolt Ø 6 x 8 fixing disc protection plate	6
3	RDI 53899	Serrated washer Ø 6x11.8x0.6 fixing sheet metal	6
		front disc protection	6
4	RNT 52134	Flat washer Ø 6 x 1 x 10 fixing protection plate	6
		front disc	6
5	117 FA 71067	Left anterior caliper	1
5	117 FA 71068	right front brake caliper	1
6	RNT 47085	Flat washer Ø 12 x 3x 24 fixing front brake caliper	4
7	RDI 55938	Serrated washer Ø 12 x Ø 1.5 x 1 fixing front brake caliper	4
8	BNT 68437	Bolt Ø 12 x 1.5 x 35 fixing front brake caliper	4
9	117 FA 75714	Front brake caliper air vent cap	4
10	117 FA 78067	Shim with stop for oil delivery pipe to the front brake caliper	1
		left rear	1
10	117 FA 78068	Shim with stop for oil delivery pipe to the front brake caliper	1
		right rear	1
11	GN 77875	Gasket Ø 10.2x 16 x2 for connecting screw on the front brake caliper	8
12	VRN 77877	Connection screw Ø 10 x 1.5 x 40 for front brake caliper connection	2
13	VRN 77786	Connection screw Ø 10 x 1.5 x 26 connecting connection fixing	2
		front brake caliper chin	2
14	117 FA 75704	Piston @ 43 for front brake caliper	4
15	117 FA 75710	Piston @ 34 for front brake caliper	4
16	GOM 75715	Seal on piston @ 43 front brake caliper	4
17	117 FA 75705	Dust seal for piston @ 43 front brake caliper	4
18	117 FA 75706	Seal ring for dust seal. @ 43 front brake caliper	4
19	GOM 75716	Piston sealing rubber @ 34 front brake caliper	4
20	117 FA 75711	Dust cover for column @ 34 front brake caliper	4
21	117 FA 75712	Seal ring for dust rubber. @ 34 front brake caliper	4
22	117 FA 77336	Front braking block without warning wire	4
22	117 FA 77337	Front braking block with indicator wire	4
23	117 FA 75713	Plate for holding front brake caliper blocks	2
24	CN 33039	Split pin for nut fixing hub to front spindle	2
25	DCN 68394	Crowned nut Ø 16 x 1.5 x 14 fixing front hub, left	1
25	DCNT 47105	Crowned nut Ø 16 x 1.5 x 14 fixing front hub, right	1
26	RN 72751	Washer Ø 16.5 x 30 x 4 for the same	2
27	CSC 68375	Bearing Ø 0 x 52 x 15 x 2 on the front hub	2
28	122 SA 76368	Right front wheel hub with stud	1
28	112 SA 76369	Left front wheel hub with studs	1
29	112 TP 70685	Column fastening the wheel to the front and rear hubs	16
30	BNT 64468	Bolt Ø 8x 1x 18 ch.=13 fastening discs to the front hubs	16
31	RDI 55990	Internal serrated washer for the same Ø 8x 15x08	16
32	117 SA 67996	Spacer between front wheel hub bearings	2
33	CSC 49301	Bearing on the front hub Ø 30x62x 16x 1.5	2
34	GH 68711	Ring nut for fixing the internal left front wheel bearing	1
34	GH 68712	Ring nut for fixing the internal front wheel bearing, right	1
35	GRN 77939	Ring nut locking screw on the front hub	2
36	117 SA 67997	Spacer on the spindle for front wheel hubs	2
37	122 FA 75999	Bell for ventilated front brake disc	2
38	117 FA 70787	Ventilated front brake disc	2
39	116 FP 65884	Flange holding ventilated disc to the front bell	2
40	BNT 47370	Bolt Ø 50.8 x 16 fixing the disc to the front bell	24
41	RDL 42638	Safety washer with double tab Ø 5.3 for the same	24
42	122 FA 76076	Front ventilated disc assembly assembly	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
43	GN 67834	Gasket Ø 11 x 16 x 1 for connecting screw on front brake caliper	2

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.
(206) 455-4449

Tabella 22 - Freni posteriori ventilati
Table 22 - Rear cooled brakes

Tableau 22 - Freins ar. ventilées
Tafel 22 - Hintere gelüftbremse

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 FM 77067	Complete handbrake control lever	1
1	122 FM 79635	Handbrake control lever tp. Germany	1
2	RDI 55990	Washer @ 8 amo brake lever fixing	1
3	DNT 47064	Nut Ø 8 x 1.5 x 6.6 fixing handbrake lever	2
4	101 FM 47357	Pin on the amo brake lever	1
5	RNT 71306	Flat washer Q 8 for the same	1
6	CN 43776	Cotter pin on the amo brake lever pin	1
7	PFN 45003	Passed it for amo brake cable	4
8	RNT 47085	nodal 2 2 for the same handbrake 1	4
9	CN 48195	Cotter pin holding lever on the brake support	1
10	BNT 34770	Bolt @ Left 0.8x 12 fixing anti-noise spring	2
11	RDI 60333	Washer @ 7 fastening Bundy hoses to the brake caliper	2
12	BNT 36402	Bolt Ø 7 x 1 x 16 fastening bundy pipes to the brake caliper	2
13	PN 75891	Stud Ø 12 x 1/15 x 35 fastening brake disc to semi	12
14	RDI 55938	internal axis	12
15	DNT 64309	Serrated washer @ 12 for the same	12
16	122 FP 75514	Nut Ø 12x1.5x7 fixing, brake disc on the internal axle shaft	12
17	PNM 76713	Plate for rear brake discs	2
18	PNM 76714	PIRELLI tire 5.00x16 4 PR for spare wheel 3"x16"	1
19	122 SR 77118	PIRELLI inner tube 5.00 x 16 for the same	1
20	PNM 78482	Spare 3" x 16" molded wheels	1
20	PNM 76712	MICHELIN tire 185/70 VA 15X for front cast wheels	2
21	122 SR 77412	MICHELIN 205/70 VA 15X tire for rear cast wheels	2
21	122 SR 80001	Cast wheel 7"x18"	4
22	117 SR 73349	Complete cast wheel	4
23	ZD 9522 800 U	Valve assembly tubes	4
24	5 407 064	Nut Ø 14 x 1.5 x 8 holding sheath to the frame	1
25	5 407 068	Handbrake cable complete with protection	1
26	ZC 9621 105 W	Protective cover for amo brake cable	1
27	ZD 9522 300 W	Bolt Ø 12 x 1.5 x 60 fixing handbrake caliper	4
28	5 411 048	Nut Ø 9 x 1.25 fixing handbrake plug adjuster	4
29	5 411 051	Bush for levers	4
30	5 411 049	Amano brake lever adjustment bolt	2
31	5 405 568	Handbrake support lever with bush	2
32	5 407 075	Support complete with lever	2
33	5 405 569	Anti-noise spring	2
34	5 407 062	Braking pad for handbrake (set of 4 pieces)	1
35	5 407 072	Fixing bush	1
36	5 407 070	Nine-coil spring	1
37	5 413 919	Spring attachment. I	1
38	5 406 640	Twelve coil spring	2
38	5 406 639	Right rear brake caliper connection hose	1
39	ZD 9188 900 U	Rear left brake caliper connection hose	1
40	ZC 9621 102 U	Rubber for rear brake caliper connection hose	4
41	ZD 9272 200 W	Rear brake caliper fixing bolt	4
42	ZD 9482 800 U	Washer Ø 14.5 x Ø 5 x 3 fixing rear brake caliper	4
43	5 413 215	Sealing rubbers for bleed screw	2
44	1D 5 405 436 P	Bleed screw for rear brake caliper	2
45	1D 5 405 437 A	Piston for rear brake caliper	4
46	ZD 9503 800 U	Felt gasket Ø 60x65x5 for the same	4
47	5 401 458	Rubber seal Ø 59.2 x 69 x 5.3 on the rear brake callipers	4
48	5 401 954	Braking block" tp. USA	4
49	5 409 687	Needle spring for holding rear blocks	2
		rear brake caliper complete brakes	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
50	122 SR 79999	Anello d'arresto per dischetto ruota fusa	4
51	122 SR 80000	Cast wheel disk	4
52	117 SR 79998	Cast wheel bushing	4

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.
 (206) 455-449 _mmmann +

Table 23 - Braking system

Tableau 23 - Installations de freinage
Tafel 23 - Bremsanlage

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	117 FI 73325	Fork securing fittings on BOSCH assemblies	9
2	VRN 7227	Connection screw for pipes to headlamp-lifting cylinders Ø 3/8" x 24 UNF x 30	4
3	122 FC 76825	Bundy pipe from 3-way headlamp union to right headlamp cylinder, L = 720	1
4	122 FC 76806	Bundy pipe from 3-way headlamp union to right headlamp cylinder, L = 640	1
5	DST 68045	Nut securing distributors for brake circuit, Ø 6	13
6	RNT 67041	Washer securing distributors and headlamp-lifting spring, Ø 6	13
7	117 FI 74067	Double 3-way union connecting headlamp-lifting cylinders	1
8	112 FC 67605	Bundy pipe from 3-way headlamp union to left headlamp cylinder, L = 1100	1
9	122 FC 76824	Bundy pipe from 3-way headlamp union to left headlamp cylinder, L = 1080	1
10	GN 77675	Seal for union screw on brake caliper, Ø 10.2 x 16 x 1	8
11	117 FI 73676	Flexible hose complete with protective sleeve	2
12	GN 67634	Seal for union screw on brake caliper and cap on service tap Ø 11 x 16 x 1	5
13	VRN 77677	Connection screw securing rear caliper connection union Ø 10 x 1.25 x 40	2
14	DNT 46646	Nut securing brake pipes to supports, Ø 3/8" x 24 UNF	10
15	RDI 46337	Washer securing flexible pipes and pressure regulator, Ø 3/8"	3
16	117 FC 74232	Bundy pipe from front-brake 3-way union to right caliper, L = 970	1
17	117 FC 74233	Bundy pipe from front-brake 3-way union to left caliper, L = 950	1
18	117 FI 72216	3-way union for front brake circuit	1
19	122 FC 76807	Bundy pipe from tunnel 3-way union to twin 3-way headlamp union, L = 1230	1
20	122 FC 74908	Bundy pipe from position-light 3-way union to twin 3-way headlamp union, L = 1170	1
21	117 FI 72406	Front and rear brake-accumulator mounting plate	1
22	VRN 72225	Connection screw for regulator oil outlet and accumulator inlet Ø 9 x 1.25 x 3/8" x 24 UNF	3
23	117 FI 73672	Brake-accumulator connecting pipe	2
24	VRN 73226	Connection screw Ø 14 x 46 x 3/8" x 24 UNF for brake accumulators	2
25	122 FC 77370	Bundy pipe from brake-pump distributor to front-brake 3-way union, L = 320	1
26	107 FC 55441	Bundy pipe from rear-brake accumulator to pump distributor, L = 310	1
27	122 FC 76874	Bundy pipe from front-brake accumulator to pump distributor, L = 310	1
28	117 FC 74246	Bundy pipe from 5-way distributor to front-brake accumulator, L = 300	1
29	122 FC 76875	Bundy pipe from 5-way distributor to rear-brake accumulator, L = 180	1
30	117 FI 72215	5-way union for pressure-switch connection	1
31	117 FI 74731	Complete needle for service shut-off tap	1
32	117 FI 73844	Complete service-circuit shut-off tap	1
33	122 FC 77371	Bundy pipe from 5-way distributor to service tap, L = 600	1
34	117 FC 76343	Bundy pipe from tunnel union to brake-pump distributor, L = 1830	1
35	117 FI 73861	Union joining flexible hydraulic-control hoses — BOSCH	1
36	VRN 73865	Connection screw for BOSCH 3-way supply union, Ø 3/8" x 24 UNF	2
37	117 FI 74725	Connector and 3 ways for hydraulic position light switch	1
38	115 FC 64660	Bundy pipe of the service tap at the G-way connection on the tunnels L = 630	1
39	122 FC 76873	Bundy pipe of the junction on the tunnel to the 5-way distributor La 1570	1
40	132 FI 76828	3-way fitting for power supply to the elastiflex circuit	1
41	BNT 72467	On the distributor fixing plate on the brake master cylinder Ø 6x12x28 LO:	3
42	RDI 53886	distributor fixing washer on from pumps Ø 6	3
43	RNT 60333	Serrated washer fixing brake and clutch pump Ø 7x12x26	4
44	BNT 36402	Brake pump mounting bracket Ø 7 x 16 x Ø 70/60 Ø 71/60/60	3
45	122 FI 77401	Felt gasket for tire pump pistons, Ø	2
46	VN 42065	Brake pump fixing screw Ø 5xØ16x10	2
47	SVT 59667	Sub-screw for upper fixing of coolant pumps	2
48	122 FI 76266	Multiple distributor for brake pump connection	1
49	FRN 74510	Clamp for brake and rhythm pump exhaust hose Ø 12	2
50	VRN 73374/400	3-way brake master cylinder sleeve given recovery tank eight	1
51	VRN 76146	Connection screw for primary and clutch pump outlet, Ø 5x1.0 5 x 7/16" x 20 UNF	1
52	MAN 73374/130	Sleeve from the 3-way shaft to the primary clutch master cylinder Ø 5x12 x 190	1
53	RAMN 73621	Sleeve fitting for collecting brake and clutch pump oil drain	2
54	FRN 68634	Sleeve straps on tanks, recovery oil and on the 3-way drain fittings	4
55	MAN 60006/0060	Sleeve from 3-way drain, ng pump Ø brakes at: reservoir recovery oil Ø 8 x 15 x 60	1
56	122 FI 76385	Brake and clutch pump oil recovery tank 2 BRE	1
57	MAN 60006/0330	Sleeve of the clutch oil recovery tank at the 3-way drain outlet ut tank Q Ax 15x 380 Ø, Ea was	1
58	MAN 73374/0300	Sleeve from distribu. wound lift and 3-way delivery, ser. oil Ø 5x10 x 300	1
59	DNT 62557	Headlight lifting distributor fixing nut	2
60	RDI 59543	Headlight lifting distributor fixing washer Q 4	1
61	RAMN 73362	Sleeve fitting for oil drain from distributor alzatafari	1
62	BNT 74727	Shoe lifting distributor fixing bolt Ø 4xØ7x20	2
63	117 FI 73684	Flexible hose for connection, of the 3-way fittings to the lift control	2
64	MAN 73374/3500	Sleeve for delivery from the 3-way distribution headlights "to the tank, oil Ø 5 x 12 3500	1
65	122 FI 76862	Double 2-way connection on the tunnel, Ø	1
66	VRN 76223	Connecting screw for clutch control bundy tube joint, Ø 7/16" x 20 UNF	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
67	VRN 77627	Connection screw securing secondary clutch-pump flexible hose, Ø 9 x 1.25 x 24	1
68	GN 37911	Seal for pressure switch and secondary clutch-pump hose Ø 9.5 x 15 x 48	2
69	122 FC 77572	Bundy pipe from primary clutch pump to intermediate union on tunnel, L = 1210	1
70	122 FI 76460	Flexible hose connecting the secondary clutch pump	1
71	RDI 55639	Washer securing secondary clutch-pump control hose, Ø 11	1
72	DN 73372	Nut securing secondary clutch-pump hoses, Ø 7/16" x 20 UNF	1
73	122 FI 76808	Bundy pipe from intermediate tunnel union to flexible clutch-pump hose, L = 2040	1
74	117 FC 74250	Bundy pipe from regulator to 2-way tunnel union (second section), L = 1420	1
75	122 FC 77589	Bundy pipe from tunnel 2-way union to flexible hose connecting the rear-brake 4-way union, L = 1300	1
76	VRN 76834	Connection screw securing flexible hose to rear-brake distributor	1
77	GN 77674	Seal securing flexible hose to rear-brake union, Ø 10 x 15 x 4	1
78	122 FC 76376	Bundy pipe from 4-way hydraulic-stop union to rear calipers, L = 380	1
79	117 FI 73389	4-way distributor supplying rear brakes and hydraulic stop	2
80	122 FI 77628	Bracket for rear-brake and hydraulic-stop supply distributor	1
81	117 FI 73127	Flexible hose on rear-brake distributor — LOKEED	1
82	VRN 59285	Connection screw joining regulator pipes to twin 2-way tunnel union, Ø 3/8"	1
83	DST 51416	Nut securing oil-tank tie rod, Ø 5 x 0.8	1
84	RNT 35345	Washer securing oil tank, Ø 5 x 14 x 1	2
85	122 FI 76366	Complete tie rod for securing oil tank	2
86	FRN 37625	Clamp for hose from oil tank to pumps and for hose on regulator	3
87	120 FI 76885	Oil tank	1
88	MAN 73376/1000	Oil-delivery hose from tank to high-pressure pumps, Ø 13 x 20 x 1000	1
89	107/A FC 65200	Bundy pipe from regulator to 2-way tunnel union (first section), L = 800	1
90	122 FC 76803	Bundy pipe from regulator to 2-way tunnel union (air-conditioned version)	1
91	VRN 72224	Chassis bracket supporting oil recovery tank	1
92	122 FI 76461	Connection screw for high-pressure pump oil delivery, Ø 12 x 1.25 x 7/16" x 20 UNF	2
93	FRN 37694	Bundy pipe from high-pressure pump to regulator, L = 610	1
94	BNT 76836	Clamp for regulator oil-drain hose to tank, Ø 13 x 16	1
95	PFN 51532	Bolt securing pressure regulator, Ø 7 x 1 x 70	1
96	PFN 45004	Grommet protecting oil-tank connection pipes, Ø 14 x 21	2
97	PFN 76861	Grommet protecting headlamp and brake-pump distributor pipes, Ø 20 x 30	3
98	BNT 35745	Grommet protecting Bundy pipes on left tunnel panel, Ø 36 x 40	1
99	122 FI 76816	Bolt Ø 6 x 1 x 45 securing oil-pump drive joint (through May 1973)	1
100	132 FI 77083	Spacer washer for high-pressure pump drive shaft (through May 1973)	1
101	RNT 47210	Complete welded shaft with flange for driving high-pressure pump	1
102	BNT 33170	Plain washer Ø 7 securing high-pressure pump drive shaft	6
103	122 FI 76801	Bolt Ø 7 x 1 x 18 securing high-pressure pump drive shaft joint	6
104	122 FI 76802	Complete pressure limiter with bracket and spring (from the specified chassis number)	1
105	122 FI 76888	Rear-brake pressure limiter (from the specified chassis number)	1
106	122 FI 76808	Pressure-limiter control spring (from the specified chassis number)	1
107	122 FI 76808	Spring centring ring (from the specified chassis number)	1
108	122 FI 60900	Pressure-relief valve (from the specified chassis number)	1
109	122 FI 61082	Bundy pipe from valve to rear-brake flexible hose, L = 330 mm (from the specified chassis number)	1
110	122 FI 61051	Bundy pipe from limiter to valve, L = 370 mm (from the specified chassis number)	1
111	RAMN 60210	Adjustable union Ø 9 x 1.25 x 22 x 48 for valve return-oil drain	1
112	MAN 73374	Hose Ø 5 x 10 x 100 from valve to 3-way oil-drain union (vehicles through May 1973)	1
113	RAMN 73012	3-way union and sleeve Ø 6 for the same (vehicles through May 1973)	2
114	MAN 73374	Sleeve Ø 5 x 12 x 400 for the same (vehicles through May 1973)	2
115	S 415 591	Oil-pressure accumulator in front and rear brake circuit	2
116	ZD 9333 100 U	Oil-seal rubber on front-brake accumulator outlet unions	2
117	ZD 9491 800 U	Oil-seal rubber between brake pump and distributor, Ø 4.2 x 8 x 1.9	6
118	S 411 230	Rubber-retaining plate for brake-pump oil seal	1
119	S 413 192	Connection screw for primary clutch-pump oil inlet pipe, Ø 10 x 1.5	1
120	ZC 9530 908 U	Seal for screw connection and oil-inlet pipe, Ø 10.5 x 25 x 0.8	1
121	S 406 657	Pipe and eyelet connecting primary clutch pump	1
122	ZD 9247 600 U	Oil seal between pipe/eyelet and primary clutch-control pump	1
123	S 406 647	High-pressure oil pump complete with pulley	1
124	ZC 9620 808 U	Collar for tank pipe to high-pressure pump	3

Table 24 - Braking system ring steering

Tafel 24 - Bremsanlage Rechtslenkung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 FC 80698	Bundy pipe from the double two-way on the tunnel to the distributor SvieL=mm. 1850 2	1
2	116/B FC 79770	Bundy tube from five-way divider to accumulators front and rear brakes L= mm. 180	2
3	101/3 FC 50685	Bundy hose from the front brake accumulator to the proportioner LI=mm. 680 LL	1
4	117 FC 74245	Bundy hose from the dispenser to the three-way door brake fitting riori L= mm. 450	1
5	117 FC 74229	Bundy hose from the front three-way brakes to the right brake caliper LI=mm, 1010	1
6	101/7 FC 52313	Bundy hose from the front brake three-way to the left brake caliper L=mm	1
7	122 FC 80699	Bundy hose from the rear brake accumulator to the proportioners brakes L= mm. 750	1
8	122 FC 80700	Bundy hose from the rear brake proportioner to the fitting joint L= mm. 2100	1
9	101/9 FC 58700	Bundy tube from five-way splitter to mul splitter headlight type L= mm. 2400	1
10	122 FC 80701	Bundy pipe from the multiple headlight distributor to the double three-way front L= mm. Ø 10. 0.0.0.	2
11	122 FC 80702	Bundy hose from the primary clutch master cylinder to the junction LI=mm. 1070	1
12	122 FI 80703	Bundy pipe from the junction to the secondary clutch master cylinder or L=nq mm. 2380 or e, e"---e, Å n	1
13	120 FI 79002	Multiple distributor complete with tap for headlight circuit	1
14	120 FI 80600	Flexible hoses for headlight control	2
15	117 FI 75372	Complete headlight lifting distributor support	1
16	MN 73374	Sleeve Ø 5 x 12 x 180 oil drain from headlight distributor at the Treve junction	1
17	MN 73374	Sleeve @ Sx 12 x 220 oil drain from the three meter dispenser clutch recovery tank delivery ways	1
18	PFN 51532	Grommet @ 14 x2 1 passage 'headlight lift oil drain pipes clutch oil recovery	4
19	MN 60008	Sleeve Ø 8 x 15 x 250 from the clutch oil recovery tank three-way delivery to the tank	1
20	MN 73374	Sleeve O Left 1: 2 x 250 from the three-way discharge meter to Primary clutch master cylinder	1
21	MN 60008	Sleeve Ø 8x 15 x 300 from the three-way dosing outlet to the clutch oil recovery tank	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità

serbatoi benzina e pompa
Table 25 - Fuel tank and pump

Tableau 25 - Reservoir de carburant et pompe
Tafel 25 - Kraftstoffbehälter und Pumpe

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 GS 77850	Tank complete with float (left)	1
2	FRN 37824	Clamp 2 13 x 19 holding tank connection pipes	15
3	TN 67814	Cap Ø 50 x 2.5 on the filler neck	1
4	GOM 50656	Rubber seal Ø 46 x 53 x 3 on the filler neck	1
5	PFN 56119	Grommet on the filler neck	1
6	C 114/1 MC 75455	Sleeve for petrol pipe	3
7	C 114 50 MC 78830	Fuel inlet pipe	1
8	MN 73375/2300	Sleeve Ø 10 x 17 x 2300 from the supply circuit vent	1
		tation to tank left 2	1
9	MN 60008/300	Sleeve 2) 8 x 5 x 300 for fuel return from carburettor	1
		tor to the tank. L. - PE - cs	1
10	122 CS 78836	Complete venting on the supply circuit	1
11	TPN 60537/110	Plastic pipe Ø 5 x 10 x 1100 from the ground vent	1
12	MN 73375/2300	Sleeve Ø 10 x 15 x 2300 from the supply circuit vent	1
		tation to the right tank	1
13	MN 60008/600	Sleeve Ø 8 x 15 x 600 from the fuel filter to the carburettors	1
14	122 CS 76355	Right fuel tank. N.L.	1
15	BNT 53968	Bolt Ø 1 x 20 fixing fuel filter	2
16	RSN 32690	Split washer QD 6 for the same	2
17	ANT 47074	Flat washer Ø 6 fixing fuel filter	2
18	107 CS 56400	Fuel filter regulator (up to the vehicle n	1
18	122 CS 80495	Fuel filter regulator (from car no	1
19	MN 60008/110	Sleeve Ø 8 x 15 x 100 from the fuel pump to the regulator filter	1
20	117 CS 77767	Pompa petrol tp. AEG	1
21	107/A BL 62615	Key and braid for clutch master cylinder mass	1
22	DNT 47047	Nut Ø 6 x 1 fixing fuel pump	4
23	RDI 53899	Washer D 6 fixing the fuel pump	4
24	SLN 62135	Silentbloc for fixing fuel pump	2
25	101/7 ME 52898	Capacitor for fuel pump shielding	1
26	MN 60008/80	Sleeve Ø 8 x 15 x 80 from the copper pipe to the fuel pump	1
27	TRN 73021/3000	Copper tube Ø 8x6 x 3000 from the fuel filter sleeve to the	1
		sleeve on the pump	1
28	MN 60008/180	Sleeve Ø 8 x 15 x 180 from the fuel filter to the copper pipe	1
29	FRN 79600	Fuel filter fixing clamp	1
30	VRT 56825	Self-tapping screw 2	1
31	MN 57231/40	Sleeve Ø 40 x 49 x 40 on the fuel filter	1
32	117 GS 77765	Fuel filter	1
33	MN 60008/145	Sleeve Ø 8 x 15 x 145 from the fitting to the fuel filter	1
34	FRN 37829	Clamp Ø 38-44 fixing coupling sleeve, tanks	6
35	MN 79017/0065	Right fuel tank connection sleeve n	2
36	122 CS 78191	Pipe for right tank connection	1
37	GN 49570	Gasket Ø 12.5x 18 x 3 for the same	1
38	TN 67205	Plug Ø 12 x 1.5 x 12 for petrol drain	1
39	PFN 54410	Grommet for petrol tank connection pipe	4
40	122 CT 78059	Fuel tank connection pipe	1
41	122 CS 78180	Left fuel tank connection sleeve	1
42	BNT 61985	Bolt Ø 4x 0.7 x 12 fixing level indicator	6
43	RNT 54607	Washer Q 4 for the same - o	6
44	122 CS 78846	Fuel level indicator	1
44	122 CS	Fuel level indicator (for right-hand drive). n	1
45	107/A CS 65463	Seal for: said	1
46	Non fornibile	Complete filter body, of membrane and valves (until April '73)	1
47	107 CS 58399	Fitting on the fuel filter body (until April 73)	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
48	107 CS 58400	Filter element complete with spring and gasket (up to	
		to the car. n	1
48	122 CS 80964	Filter element complete with spring and gasket (from	
		carrier n	1
49	107 CS 73474	Tray gasket (until April 73)	1
49	122 CS 81329	Tray gasket (from May '73)	1
50	107 CS 71261	Glass bowl (until April 73)	1
50	122 CS 81328	Glass bowl (from May 73)	1
51	122 BM 79653	Left petrol tank upper bulkhead	1
51	122 BM 79654	Upper right fuel tank bulkhead	1

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.
(206) 455-4449

Tavola 26 - Tubo di scarico
Table 26 - Exhaust pipes

Tableau 26 - Conduite d'échappement
Tafel 26 - Auspuff

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 CM 77851	Complete exhaust pipe assembly, of fixings	1
2	122 CM 79096	Right exhaust manifold coated	1
3	DN 78490	Nut Ø 10 x 1.25 on the exhaust manifolds	6
4	DRN 69934	From fitting Ø 10x 1.5 x 14 on exhaust manifolds	6
5	122 CM 76785	Exhaust manifold gasket	6
6	122 CM 79097	Coated left exhaust manifold	1
7	122 CT 79144	Protective bulkhead for the petrol tank connection pipe (right side)	1
8	122 CT 79146	Protective bulkhead for the petrol tank connection pipe (left side)	1
9	BNT 56900	Bolt Ø 8 x 1.5 x 40 fixing silenced sealing band	8
10	DST 48101	Nut Ø 8 x 1.25 fixing anti-vibration support and clamp	14
11	107 CM 56644	Seal ring between manifolds and exhaust silencers	4
12	107 CM 56658	Clamp for the same	8
13	122 CM 75986	Right side silencer	1
14	122 CM 75918	Left side silencer	1
15	122 CT 79915	Ama brake cable protection bulkhead	1
16	122 CM 75908	Rear silencer	1
17	RNT 55372	Flat washer Ø 8x2 x 18 fixing poster door bulkhead	2
18	122 CT 78920	Rear part bulkhead, complete with asbestos cladding	1
19	VAT 49217	Screw Ø 3.58 x 9.52 for bulkhead fixing	11
20	RNT 67011	Flat washer Ø 6 x 13 x 1.5 bulkhead fixing	11
21	BNT 47014	Bolt Ø 8 x 1.5 x 45 fixing anti-vibration supports for you superior	4
22	BNT 55366	Bolt Ø 8 x 1.5 x 50 fixing anti-vibration supports for you inferior	4
23	GN 70805	Anti-vibration mount protection gasket	12
24	101/9 16560 54086	Anti-vibration support support plate	16
25	SLN 72711	Anti-vibration support	4
26	GN 54089	Gasket Ø 9x 11 x 15 anti-vibration support protection	4
27	DN 33691	Nut Ø 8 x 1.5 x 8 fixing exhaust manifolds	12

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.
(206) 455-4449

Tavola 27 - Strumenti cruscotto
Table 27 - Dashboard instruments

Tableau 27 - Tablier des instruments
Tafel 27 - Armaturenbrett und instrumente

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	117 FI 75293	Headlight raising control distributor with knob	1
2	117 BO 75334	Plate with symbols for the headlight lifting control lever	1
3	DNT 62556	Nut Ø 3x0.5 fixing headlight control lever mask	2
4	RDI 61198	Serrated washer D 3 for the same	2
5	RNT 47373	Flat washer D 3 for the same	2
6	117 BC 75332	Frame for headlight control lever mask	1
7	117 FI 75378	Knob for headlight distributor	1
8	122 BV 79052	Cabin ventilation butterfly on the left side dashboard	1
9	122 BV 79053	Extension horn for the same	1
10	122 BV 79054	Interior ventilation butterfly assembly assembly	1
		It on the left side dashboard	1
11	BC 78344	Lamp holder for clock	1
12	BL 70151	AUTOVOX type radio mounted in series	1
12	109/A BL 70300	BLAUPUNKT KOLEN type radio on request	1
12	122 BL 79588	BLAUPUNKT GOSLAR type radio on request	1
13	116 BV 68082	Adjustable butterfly valve for heating and air conditioning	2
14	122 BR 79434	Control panel, frame and butterfly assembly assembly	1
		for conditioning	1
15	122 BR 77487	Control panel assembly without frame	1
16		Resistor for heating and air conditioning motor	1
		with four speeds	1
17	116/B BL 79479	Complete electric antenna tp. HIRSCHNAMN HIT 7600	1
18	122 BL 79279	PHILIPS noise filter n. 481990101633	1
19	5 407 136	Transmission km counter, complete	1
19	122 TC 80594	Transmission km counter, complete (for right-hand drive)	1
20	5 407 682	Support for aerator on the dashboard	2
21	5 407 140	Odometer complete with reset	1
21	5 407 143	Odometer complete with reset	1
22	5 407 146	Plate fixing the speedometer, rev counter and warning light block	1
23	5 407 141	Tachometer	1
24	5 420 673	Lamp holder for dashboard instruments	4
25	5 407 138	Indicator block	1
26	DX 9522 299 A	Lamp holder for the same	15
27	DX 521 261	Bayonet lamp holder	1
28	5 407 142	Clock frame	1
29	5 407 137	Clock n N I I O. and and. " or	1
30	5 407 674	Adjustable aerator on the dashboard (right side)	1
31	5 407 681	Aerator fixing bracket	1
32	5 407 157	radio antenna and window control switch	3
33	5 407 159	Interior light control switch	1
34	GX 4121 401 A	heated rear window heater control switch	1
35	GX 4121 201 A	Stop light control switch	1
36	5 424 559	fog light control switch	1
37	5 407 135	Plug for hole on dashboard	1
38	5 418 916	Water thermometer	1
39	5 418 915	Fuel level indicator	1
40	122 BC 81035	Oil thermometer	1
41	5 401 680	Starter control pull complete with sheath and cable	1
42	5 401 714	Cigarette lighter	1
43	GX 4134 001 A	Button with resistance	1
44	GX 4134 201 A	Resistance for:sald	1
45	5 401 373	Spacer washer for the same	1
46	5 418 919	Base with circuit inserted	1
47	5 405 048	Lamp for control panel	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
48	5 405 039	Knob for hot and cold air control lever	1
49	5 405 040	Frame for control panel	1
50	5 405 041	Spring for heating and singeing door	1
51	5 405 046	Thermostat control spring	1
52	5 405 044	Mask on the panel for control levers	1
53	5 405 024	Grid on the control panel	2
54	5 405 025	Knob for the same	2

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.
(206) 455-4449

Tabella 28 - Strumenti cruscotto guida destra
Table 28 - Dashboard instruments ring steering

Tableau 28 - Tablier des instruments direction à droite
Tafel 28 - Armaturenbrett und instrumente Rechtslenkung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	117 BC 75677	Complete speedometer odometer reset rod	1
1	117 BC 75678	Odometer speedometer complete with reset rod	1
2	115 BC 65213	Oil pressure gauge	1
3	117 BL 75617	Bipolar red warning light for front brake wear (from the 20th car). 2	1
4	117 BL 75617	Bipolar red warning light to indicate handbrake engaged and brake oil pressure (from the 20th car onwards)	1
5	122 BC 80766	Electromechanical tachometer	1
6	116 BL 66815	Timer for full wiper intermittency	1
7	116 BL 67765	emergency light switch	1
8	101/8 BL 54178	Single-pole yellow warning light for rear window demisting	1
9	116 BV 68082	Adjustable butterfly valve for air conditioning and re heating	6
10	115/A BL 72426	Interior ceiling light control switch	1
11	115/A BL 69532	switch for adjusting dashboard lights	1
12	115/A BL 69530	2-speed heating fan control switch	1
13	115/A BL 69531	heated rear window defrost control switch	1
14	117 FI 75293	Complete distributor for headlight lifting control	1
15	117 BC 75334	Plate with symbols for lifting lever mask, headlights	1
16	117 BC 75332	Frame for headlight lifting plate	1
17	115 BL 73910	Electronic antenna lifting switch	1
18	117 BL 75211	position light switch. 2	1
18	115/A BL 69528	Fog light switch (optional)	1
19	116 BR 72102	Ranco type thermostat	1
20	116 BR 72179	Ring nut fixing thermostat to the dashboard	1
21	107/A BR 67734	Thermostat control panel	1
22	117 BV 71577	central throttle control switch for heating system	1
23	117 BV 74768	Lever finishing mask and heating control unit	1
24	117 BV 75125	Function frame for heating control unit (from 23rd car no.)	1
24	117 BV 76105	Complete frame, for throttle control unit, for U.S.A	1
25	117 BV 74776	Spacer on the starter and heating control levers	2
26	ART 74786	Seeger Q@ 5 for the same	1
27	117 BV 74770	Starter control lever	1
28	NPL 48847	Nipples fixing sheaths on the heating and starter levers	2
29	BNT 50309	Bolt Ø 5x0.8 x 8 on the sheath fixing nipples	2
30	RDI 53699	Serrated washer @ 6 for the same	2
31	DNT 47047	Nut Ø 6x1 for the same	2
32	117 BV 74769	Support for heating control levers	1
33	117 BV 74771	Heating control lever	1
34	NPL 55688	Nipples for heating and starter cable control	2
35	VN 57637	Screw Ø 5x0.8x8 for the same	2
36	GM 64833	Split pin Ø 1.3x 10 for the same	2
37	107 BV 56399	Heating and starter lever knob (up to the 13th car)	2
37	117 BV 75657	Heating lever knob, and starter (from the 14th car onwards)	2
38	117 BV 75123	Complete frame for heating and starter levers (from 24th car onwards)	1
38	117 BV 76103	Complete frame, for starter and heating levers, for U.S.A	1
39	DNT 62557	Nut Ø 4x0.7 fixing control unit and heating lever support	4
40	RDI 58543	Serrated washer D 4 for the same	4
41	RNT 54507	Flat washer D 4 for the same	4
42	117 BV 74777	Pin for heating and starter lever fulcrum	1
43	RAT 45680	Wavy washer Ø 84x15 x0.5 for the same	1
44	117 BV 74778	Washer for starter lever clutch and heater	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
45	RNT 55379	Flat washer @ B84x18x2	1
46	ART 71509	Seeger @ 8 fixing heating lever and starter	1
47	115 BL 67105	switch to control the electric windows and doors	2
48	101/8 BL 54556	Bipolar red fuel reserve warning light	1
49	117 BC 73852	Electric clock @ 582	1
50	117 BC 72880	Thermal voltmeter	1
51	115 BC 65214	Oil thermometer	1
52	115 BC 65216	fuel level indicator	1
53	115 BC 65215	Water thermometer	1
55	117 BV 77218	Starter and heating control levers and support assembly	1
55	117 BV 77222	Assembly of support and starter and heater control levers chin for right-hand drive	1
56	117 FI 75378	Panel for headlight switch	1
57	117 BL 77878	Fuel pump control diverter	1
58	117 BL 78071	switch for double ignition	1
59	115/A BL 76885	Horn horn control switch (from the 149th vehicle onwards)	1
60	122 TC 80594	Sheath, mileage control hose	1

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.
(206) 455-4449 love

Tavola 29 - Fanaleria
Table 29 - Lights

Tableau 29 - Lumieres
Tafel 29 - Beleuchtung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 BL 80956	Complete front headlight (without frame)	2
1	122 BL 80957	Complete front headlight for right-hand drive	2
2	117 BL 75323	Raw frame covering the front lights	2
3	VAT 59185	Self-tapping screw Ø 2.84 x 9.52 fixing corn. front lights	4
4	117 BL 77297	Internal ring for fixing the group	2
5	117 BL 77517	Optical unit complete with double-light iodine lamp	2
5	117 BL 73977	Yellow light iodine optical unit for France	2
5	122 BL 79487	Iodine headlight unit for right-hand drive	2
6	LPN 79129	High iodine lamp for front headlights and fog lights	6
6	LPN 63257	Iodine lamp for front headlights tp. France	4
7	122 BL 77194	Container for front lights	2
8	PFN 50304	Grommet Ø 16x20 for passage of headlight and front light cables	4
9	117 BL 75892	Additional yellow iodine headlight	2
9	117 BL 75893	Additional white iodine headlight	2
10	117 FI 73321	Cylinder for front headlight lifting control	2
11	117 FI 74172	Front headlight lifting control cylinder sealing clamp	2
12	117 FI 73404	Spring for front headlight lifting control	2
13	BNT 48831	Bolt Ø 10 x 1.5 x 30 fixing lift control cylinder	2
		chin headlights	2
14	RNT 65593	Flat washer Ø 10 for the same	2
15	DNT 47024	Nut Ø 10x 1.5 for the same	4
16	RAT 68720	Spring washer Ø 10 for the same	2
17	BNT 47370	Bolt Ø 5 x 0.8 x 16 fixing the cylinder sealing band sol	4
		raising the headlights	4
18	RSN 32497	Split washer Ø 5 for the same	4
19	RNT 52530	Split washer 2.5 for the same	4
20	VNT 50300	Screw Ø 8x 1.5 x 25 hexagon socket fixing spring	2
		raising the headlights to the cylinder	2
21	DST 53397	Self-locking nut Ø 8x1.5x 10.3 for the same	2
22	BNT 54584	Bolt Ø 6x1 x50 fixing the headlight lifting spring to	2
		the headlight box. 2	2
23	RNT 67011	Flat washer Ø 6 for the same	2
24	DST 68045	Self-locking nut Ø 6x 1x5 for the same	2
25	117 BM 75518	Complete pin for projectile emergency support lever, front	2
26	RN 75246	Friction washer Ø 16.5 x Ø 2 x 3 for emergency control	4
		za headlight eyelid support	2
27	RN 75247	Washer Ø 9.5x Ø 2 x 1.5 for the same	2
28	117 BM 75245	Lever for emergency support of front headlight lids	2
29	RNT 67011	Washer Ø 6x13x 1.5 for the same	2
30	DST 51417	Self-locking nut Ø 6x1x5.8 for the same	2
31	115/A BL 73230	Complete right rear light	1
31	115/A BL 73231	Complete left rear light	1
31	115/A BL 70726	Right rear light for France	1
31	115/A BL 70727	Left rear light for France	1
32	115/A BL 72232	Right rear methacrylate	1
32	115/A BL 72233	Left rear methacrylate	1
32	115/A BL 70728	Right rear methacrylate for France	1
32	115/A BL 70729	Left rear methacrylate for France	1
33	115/A BL 75034	Right rear light crankset	1
33	115/A BL 75035	Left rear light crankset	1
34	117 BL 77300	Body for right rear light (not available separately)	1
34	117 BL 77301	Body for left rear light. (not available separately)	1
35	116 BL 69005	Rear reflector	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
36	LPN 48147	12v 5/20 W rear position and stop light lamp bulb	4
		Front position and direction	4
36	LPN 48146	12 V 5 W direction indicator lamp for France and Germany	4
36	LPN 50810	12V 5W position light lamp bulb for France and Germany	2
37	LPN 57254	12 V 5 W position light lamp bulb, in headlamps for Germany	2
38	LPN 48146	12 V 20 W lamp for rear and rear flashlight	4
39	LPN 48151	12 V 5/20 W lamp for direction lights, side and license plate lights	4
40	109/A BL 62599	Right front taillight with position and direction lights	1
40	109/A BL 62600	Left front taillight with position and direction lights	1
40	112 BL 70718	Right front taillight, and direction, for France	1
40	112 BL 70719	Left front turn signal light, and position for France	1
41	115/A BL 70721	Light for license plate lighting	2
42	117 BL 73561	Direction side light	2

Tabella 30 - Equipaggiamento elettrico
Table 30 - Electrical equipment

Tableau 30 - Equipement électrique
Tafel 30 - Elektrische Ausrüstung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	117 BC 74554	Windshield washer reservoir	1
2	117 BC 74580	Double windshield washer sprayer, 2	1
3	VAT 48513	Self-tapping screw Ø 4.85 x 12.7 fastening the windshield washer motor to the frame	2
4	RNT 55530	Washer Ø 5 for the same	2
5	TPN 50544	Windshield washer motor tray connection pipe mm. 450	1
6	TPN 54678	Pipe connecting windshield washer motor and sprayer mm. 350	1
7	115/A BC 73783	Exterior rear-view mirror (for Switzerland)	1
7	115/A BC 70815	Exterior rear view mirror (for Germany, Austria and Australia)	1
8	122 BL 76196	electrical system complete with terminal valve box and terminal blocks (for left-hand drive) 2	1
8	122 BL 80778	electrical system complete with terminal valve box and terminal blocks (for right-hand drive) 2	1
9	122 BL 78917	16-valve fuse box complete with cover (for axle guide)	1
10	102 BL 78501	16-valve fuse box cover complete with plate (for left-hand drive) 0.0.	1
11	122 BL 80601	Complete fuse box (for right-hand drive)	1
12	116/B BL 78225	15 AMP 2-valve fuse box, (for right hand drive)	1
13	107 BL 56833	push button switch for door opening lights	2
14	118 BL 67081	Complete single-sound horn compressor, 2	1
15	148 BL 70075	Pneumatic horns with one sound 0.2	1
15	122 BL 80946	Single sound pneumatic horns (for Switzerland)	1
16	85 17336 50348	400 Hertz city horn	1
17	TPN 59683	Plastic tubes send air to the horns	3
18	107 BL 57684	3-way fitting for air delivery pipes to the horns	1
19	122 BL 77295	Battery fixing bracket	1
20	DST 51417	Stop nut Ø 6 x fixing the battery bracket to the frame	1
21	RNT 67011	Flat washer Ø 6x GX 1.5 for the same	1
22	122 BL 76388	Complete cable for connecting the battery and starter motor	1
23	117 BL 73631	Complete Cavo for battery ground on the frame	1
24	117 BL 76890	Complete braided cable for ground between engine and chassis	1
25	122 BL 76592	Braided cables for car radio exhaust pipe earth	2
26	122 BL 77182	680 Ahour power supply battery	1
27	122 BL 76057	Relay for lighting circuit control n. 2 and solenoid valve n. 1	3
28	109/A BL 62673	Relay for engine fan control, 2	2
29	109/A BL 62673	Relay for heating fan control	1
30	107 BL 57278	Flashing device for direction lights	1
31	108 BL 56628	Headlight with Switch for boot compartment and bonnet	3
32	107 BL 56033	Ceiling light for interior lighting	1
33	117 BL 73882	Motor for windshield wiper control (for left-hand drive)	1
34	117 BL 74801	Motor for windshield wiper control (for right-hand drive)	1
35	117 BL 77283	Support for windshield wiper motor, 2	1
36	117 BL 71388	Complete windshield wiper arm holder pin	2
37	117 BL 71846	Tie rod between motor and windshield wiper transmission	2
37	117 BL 72897	Left brush holder arm	1
37	117 BL 73096	Right brush holder arm 22222	1
38	117 BL 72898	18" windshield wiper blade 2	2
39	102 BL 70631	Switch for direction lights and horn	1
40	122 BL 18952	Switch for headlight control, 2	1
41	LPN 48150	12 V 5 W torpedo lamp for trunk light, passenger compartment engine	4
42	VNT 59092	Screw Ø 5x0.8 x 15 fixing valve box	2
43	RNT 35345	Gondella plana 2.5x 18l for the same ngio/ plafoniera beute, 'motore 6	2
44	VAT 71785	Tapping screw " 3.50 x 15.67 fixing trunk light, engine beute	6
45	VAT 59825	Self-tapping screw Ø 3.50 x 12.7 fixing door opening lights	4
46	DNT 47031	Nut Ø 8 x 1.5 x 6.5 for fixing horns	1
47	RSN 32635	Split washer Ø 8 for the same	1
48	GOM 52624	Rubber Ø 8 x 15 x 17 on the wiper motor support bolt	4
49	GOM 52625	Rubber Ø 15 x 30 x 7 between wiper motor support and frame	8
50	RSN 52510	Washer Ø 6.5 x 32 x 2 for windshield wiper rubber seal	4
51	DST 68137	Stop nut Ø 8 x 1.25 for fixing the windshield wiper motor to the support	4
52	DNT 71845	Nut 2.58" x 24 UNF fastening wiper rods to the pins	2
53	DNT 47047	node (a Connection of exhaust pipe mass cables to the frame	2
54	RNT 67011	Washer Ø 6 for the same, 2	2
55	DNT 47031	Nut Ø 8 x 1.25 fixing engine mass and battery to the frame	2
56	RNT 55370	Washer Ø 8x 17 x2 for the same	2
57	DNT 82557	Nut Ø 4x 0.7 fixing engine fan relay, LL SHE	3
58	RNT 54507	Rondella Ø 4x9x 1 per said	3
59	BNT 57199	4 x 0.7 x 10 bolt fixing wiper and turn signal switches to the column	6
60	RNT 54507	Flat washer Ø 4x9x 1 per said	6
61	107 ME 60013	2.2/UF capacitor for wiper motor shielding	1
62	101/7 ME 52898	0.5/UF capacitor for shielding, heating fan and engine fan	3
63	107 BL 55988	Door opening warning light	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
64	116 BL 67757	Relay for pneumatic horn control	1
65	122 BL 79370	Double exchange switch for fog lights control (on request)	1
66	122 BL 79589	Fog light relay fixing bracket	1
67	117 BL 77070	Return bracket for windshield wiper rods	4
68	RAT 43678	Wavy washer Ø 6.4 x 11 x 0.5 for wiper bracket	2
69	117 BL 77072	Joint for windshield wiper transmission, 2	2
70	RAT 45881	Washer Ø 10.5 x 18 x 0.8 for windshield wiper return joint	2
71	117 BL 77073	Stopper for windshield wiper return joint	2
72	GOM 61051	Rubber Ø 9.6 x 12.7 on the windshield wiper transmission	12
73	117 VL 77074	Bush on the windshield wiper control shaft	3
74	117 BL 77075	Spacer on the windshield wiper control shaft	2
75	GN 77078	Gasket Ø 0 x Ø 8 x 2 on the windshield wiper control shaft	2
76	117 BL 77076	Washer on the windshield wiper control shaft spacer	2
77	DN 77078	odor on a SCH 24 (spagge wiper return to search, parte sup	2
78	RN 75803	Flat washer Ø . 0.7 x 16 x 0.5 on the windshield wiper drive shaft	2
79	ART 70497	Stop ring Ø 78x 17x 1 for the same, 2.1	2
80	117 BL 77077	conical coupling for windshield wiper blade	2
81	DNT 77080	Blind nut Ø 1/4" x 28 UNF fixing wiper blade	2
82	NY 635 - 1A	Stator regulator, 0.222	1
83	5 403 115	Wiper and windshield lever control tenor on	1
84	5 407 172	Windscreen wiper timer, 2.2	1
85	5 407 161	Rheostat for dashboard instrument lighting control	1
86	S 545 121 A	Ceiling light complete with lamp for starter lighting	1
87	DX 564209 A	Windshield washer motor	1

Tableau 31 - Sonde-manocontact
Tafel 31 - Warnlichtschalter

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	5 412 349	Thermocontact on the water radiator. e	1
2	5 415 605	Minimum circuit oil pressure manometric switch	1
		to brakes (calibration 110 120 Km/cm')	1
3	FI 73 000	hydraulic switch to control stop lights and lights	2
		location	1
4	114 50 30 ML 81150	Probe for water temperature on the water outlet manifold	1
4	107 ML 54811	Probe for water temperature on the water outlet manifold	1
		for right-hand drive	1
5	5 416 294	reverse light control switch	1
6	115/A BL 75991	switch on the brake control lever	1
7	5 407 539	Oil temperature probe on the front cover	1
7	107 ML 54811	Oil temperature probe on the cover for right-hand drive	1
8	5 418 460	Thermocontact for water circuit alarm light	1
9	5 403 215	Oil pressure transmitter probe	1
9	114 50 30 ML 79875	Oil pressure switch for right-hand drive	1
*	114 50 30 ML 79874	Oil pressure indicator lamp bulb for right-hand drive	1
*	11450 30 ML 79824	Connection for the same	1

* Particolari senza numero shown and not illustrated

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
		EEA sig e CU CINE AIA TODD Ala aere-e CE EEEze 8 Cce n EE Aeeem lende	
		WORRE MILE. CORP WORLD'S LARGEST VINTAGE MASERATI SALES, RESTORATION & PARTS Merrill tel. 212 BOX 112 Tel. Ø 06. 4551449 FAX 206 - 646-5458	

Tavola 32 - Scocca anteriore

Table 32 - Front body**Tableau 32 - Carrosserie av.****Tafel 32 - Vordekarrosserie**

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	117 BT 76931	Complete front curved assembly	1
1	117 BT 80068	Front assembled group, complete curve for right hand drive	1
1	117 BT 77231	Front assembly without bend	1
2	122 BT 80858	Roof complete with rear window ring with curve and trim	1
		windscreen columns	1
3	122 BT 80859	Aluminum engine bonnet	1
4	122 BT 80860	Rear complete with mudguards and rear fascias (fa	1
		upper trail and headlight housing)	1
5	122 BM 79154	Engine bonnet hinge, 2.2	2
6	117 BM 77232	Right boot lid hinge	1
6	117 BM 74925	Left boot lid hinge 2	1
7	BNT 75607	Bolt Ø 8x1.5x 16 fixing engine bonnets and trunk	8
		at - 0 - le o. - l and l ₁	8
8	RNT 71306	Flat washer Ø 8x 15 x 1.5 for the same	8
9	RDI 55990	Serrated washer Ø 8 for the same	8
10	117 BO 74927	Lower door hinge	2
11	117 BO 74928	Upper right door hinge with built-in limit switch	1
11	117 BO 74929	Upper left door hinge with built-in limit switch	1
12	117 BO 74950	4-hole plate for upper internal door hinge	2
13	117 BO 74951	3-hole plate with lower internal door hinge	2
14	VNT 72257	Screw Ø 8 x 1.5 x 18 fixing door hinge	22
15	117 BO 76937	Pin Ø 8 x 75 for door and bonnet hinges	6
16	ART 71509	Stop ring for the same	12
17	VNT 68537	Screw Ø 6x 1 x 15 fixing the trunk lid hinge to the frame	4

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità

Tavola 33 - Carrozzeria nuda
Table 33 - Body shell

Tableau 33 - Carrosserie brute
Tafel 33 - Karosserieeinzelteile

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	117 BT 76938	Upper grille cross member	1
2	117 BT 76939	Lower grille cross member	1
3	117 BT 75862	Right headlight lid 2	1
4	117 BT 75863	Left headlight lid	1
5	117 BL 75867	Eyelid switch plate for Germany	1
6	117 BT 76271	Left triangle for headlights	1
7	117 BT 76272	Right triangle for headlights	1
8	117 BT 76972	Front headlight eyelid fulcrum pin	2
9	117 BT 77250	Right front mudguard	1
10	117 BT 77249	Left front mudguard	1
11	117 BT 76942	Front bonnet	1
12	117 BT 76943	Windshield curve for left-hand drive	1
12	117 BT 76947	Windshield curve for right-hand drive	1
13	117 BT 76944	Set of front grille attachment brackets	1
14	117 BT 76945	Front bracket for Maserati frieze attachment	1
15	117 BT 76946	Right door	1
16	117 BT 76948	Left door 0.02	1
17	122 BT 80862	Right windshield column covering	1
18	122 BT 80861	Left windshield column covering	1
19	122 BT 80863	Headlining	1
20	122 BT 80864	Rear window ring with curve	1
21	122 BT 77524	Rot Bar right rear tail	1
22	122 BT 77525	Rear left tail No	1
23	117 BT 76953	Support for left armrest holding bracket	1
23	117 BT 76971	Support for right armrest holding bracket	1
24	117 BT 76954	Armrest holding bracket	2
25	VAT 56825	Self-tapping screw, Ø 3.58 x 12.7 fixing bracket to the armrest	4
26	117 BT 77308	Right front wheel arch reinforcement	1
26	117 BT 77309	Left front wheel arch reinforcement	1
27	122 BT 80865	Upper back band	1
28	122 BT 80866	Rear central band housing the headlights	1
29	117 BT 76970	Rear lower part	1
30	122 BT 80868	Right rear mudguard	1
31	122 BT 80867	Left rear mudguard	1
32	122 BT 80869	Rear window curve	1
33	122 BT 80870	Stainless steel fuel filler tray	1
34	122 BT 80290	Lid for fuel tank	1
35	122 BT 81082	Right branch	1
36	122 BT 81081	Left branch	1
37	122 BT 80291	Left sill covering in aluminum (up to 186° vehicle)	1
37	122 BT 80293	Left sill covering in aluminum (from 186° vehicle inpo)	1
38	122 BT 80292	Right side sill covering in aluminum (up to 186° vehicle). 2	1
38	122 BT 80294	Right side sill covering in aluminum (from 188° car then)	1
39	BNT 53969	Bolt Ø 5x 0.8 x 10 fixing the fuel filler door	2
40	RNT 35345	Washer Ø 5x 14x 1 per said	2
41	122 BT 80295	Right carburetor air intake support	1
42	122 BT 80296	Left carburetor air intake support	1
43	122 BT 80856	Right Rot Bar internal sheet metal	1
44	122 BT 80855	Left Rot Bar internal sheet metal	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
45	VAT 80116	Self-tapping screw Ø 2.84 x 12.7 cross tray fastening	
		fuel filler	4

MASERATI INFORMATION EXCHANGE
P. O. BOX 772
MERCER ISLAND, WASHINGTON 98040 U.S.A.
(206) 455-4449

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 BA 78147	Front bumper left	1
2	122 BA 78146	Front bumper right 2.0.2	1
3	117 BA 75676	Front trident. 0.2	1
4	122 BA 79181	Front license plate holder	1
5	117 BA 75550	Support for rear bumper attachment	2
6	117 BA 73500	Rear bumper	1
7	VAT 65601	Self-tapping screw Ø 4.85 x 12.7 for fixing the front license plate holder	2
8	BNT 53968	Bolt Ø 6 x 1 x 20 fixing front bumper	4
9	RNT 54593	Washer Ø 6x 19x 2 for the same	4
10	DNT 47047	6x1 QD nut for the same	4
11	BNT 47015	Bolt Ø 8x 1.5 x 20 fixing rear bumper	6
12	RDI 55900	Spring washer D 6 for the same	4
13	RN 43775	Flat washer Ø 8x22x2 for the same	4
14	117 BM 74790	Front air intake frame on the boot lid	1
15	117 BM 76716	Grille for front air intake on the boot lid	1
16	117 BM 75976	Complete rear grille	1
17	122 BM 79315	Rear mudguard air intake grille, complete frame	2
18	122 BT 78600	Stainless rear window seal	1
19	122 BT 78028	Right gutter cover. 2	1
19	122 BT 78029	Left gutter cover	1
20	122 BM 79318	Rear mudguard grill fixing support	6
21	116 BM 70604	Rear license plate holder. 0 LN	1
22	122 BM 79056	Grille for bonnet air intake	4
23	122 BL 79379	Screw complete with washer and rear license plate holder fixing nuts	4
24	VAT 74974	Self-tapping screw Ø 3.4 x 12.7 fixing rear cowl	8
25	122 BM 80188	Net for bonnet grille. L.A	2
26	DNT 62557	Nut Ø 4x0.7 fixing paraf. air intake grilles. post	6
27	RDI 58543	Serrated washer D 4 for the same	6
28	VAT 79167	Self-tapping screw Ø 3.58x 12.7 burnished for fixings or grilles	
		the bonnet	32
29	117 BO 75546	Right door sill plate 0 NA	1
29	117 BO 75545	Left door kickplate	1
30	PRN 71020	Rubber profile for door lap. 4	2
31	122 BT 78200	White rear window	1
31	122 BT 78201	Heated and tinted rear window (optional)	1
32	122 BT 79195	White windshield glass	1
32	122 BT 80132	Tinted windshield glass (optional)	1
33	117 BT 73484	Windshield frame complete with joint covers	1
34	117 BT 75612	Joint covers for windshield frame	2
35	PRN 79270	Black rubber profile for rear window glass. mt. 2.70	1
36	PRN 73549	Profile for windshield glass mt. 4	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità

Tabella 35 - Rivestimenti interni
Table 35 - Internal upholstery

Tableau 35 - Recouvrement interieur
Tafel 35 - Innenpolsterung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 BP 79232	Copricambio grazzo (fino alla 186ª vettura)	1
1	122 BP 80636	Raw gearbox cover (from the 186th car onwards)	1
1	122 BP 80637	Covered gear cover complete with gear lever gaiter without panel rear (up to 186ª car)	1
1	122 BP 80636	Coated gearbox cover complete with gear lever gaiter without brush rear (from 186ª input car)	1
1	122 BP 80638	Coated gearbox cover complete with rear brush and lever gaiter change (up to the 186th car)	1
1	122 BP 80637	Covered gearbox cover complete with rear panel and lever gaiter change (from the 186th input car)	1
2	122 BP 79234	Rear panel for gearbox cover complete with fixing screws, rough	1
2	122 BP 80639	Rear panel for gearbox cover complete with fixing screws, coated	1
3	122 BP 80358	Gear lever gaiter 0.2	1
4	122 BP 79137	External side panel next to the pilot's feet, raw	1
4	122 BP 80640	External side panel next to the pilot's feet, covered	1
5	122 BP 79138	External side panel next to the passenger feet, rough	1
5	122 BP 80641	External side panel next to the passenger feet, coated	1
6	122 BP 79238	Rear window frame, raw	1
6	122 BP 80642	Rear window frame, coated, 2	1
7	122 BP 79239	External right box next to the rear seat, raw	1
7	122 BP 80643	External box on the right side of the rear seat, covered	1
7	122 BP 80694	External right box next to the rear seat covered and complete with central panel	1
8	122 BP 79240	Left external box next to the rear seat, raw	1
8	122 BP 80644	Left external box next to the rear seat, covered	1
8	122 BP 80693	Left external box next to the rear seat, covered and complete Central panel	1
9	122 BP 79241	Central panel for rear seat side boxes, raw	2
9	122 BP 80645	Central panel for left rear box, covered	1
9	122 BP 80646	Center panel for right rear box, coated	1
10	122 BP 79242	Door under dashboard to protect valve box, rough	1
10	122 BP 80647	Door under dashboard to protect valve box, coated and complete of coemiers	1
11	122 BP 79243	Brass hinges for valve protection door	1
12	117 BC 73307	Anchor or Ø on the tunnel compl let SN and L.I.	1
13	122 BC 76311	Key ring for dashboard drawer door lock	1
14	117 BO 76375	Key for dashboard drawer door lock block	3
15	122 BC 76475	Glovebox as LLP one	1
16	122 BC 78940	Radio support plate, raw, 2a	1
16	122 BP 80636	Radio support plate, covered	1
17	116 BL 79676	Left side lower dashboard fixing spoke, for manual cars radio songs	1
18	122 BP 79245	Front right tunnel panel, raw (up to 186th car)	1
18	122 BP 80638	Front right tunnel brush, raw (from 186ª car onwards)	1
18	122 BP 80648	Front right tunnel panel, covered (up to 186ª car)	1
18	122 BP 80639	Front right tunnel panel, covered (from the 186th car onwards)	1
19	122 BP 79246	Front left tunnel panel, raw (up to 186ª car)	1
19	122 BP 80640	Front left tunnel panel, raw (from 186th car onwards)	1
19	122 BP 80540	Front left tunnel panel, covered (up to 186th car)	1
19	122 BP 80841	Front left tunnel panel, covered (from 186th car onwards)	1
20	122 BP 79247	Right panel under dashboard above the tunnel panel, raw	1
20	122 BP 80350	Right panel under dashboard above the tunnel panel, coated	1
21	122 BP 79248	Left panel under dashboard above the tunnel panel, raw	1
21	122 BP 80651	Left brush under dashboard above the tunnel panel, covered	1
22	VAT 76354	Self-tapping screw Ø 2.84 x 18.05 fixing tunnel and side panels	15
23	SVT 76370	Subscrew Ø 3 for the same, or	15
24	VAT 58534	Self-tapping screw Ø 2.84 x 9.52 fixing valve protection door	5
25	122 BC 79123	Dashboard side fixing plate	1
26	122 BC 79130	Anchors fastening the instrument panel to the lower frame	1
27	122 BC 79368	Support for hydraulic control of lifts and radio holder	1
28	122 BC 79861	Valve box door fixing bracket	1
29	DNT 79835	Nut Ø 15 x 22 fixing seat for valve box door pin	1
30	GRS 79852	Seat for valve box door fixing pin	1
31	ART 79853	Stop ring Ø 7.74 for valve box door fixing pin	1
32	GRF 79837	Valve box door fixing pin - l	1
33	VNT 79127	Screw Ø 5 x 0.8 x 15 for lower instrument panel fixing	1
34	VNT 79180	Screw Ø 5x 0.8 x 165 TC fixing instrument panel	3
35	BNT 34770	Bolt Ø 5 x 0.8 x 19 lower fixing, platform to the upper tie rod, radio holder	1
38	RN 50346	Washer Ø 5.5 x 16 X-1 for the same	1
37	VAT 58622	Self-tapping screw Ø 2.84 x 19.05 TC fixing the lower platform to the radio holder support tie rod	1
38	VAT 79087	Self-tapping screw Ø 3.4 x 15.87 TC fixing dashboard drawer	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
39	GRF 79088	Paperclip for the same	2
40	VAT 79089	Self-tapping screw Ø 3.0 x 4 x 19.05 TS fastening the dashboard door	4
41	GRF 79088	Paperclip for the same	4
42	BNT 34770	Bolt Ø 5x 0.8 x 12 fixing dashboard switch support	2
43	RDI 58544	Serrated washer for the same	2
44	RNT 54593	Flat washer Ø 6x 19 x 2 for the same	2
45	VAT 58062	Self-locking screw Ø 2.64 x 15x87 for the same	3
46	DNT 77777	Nut Ø 5x0.8 for lateral dashboard mounting on the floor	2
47	RDI 58544	Serrated washer Ø 5 for the same	2
48	RN 54593	Flat washer Ø 6x 19 x 2 for the same	2
49	BNT 78568	Bolt Ø 5x 0.8 x 16 fixing radio holder	4
50	RDI 58944	Serrated washers Ø 5 for the same, 2	2
51	RNT 50346	Flat washer Ø 6x16 x 1 for the same	4
52	VAT 48513	Self-tapping screw Ø 4x 12.7 TC fixing spoke lower seal dashboard (cars without radio)	1
53	VAT 79257	Self-tapping screw Ø 3.58 x Ø 5.4 TSC fixing left panel above tunnels and tunnels	3
54	SVT 79239	Subscrew 2.4 for the same, 2	3
55	VAT 76354	Self-tapping screw Ø 2.84 x 18.05 TSC fastening seat side box rear passengers	2
56	SVT 76370	Subscrew Ø 3 for the same	2
57	122 BP 80142	Support for internal rear window frame	2
58	122 BL 79587	Round high perianth Ø 130	2
59	122 BP 80857	Connice for gear lever gaiter	1
60	DNT 77777	Nut Ø 5x 0.8 fastening dashboard drawer torsional spring	1
61	RDI 58544	Serrated washer 25 for the same	1
62	5 407 696	Complete dashboard drawer lock button	1
63	5 407 691	Nut Ø 5 x 1 locking dashboard drawer button	1
64	5 407 684	Complete glove box cover	1
65	5 407 689	Hook for glove box cover o	1
66	5 407 710	Spring for glovebox cover	1
67	5 407 693	Left cover fixing plate	1
68	5 407 694	Right cover fixing plate 2	1
69	5 407 708	Snap lock for dashboard drawer, 2	1
70	5 408 703	Crus I CO or I n and PEA, y[]	1
71	5 407 132	Instrument panel complete with instruments	1
71	5 408 718	Instrument tray without instruments	1
72	5 408 679	Frame for instrument panel	1
73	5 408 680	Paperclip for the same	3
74	DS 854 101	Rubber ring for the same, 2a	3
75	5 408 707	Side frame for instrument panel	1
76	5 408 670	Dashboard protection edge	1
77	5 408 676	Instrument panel trim plate	1
78	5 408 669	Bracket for dashboard tablet frame	1
79	5 408 701	Dashboard panel	1
80	122 BC 79898	Control block box complete with instruments (water - petrol - oil)	1
80	5 418 918	Bare box Ø	1
81	5 407 144	Support for switches	1

Table 36 - Internal upholstery ring steering

Tableau 36 - Recouvrement interieur directionnel à droit
Tafel 36 - Innenpolsterung Rechtslenkung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 BC 81108	Raw dashboard	1
1	122 BC 81109	Covered dashboard	1
2	117 BC 76577	Raw bottom for storage compartment door	1
2	117 BC 76581	Cover for covered glove compartment door	1
3	117 BC 76576	Raw object compartment closing door	1
3	117 BC 76575	Closing door for the storage compartment with hinge, and holster	1
3	117 BP 76578	Closing door for storage compartment with hinge and fon dino coated	1
4	117 BC 75235	Hinge for glove compartment door	1
5	122 BP 81104	Rough left side wall for passenger feet	1
5	122 BP 81105	Left passenger foot side wall covered	1
6	122 BP 81106	Raw right side panel for pilot's feet	1
6	122 BP 81107	Right side panel with pilot feet covered	1
7	122 BC 81110	Left side dashboard surround frame	1
8	122 BC 81111	Instrument panel surround frame	1
9	122 BC 81112	Raw instrument panel	1
9	122 BP 81113	Covered instrument panel	1
10	122 BC 81114	Raw radio support platform	1
10	122 BP 81115	Covered radio support platform	1
11	122 BC 81116	Raw MERAK lettering plate	1
11	122 BP 81117	Covered MERAK writing platform	1
12	122 BC 81118	Raw central platform	1
12	122 BP 81119	Covered central platform	1
13	122 BP 81120	Raw tunnel left side panel	1
13	122 BP 81121	PanneHo left lateral lined tunnel	1
14	122 BP 81122	Raw tunnel right side panel	1
14	122 BP 81123	Covered tunnel right side panel	1
15	122 BP 81124	Blank spare cover. 2	1
15	122 BP 81125	Coated gear cover	1
16	122 BP 81857	Gear lever gaiter frame	1
17	122 BM 78497	Chrome MERAK lettering on the dashboard	1
18	117 BC 77535	Raw object drawer	1
18	117 BP 77801	Covered storage drawer	1
19	117 BC 75212	Raw glove box bottom wall	1
19	117 BP 75340	Covered glove box bottom wall	1
20	109 BC 56578	Dashboard drawer lock	1
21	116 BO 70396	Key for dashboard drawer	1
22	117 BC 76715	Dashboard drawer lock striker	1
23	PCN 64657	Rubber bumper for dashboard drawer door	1
24	DNT 47046	Nut Ø 5x0.8x4 for dashboard fastening	6
25	RNT 35345	Flat washer 2.5 for the same	6
26	RDI 58544	Serrated washer Ø 5 for the same	6
27	117 BC 74787	Headlight distributor support shell	1
28	VAT 75129	Self-tapping screw Ø 6.3 x 30 fastening the dashboard to the frame	4
29	RN 75159	Washer Ø 6x26x2 for the same	4
30	117 BC 74889	Knurled screw fixing instrument panel	7

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
MASERATI INFORMATION EXCHANGE P. O. BOX 772 MERCER ISLAND, WASHINGTON 98040 U.S.A. (206) 455-4449			

Tabella 37 - Vano motore e baule
Table 37 - Engine and trunk compartment

Tableau 37 - Coffre moteur et coffre a bagages
Tafel 37 - Motor haube und Kofferraum

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	VAT 59590	Self-tapping screw Ø 3.58 fixing sun visor	6
2	117 BP SH 175	Quilted for sky mt. L1	1
3	TRG 32573	Maserati badge plate on the front	1
4	TRG 75352	ITAL-DESIGN badge plate on the bodywork	1
5	122 BM 78497	Chromed MERAK lettering on the rear	1
6	107 BV 57591	Chromed Maserati writing on the rear	1
7	117 BP SH 173	Quilted for trunk lid mt. L. 08	1
8	122 BM 79480	Engine bonnet support rod	1
9	122 BM 79483	Engine bonnet support rod fixing pin	1
10	CN 43776	Split pin Ø 2x 15 for the same	1
11	117 BM 80361	Trunk bonnet lock complete with hook	1
12	122 BM 79201	Upper trunk compartment finishing bulkhead	1
13	115 BM 66293	Engine bonnet lock. GO	2
14	112 BM 63758	Engine bonnet opening lever on the door compartment pillar	1
15	117 BM 75589	Adjusters for engine bonnet and trunk opening cables	5
16	117 BM 75006	Trunk lid opening handle	1
17	107 BM 59192	Boot lid opening starting spring	2
18	117 BM 75057	Trunk bonnet starting spring stop plate	2
19	117 BM 75393	Trunk safety hook. I	1
19	117 BM 75392	Trunk safety hook complete with panel	1
20	117 BV 75657	Knob for trunk safety hook	1
21	116 BM 69465	Telescopic compass for opening trunk lid	1
22	117 BM 75053	Pin fixing compass to trunk lid telescope	2
23	BNT 47351	Bolt Ø 6x1 x25 tightening fastening, and feedback cof. mot	8
24	RNT 72359	Flat washer Ø 6x Ø 4 x 2 for the same I	12
25	RDI 53899	Serrated washer Ø 6 for the same	8
26	NPL 79594	Engine bonnet opening cable fixing nipples	2
27	VNT 57325	Bolt Ø 5x08x8 for the same	2
28	FGN 55641	Braided cable Ø 2 for opening the engine bonnet mt. 3,200	1
29	GFN 56711	Flexible sheath Ø 2.5 for bonnet opening cable	1
		side part mt. 2200	1
30	GFN 57259	Flexible sheath Ø 2 for trunk lid opening cable, L=1.600 m	1
31	CN 43776	Cotter pin Ø 2x 15 fixing nipples for engine bonnet locks	2
32	BNT 34770	Nut Ø 5x 0.8 x 12 fixing lock extension cof. mot	2
33	NPL 75766	Nipples fixing trunk lock cable on the lock	1
34	BNT 50309	Bolt Ø 5x0.8x8 for the same	1
35	VNT 75341	Screw DØ Left 0.8 x 12 fixing the trunk lid lock	4
36	VNT 57115	Screw Ø 5x0.8 x 20 fixing trunk lid opening lever	2
37	RNT 35345	Washer Ø 5x14x1 for the same	2
38	DNT 47146	Nut Ø 5x0.8 for the same	2
39	VN 59131	Screw DB 6x 1x 18 fixing breakaway spring	2
40	VN 59193	Screw Ø 6x1x16 for femur	2
41	RN 75159	Washer Ø 65x27 x2 for the same	2
42	CN 43776	Cotter pin Ø 1.8 x 15 fixing compass to telescope	2
43	117 BO 75250	Right door striker	1
43	117 BO 75251	Left door striker	1
44	117 BO 75648	Right door lock striker	1
44	117 BO 75649	Left door lock striker	1
45	VNT 75330	Screw Ø 6x 1x20 fixing door lock strikers	6
46	VNT 75341	Screw Ø 5x0.8 x 12 brass door strikers	4
47	122 BP 79391	Raw sky cabinet making	1
47	122 BP 80652	Covered sky cabinetry	1
47	122 BP 80652	Celling cabinetry complete with covering	1
47	122 BP 81212	Sky I cabinet-making cladding	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
48	122 BM 80234	Engine bonnet lock striker. No	2
49	117 BC 74961	Sun visor attachment	2
50	122 BM 79595	Extension for bonnet locks	2
51	RDI 60387	Serrated washer D 5 for the same	2
52	DNT 47046	Nut Ø 5x08 for the same	2
53	GRF 65588	Clip fixing the bonnet support rod	1
54	TN 80113	Rubber cap @ 16 closing hole on the opening lever	1
		bonnet. VI,	1
55	DCN 51350	Crowned nut Ø 7x1 fixing sun visor to the support	2
56	RAT 47078	Spring washer D 7 for the same	2
57	CN 43776	Split pin Ø 2x 15 for the same	2
58	GFN 56711	Flexible sheath Ø 2.5 for bonnet opening cable	1
		central part between the locks mt. 0415	1
59	5 407 440	Rear-view hinge cover	1
60	S 551 104 A	Interior rearview mirror	1
61	DX 5540 IE	Right sun visor	1
62	DX 554970	Left sun visor	1

Tavola 38 - Portiere
Table 38 - Doors

Tableau 38 - Portieres
Tafel 38 - Türen

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	117 BL 74610	Complete assembly for right door window regulator	1
1	117 BL 74611	Complete assembly for left door window regulator	1
2	107 BL 62061	Spring and spiral for window regulator	2
3	117 BL 76333	Reducer for windcreens	2
4	107 BL 62049	Flexible coupling for window regulator	2
5	117 BL 76334	Motor for window regulator	2
6	117 BL 76335	Left window lifter slide complete with spring	1
6	117 BL 76336	Right window lifter coupling complete with spring	1
7	122 BL 79567	Round speaker Ø 130 for radio. 0.222	2
8	122 BO 77536	Right door armrest, raw	1
8	122 BO 77537	Left door armrest, raw	1
8	122 BP 80628	Right door armrest, covered in leather	1
8	122 BP 79934	Right door armrest, covered in velvet	1
8	122 BP 80629	Left door armrest, covered in leather	1
8	122 BP 79935	Left door armrest, covered in velvet	1
9	117 BO 73704	Frame for right interior door handle (up to frame no. 0098)	1
9	117 BO 73705	Frame for left interior door handle (up to frame no. 00368)	1
9	122 BO 78870	Frame for interior door handle (of frame no. 0098)	2
10	117 BO 75650	Panel complete with fixings, on the left door panel (up to the canvas n. 0036)	1
10	117 BO 79179	Panel complete with fixings, on the left door brush (of chassis no. 0036)	1
10	117 BO 75658	Panel complete with fixings, on the right door panel (up to frame no. 0096)	1
10	117 BO 79180	Panel complete with fixings, on the right door panel (of chassis no. 0098)	1
10	122 BP 80632	Central panel on the right door panel, covered in leather	1
10	122 BP 80740	Central panel on the right door panel, covered in velvet	1
10	122 BP 80633	Central panel on the left door panel, covered in leather	1
10	122 BP 80741	Central panel on the left door panel, covered in velvet	1
11	VNT 57682	Screw Ø 4x 0.7 x 15 fixing interior door handle frames and doors	4
12	VNT 73616	Screw Ø 6 x 1 x 20 fixing the armrest to the door (internal)	8
13	RN 57315	Washer Ø 6x28x2 for the same	8
14	VAT 76365	Self-tapping screw Ø 3 x 38 x 31.75 fixing door sill arm holder	4
15	SVT 00825	Underscrew Ø 4 for the same	4
16	117 BO 76038	Upper reinforcement for left internal scraper seal holder brush	1
16	117 BO 76039	Upper reinforcement for right internal scraper seal holder brush	1
17	117 BO 74677	Raw right door panel	1
17	117 BO 74676	Left door rough panel	1
17	122 BP 80630	Right door panel complete with upper reinforcement and central panel covered in leather	1
17	122 BP 78828	Right door panel complete with upper reinforcement and central panel covered in velvet, as	1
17	122 BP 80631	Complete left door panel, upper reinforcement and central brush covered in leather	1
17	122 BP 79929	Complete left door panel, upper reinforcement and central panel covered in velvet. 0.2.2	1
17	122 BP 80634	Right door panel complete with internal water scraper armrest and fixings, covered in leather	1
17	122 BP 80746	Right door panel complete with internal water scraper armrest Ø fixings, covered in velvet	1
17	122 BP 80635	Left door panel complete with internal water scraper armrest Ø fixings, covered in leather	1
17	122 BP 80747	Left door panel complete with internal water scraper armrest and fixings, covered in velvet	1
18	GRF 75601	Clip fixing door knobs	1
19	VAT 58063	Self-tapping screw Ø 2.84 x 19.05 fix. door panels (non-black panels)	6
19	VAT 76384	Self-tapping screw Ø 2.84 x 19.05 fixing door panels (black panels)	6
20	SVT 58865	Subscrew Ø 3 for non-black panels	6
20	SVT 76370	Subscrew Ø 3 for black brushes. 22	6
21	PCN 56835	Prestroke for door stop with cables on the body	2
22	PCN 50304	Grommet Ø 15 x 23 door cable passage on the body	4
23	117 BO 74936	Molding for external right door scraper	1
23	117 BO 74937	Molding for left door external scraper	1
24	VNT 75331	QD screw 6x tx 25 fixing door bumper bumper	4
25	107 BL 55888	Rear light indicator	2
26	117 BO 75379	Mainline external left door complete	1
26	117 BO 75380	External right door handle complete	1
27	DNT 47047	Nut Ø 6 x 1 fitting the external handle to the door	4
28	RDI 53899	Serrated washer dd 6 per said	4
29	RNT 67011	Flat washer Ø 6x 13 for the same. 22	4
30	VNT 75377	Vita Ø 5: v'Almanilla doors lock control	2
31	DNT 47046	2D die 5x 0.8 for the same	2
32	117 BO 74369	Pair of door handle key blocks	2
33	117 BO 78375	Door handle key	2
34	116 BO 75320	Door handle key block return spring	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
35	117 BO 75317	Plate holding the key socket return spring	2
36	RN 75803	Flat washer Ø 10.5 x 17.2 x 0.5 black shim	2
37	116 BO 75317	Door lock control pawl	2
38	SN 72371	Pin Ø 2 x 20 fixing door handle pawl and key block	4
39	117 BP 75911	Door safety rod centering bush	2
40	115 BO 75381	Knob on the door lock safety	2
41	117 BO 75359	Complete tie rod for door lock safety	2
42	PCN 75164	Buffer for door safety rod joint 2	2
43	117 BO 75363	Door lock control rod assembly	2
44	117 BO 75357	Left door lock complete with no. 42	1
44	117 BO 75358	Right door lock complete with no. 42	1
45	VNT 65545	Screw Ø 6 x 1 x 15 fixing door lock	6
46	GRF 56711	Flexible sheath Ø 2.5 for interior door handle steel cable no. 14	2
47	117 BO 75903	Control braid cable between door lock and interior door handle	2
48	117 BM 75589	Door cable register	2
49	117 BO 73339	Left door counter handle (up to chassis no. 0098)	1
49	122 BO 78869	Left door countereniglia (from chassis no. 00398)	1
49	117 BO 73340	right door counter handle (up to frame no. 0098)	1
49	122 BO 78868	Right door counter handle (of chassis n. 08)	1
50	NPL 55688	Nipples Ø 5.8 x 13 heavy for door cables	2
51	NPL 75890	Nipples Ø 2.5 fixing the lock control cable	2
52	BNT 57325	Bolt Ø 4x6.7dd for the same	2
53	BNT 53969	Button Ø 5x0.8 x 10 for fixing the door handle	2
54	RDI 58544	Serrated washer D 6 for the same. 2	4
55	RNT 35345	Flat washer 2 left 14x 1 per said	4
56	117 BO 74667	Left window lift guide and trolley complete with drawstring	1
56	117 BO 74668	Right window lift guide and trolley complete with drawstring	1
57	BN 75660	Bolt Ø 8 x 1.5 x 16 lowered head lower fixing of car guides rello eliza crystal	2
58	DST 53387	Stop nut Ø Left (for the same)	2
59	DNT 47047	do 2 no tassogolo atatta and camel glass	4
60	RDI 53899	Split washers Ø 6 per said. 2x	4
61	RN 75159	Washer Ø 6x28.2 for the same	4
62	DNT 47031	Nut Ø 8 x 1.25 upper fixing glass lift carriage guide	4
63	RDI 55990	Split washers D 8 for the same	4
64	RNT 74254	Washer Ø 8 x 0 x 2.5 for the same	4
65	BNT 47019	Bolt Ø 6 x 1 x 16 fixing carriage glass lift	2
66	RN 54593	Washer Ø 6x 19x 2 for the same	2
67	RDI 53899	Spring washer Ø 6 for the same	2
68	RN 63332	Washer Ø 12x22 x 0.5 for the same	2
69	DNT 47047	Nut Ø 6 x 1 fastening the glass to the door	6
70	RDI 53899	Washer DD 6 for the same	6
71	BNT 53968	Bolt Ø 6 x 1 x 20 fixing the glass frame (front panels at the bottom)	2
72	RN 54593	Washer Ø 6x 19 x 2 for the same	2
73	RDI 53899	Washer Ø 6 for the same	2
74	DNT 47047	Nut Ø 6x1 for the same	2
75	BNT 67853	Bolt Ø 8 x 1.05 x 30 fixing door frame glass frame	4
76	RDI 53899	Washer Ø 6 for the same	4
77	RNT 74254	Washer Ø 6x20x2.5 for the same	4
78	117 BO 73859	Left door frame complete with sealing profiles	1
78	117 BO 73860	Right door frame complete with sealing profiles	1
79	122 BO 76196	Front right wing glass (white colour)	1
79	122 BO 73488	Front right wing glass (optional blue colour)	1
79	122 BO 78199	Front left wing glass (white colour)	1
79	117 BO 73489	Front left wing glass (optional blue colour)	1
80	PRN 70594	Black rubber profile for fixed front wings (2 m front wings)	2
81	PRN 69150	Black rubber profile for fixed front quarter windows (rear ones 1 m)	2
82	PRN 75163	Velvety profile for drip tray (48 m)	4
83	PRN 66130	Rubber profile for door frames (8 m)	2
84	122 BO 78196	Right door descending glass (white colour)	1
84	117 BO 73490	Right door descending glass (optional blue colour)	1
84	122 BO 78197	Descending glass for left doors (white colour)	1
84	117 BO 73491	Left door descending glass (optional blue colour)	1
85	VNT 65545	QD screw 6 x 1 x 15 fixing the upper part frame	4
86	PRN 56402	* Velvety groove for glass doors	2
87	DNT 62536	Nut Ø 3x0.5 plate fixing	6
88	RDE 61865	Serrated washer Ø 3 for the same	6
88	RNT 47373	Flat washer Ø 3x8 for the same	6

Tavola 39 - Sedili e rivestimenti
Table 39 - Seats and upholstery

Tableau 39 - Sieges et recouvrement
Tafel 39 - Sitze und verkleidung

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 BP 80726	Pilot and passenger seats upholstered in leather	1
1	122 BP 79231	Pilot and passenger seats upholstered in velvet	1
1	122 BP 81229	Front seat backrest covered in velvet	1
1	122 BP 81230	Front seat cushion covered in velvet, 0. L.	1
1	122 BP 81231	Front seat backrest covered in leather	1
1	122 BP 81232	Front seat cushion covered in leather	1
2	122 BP 78552	Rear seat, right complete with backrest and seat covered in leather	1
2	122 BP 80726	Rear seat, right complete with backrest and seat covered in velvet	1
2	122 BP 78553	Rear seat, left complete with backrest and seat covered in leather	1
2	122 BP 80727	Rear seat, left complete with backrest and seat covered in velvet	1
3	122 BP 79076	Sliding pilot seat with adjustment lever	1
3	122 BP 79077	Sliding passenger seat with adjustment lever	1
4	122 BP 79078	Sliding pilot and passenger seats without adjustment lever	2
5	VNT 63706	Screw Ø 8 x 1.0 x 16 fixing sliding seats	16
6	122 BP 79081	Folding pilot seat with control lever	1
6	122 BP 79083	Folding passenger seat with control lever	1
7	122 BP 79082	Foldable pilot seat without control lever	1
7	122 BP 79084	Folding passenger seat with control lever	1
8	122 BP 79085	Splitting bar for upper seats	2
9	VNT 57673	Screw Ø 8 x 1.5 x 30 flt fixing, backrest seats	4
10	VN 79444	Special screw Ø 6 x 11.5 x 2.75 for the same	4
11	RN 79726	Spacer washer Ø 6.5 x 11.5 x 2.75 for the same	4
12	RN 63302	STAINLESS STEEL washer Ø 12.5 x Ø 0 x 0.5 for the same	4
13	RN 79467	Brass washer Ø 12.5 x 18 x 2 for the same	4
14	122 BP 79235	Cabin mat series	1
15	122 BP 79236	Trunk mat series	1
16	117 BP 79271	Thermal insulation of the trunk bottom complete with plastic bag	1
17	122 BP 79272	Thermal insulation of the trunk radiator wall	1
18	122 BP 75753	Rest pedal cover	1
19	122 BP 76321	Coated radiator compartment closing sheet metal	1
20	122 BP 76322	Carpet covering the battery compartment closing door	1
20	122 BP 76323	Storage compartment closing door, pressure coated	1
21	122 BP 79324	Left tailgate compartment closing door covering	1
21	122 BP 79325	Left headlight compartment closing door, comp. of the n. 2nd coat	1
22	122 BP 76326	Right fenestration compartment closing door covering	1
22	122 BP 79327	Right female compartment closing door complete, of the no. 23 coated	1
23	PFN 57495	Passed it @ 20 to finish the holes on the headlight compartment doors	4
24	122 BP 79328	Plugged for wiper compartment closing door	1
24	122 BP 79629	Covered wiper compartment closing door	1
25	122 BP 79320	Carpet for trunk compartment floor covering	1
25	122 BP 80230	Completely covered boot compartment floor	1
26	182 BM 80070	Trunk compartment floor insulation bulkhead	1
27	122 BP 80257	Right front wheel arch lining in the trunk	1
28	122 BP 80258	Front left wheel arch lining in the trunk	1
29	122 BP 80259	Right front wheel arch lining in the passenger compartment	1
30	122 BP 80260	Passenger side carpet on the firewalls	1
31	122 BP 80261	Front passenger foot tray mat	1
32	122 BP 80262	Right passenger side cross member covering	1
33	122 BP 80263	Right rear passenger footwell mat	1
34	122 BP 80264	Right side member covering	1
35	122 BP 80265	Right rear seat support shelf covering	1
36	182 BP 80266	Left rear seat support shelf covering	1
37	122 BP 80267	Left yoke covering	1
38	122 BP 80268	Rear left passenger footwell mat	1
39	122 BP 80269	Left side cross member covering (pilot)	1
40	122 BP 80270	Driver's front footwell mat	1
41	122 BP 80271	Front left wheel arch lining in the passenger compartment	1
42	122 BP 79432	Right rear seat rubber molding	1
42	122 BP 79433	Left rear seat rubber molding	1
42	122 BP 80555	Right rear seat cushion covered in leather	1
42	122 BP 80736	Right rear seat cushion covered in velvet	1
42	122 BP 80656	Left rear seat cushion covered in leather	1
42	122 BP 80739	Left rear seat cushion covered in velvet	1
43	182 BP 79609	Left rear seat backrest frame	1
43	122 BP 79610	Right rear seat backrest frame	1
43	182 BP 80553	Right rear seat backrest covered in leather	1
43	122 BP 80730	Right rear backrest covered in velvet	1
43	122 BP 80654	Left rear seat backrest covered in leather	1
43	122 BP 80729	Left rear seat backrest covered in velvet	1

INTERIOR TRIM MATERIAL

Grey vinyl, H 140 cm — 122 BP 79237

— Passenger-compartment / engine-bay partition	40
— Complete tunnel covering	40
— Outer side boxes	40
— Headlining edging	
— Right A-pillar trim	5
— Left A-pillar trim	5
— Right sill trim	10
— Left sill trim	10
— Front panel	120 x 20
— Rear-window surround	170 x 45
— Driver footwell outer panel	15
— Passenger footwell outer panel	15
— Valve-box cover	35 x 70
— Radio housing	60 x 22
— Right front tunnel panel	10
— Left front tunnel panel	10
— Right under-dash panel	2
— Left under-dash panel	2
— Right rear under-dash trim	
— Left rear under-dash trim	

Total grey vinyl 40

Connolly PAC leather — BP 69893

— Door panels	8
— Door centre panels	3
— Door armrests	2.0
— Four door retaining straps	9
— Rear-seat backrests	25.00
— Rear-seat cushions	24.00
— Complete front seats	60.00
Total leather	12 m²

Other upholstery materials

— Quilted material for headlining	4
— Quilted material for covers	4
— Foam for trim	10

Upholstery velvet

— SH 182 — blue	35
— SH 183 — grey	35
— SH 184 — beige	35
— SH 185 — dark grey	35
— Front-seat backrest	10
— Front-seat cushion	1.20
— Rear-seat backrest	3
— Rear-seat cushion	1.4
— Door panel	22
— Centre panel	0.34
— Armrests	0.38

Table 40 - Insulation

Tafel 40 - Isolierstoffen

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 BP 79213	Serie completa Isolamenti in feltro	1
2	122 BP 80235	Felt on the left front fender	1
3	122 BP 80236	Felt on the right front fender	1
4	122 BP 80237	Felt on the boot floor, 2nd piece	1
5	122 BP 80238	Felt on the boot floor, 1st piece	1
6	122 BP 80239	Passenger side flame arrester felt	1
7	122 BP 80240	Passenger side front tray felt	1
8	122 BP 80241	Right side cross member felt	1
9	122 BP 80242	Right rear tray felt	1
10	122 BP 80243	Right rear seat support felt	1
11	122 BP 80244	Front right spar felt	1
12	122 BP 80245	Felt rear right spar	1
13	122 BP 80246	Felt rear left spar	1
14	122 BP 80247	Front left side member felt	1
15	122 BP 80248	Pilot foot tray felt	1
16	122 BP 80249	Left side cross member felt	1
17	122 BP 80250	Left rear tray felt	1
18	122 BP 80251	Left rear seat support felt	1
19	122 BP 80252	Left side tunnel felt, 2	1
20	122 BP 80253	Felt right side tunnels	1
21	122 BP 80254	Rear upper tunnel felt	1
22	122 BP 80255	Felt under left rear seat side box	1
23	122 BP 80256	Felt under right rear seat side box	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità

Riscaldamento e condizionamento Tableau 41 - Chauffage et conditionnement
Table 41 - Heating and conditioning Tafel 41 - Heizung und Klimaanlage

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	122 BR 77189	Filter for air conditioning system	1
2	BNT 47370	Bolt Ø 5x0.8 x 16 fixing front throttle, air intake	18
3	117 BV 71819	Front butterfly for dynamic air intake	1
4	117 BV 75924	Seal on the front throttle frame	1
5	122 BV 75958	Gasket on the recirculating butterfly frame	1
6	122 BV 79543	Recirculation butterfly assembly	1
7	122 BR 76199	Hose from compressor to condenser	1
8	117 BV 70859	Pin for the throttle opening control lever joint	2
9	CN 64833	Split pin Ø 1.3x 10 for the same. L	4
10	117 BV 70943	Pressure valve Recirculation flow control	1
11	C 114 0327 MI 76043	Hose from filter to expansion valve	1
12	122 BR 76200	Grommet for air conditioning pipes part. front of the car	2
13	PFN 45001	External air butterfly control vacuum valve	1
14	117 BV 70366	Vacuum valve fixing assembly	1
15	122 BV 79332	Nut Ø 5 fixing vacuum valves	2
16	DN 70800	Right blower-scroll welded assembly for heating and air-conditioning	1
17	117 BV 70538	Right impeller for heating and air conditioning system	1
18	117 BV 70541	Seal ring between motor holder cover and scroll	2
19	117 BV 70540	Electric-motor mounting disc for heating and air-conditioning system	2
20	117 BV 70539	Four-speed heating and air-conditioning fan motor with resistor	1
21	122 BG 76185	Resistor for four-speed motor	1
22	122 BL 80882	Left impeller for heating and air-conditioning system	1
23	117 BV 70542	Left blower-scroll welded assembly	1
24	117 BV 70637	Anti-vibration mounting for right and left blower scrolls	4
25	SLN 77554	Plastic tube Ø 2.4 x 5.7 x 1500 for dynamic-air flap control, lower valve port	1
26	TPN 73446/1500	Plastic tube Ø 2.4 x 5.7 x 4700 for dynamic-air flap control, upper port	1
27	TPN 73446/1700	Washer Ø 6.5 x 16 x 2 on silentblock, securing right and left blower scrolls	4
28	RN 57315	Washer Ø 6x13x 1.5 for the same. I	4
29	RNT 67011	Locknut Ø 6 x 1 x 5.8 securing the blower scrolls to the anti-vibration mounts	4
30	DST 51411	Grommet in blower-scroll housing for motor wiring and dynamic-air flap tubes	3
31	PFN 59963	Seal between blower scroll and evaporator air conveyor	2
32	117 BV 70906	Evaporator air-conveyor mounting assembly	1
33	122 BV 78268	Rubber profile Ø 5x10x 850	1
34	PRN 77499	Bonded sheet on air conveyor, sealing it to the frame	1
35	117 BV 76909	Rubber profile Ø 25 x 10 x 500 sealing the air conveyor to the evaporator	1
36	PRN 77501	Air-conveyor sealing trim	1
37	117 BV 78935	Armaflex sheet insulating the upper part of the evaporator	1
38	117 BV 75743	Grommet Ø 4.5 x 20 x 1 for thermostat bulb	1
39	PFN 47440	Radiator and evaporator for heating and air-conditioning	1
40	117 BV 70764	Heating radiator	1
40	122 BV 77395	Complete thermostat with control and sheath-retaining plate	1
41	122 BR 76796	Clamp securing air-conditioning flexible hose	2
42	FRN 78051	Clamp securing EBELHOF valve coil	1
43	107/A BR 62301	Expansion valve on evaporator delivery line	1
44	122 BR 76980		

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
45	FRN 44680	Front throttle tube fixing clamp	1
46	PRN 77498	Rubber profile Ø 20 x 10 x 1.650 for air seal between conveyor and evaporator	1
47	122 BR 76198	Hose from evaporator to compressor	1
48	FRN 37825	Clamp securing heating pipes to engine, thermostatic tap and radiator	6
49	BNT 34770	Bolt Ø 5 x 12 fastening tray to evaporator	4
50	117 BV 73161	Evaporator condensate-drain hose, Ø 14 x 20 x 300	1
51	MN 54688	Condensate-drain hose from evaporator tray, Ø 14 x 20 x 300	1
52	MN 57698	Condensate-drain hose from evaporator tray, Ø 10 x 16 x 160	1
53	122 BV 77469	Hot-water delivery pipe from thermostatic tap to heating radiator	1
54	122 BV 77470	Pipe from heating radiator to the engine for water return	1
55	122 BV 77381	Control unit fixing bracket for vacuum valve control	1
56	BNT 65464	Bolt Ø 4 x 0.7 x 14 fixing the control unit to the plate	2
57	RDI 58543	Serrated washer Ø 4 for the same	2
58	RNT 59020	Flat washer Ø 4 for the same	2
59	DNT 62557	Nut Ø 4 x 0.7 for the same	2
60	117 BV 71577	Throttle control unit	1
61	120 BV 75311	Thermostatic tap complete with bracket	1
62	BNT 49603	Bolt Ø 5 x 0.8 x 20 securing hot-water delivery fitting	2
63	GOM 75349	Rubber for flange on thermostatic tap	1
64	120 BV 75298	Thermostatic tap support plate	1
65	122 BV 77468	Hot water delivery pipe from the engine to the thermostat tap	1
66	FGN 74375	Cable Ø 1 x 1000 hot water valve control	1
67	GFN 57259	Sheath L = 800 for hot water control cable	1
68	TPN 73446/1000	Plastic tube Ø 2.4 x 5.7 x 1000 for throttle control	1
69	TPN 73446/2200	recirculation	1
70	CTR 68463	Plastic pipe Ø 2.4 x 5.7 x 2200 from the reduction fitting	1
71	122 BR 79307	to the control unit	1
72	120 BV 75300	Compressor drive belt	1
73	ZD 9355 000 U	Side panel, red vinyl type 206, for air-conditioning	1
74	ZD 9290 200 U	Flange for heating tap	1
75	ZD 9619 022 U	Bolt Ø 5x 0.8 x 14 condenser fixing	1
76	ZD 9525 900 U	Washer Ø 5x 12 for the same	1
77	5 407 635	Washer Ø 5x 15 x 1 for the same	1
78	5 418 811	Nut Ø 5 x 08 condenser fixing	2
79	5 407 634	Clamp for fixing air conditioning filter	2
80	5 407 633	Bracket for fixing air conditioning filter	1
81	122 BR 78360	Tube Ø 9.52 connecting filter to condenser	1
*	122 BR 122 183	Air-conditioning condenser	1
		Air conditioning thermostat control microswitch	1
		Complete air-conditioning installation kit	1

* Parts marked with an asterisk are not fitted as standard but are available on request.

avola 42 - Compressore condizionatore
Table 42 - Conditioning compressor

tableau 42 - Compresseur pour conditionnement
Tafel 42 - Klimaanlage kompressor

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	Non fornibile sep.	Compressor body	1
2	107 BR 66056	Base cover	1
3	107 BR 66081	Base cover gasket	1
4	BNT 66113	Bolt @ 1/4" - Ø 0 x 3/4" fixing base cover	14
5	BNT 66103	Plug @ 3/8" - Ø 4 x 1/2" UNF oil level	2
6	GOM 61051	Rubber Ø 9.5 x 1.78 for the same	2
7	116 BR 67722	Crank shaft	1
8	LN 66108	Key for crankshaft	1
9	107 BR 66083	Front cover, 2	1
10	GOM 66109	Rubber @ 3"1/4x 1/16" for the same	1
11	VNT 66104	Screw Q 1/4" x 5/8" for the same	8
12	CSC 66105	Bearing Ø 5 x 52 x 12 on the crankshaft	1
13	Non fornibile sep.	Crank shaft sealing ring and rear cover	1+1
14	GOM 66096	Square rubber Ø 54 x 1.5 holding rear cover	1
15	BNT 66097	Bolt @ 1/4" - Ø 0 x 5/8" for the same	6
16	Non fornibile sep.	Rear cover	1
17	BNT 57391	Bolt 3/8" - Ø 4 x 1" 1/4 fixing electromagnetic clutch	1
18	RDI 55990	Washer Ø 8x15x0.8 for the same	1
19	RN 43775	Washer Ø 8 x 2 x 2 for the same	1
20	BNT 55118	Bolt @ 3/8" - 16 x 1 3/4 compress. fixing. to the support	2
21	BNT 55117	Bolt @ 3/8" -16x 1 1/2 for the same	4
22	RDI 54211	Washer Ø 10x 18 for the same	6
23	RNT 52733	Flat washer Ø 10x Ø 0x 2.5 for the same	6
24	107 BR 66084	Coupling disc for electromagnet	1
25	107 BR 66085	Shim disc between pulley and clutch disc	2
26	122 BR 77258	Complete electromagnetic clutch pulley	1
27	ANT 45425	Dust cover Ø 36.5 x 62 x 3 for bearing	2
28	CSC 43387	Bearing Ø 30 x 62x20 for the same	1
29	107 BR 66086	Shim disc between stop ring and dust cover	2
30	107 BR 66087	Shim disc between stop ring and dust cover	2
31	ART 47848	Stop ring @ 26e for the same	1
32	ART 46754	Stop ring @ 6211 for the same	1
33	Non fornibile sep.	Electromagnet	1
34	BNT 49969	Bolt @ 1/4" - Ø 0 x 5/4 for the same	4
35	RDI 53899	Washer Ø 6x 12 for the same	4
36	107 BR 66100	Crankshaft seal assembly	1
37	116 BR 67721	Connecting rod, piston, pin and oil-control ring assembly	1
38	Non fornibile sep.	Connecting rod cap	2
39	Non fornibile sep.	connecting rod cap fixing eulon	4
40	Non fornibile sep.	Connecting rod body	2
41	Non fornibile sep.	Piston	2
42	Non fornibile sep.	Piston pin	2
43	Non fornibile sep.	Connecting rod pin	2
44	Non fornibile sep.	Scrape It	4
45	107 BR 66090	Gasket between intermediate cover and compressor body	1
46	Non fornibile sep.	Intermediate valve holder body	1
47	GRN 66089	Grain Ø 3.2x 12.5 for the same	2
48	Non fornibile sep.	Valve disc fixing pin	2
49	RSN 32497	Split washer @ 5 for the same	2
50	DNT 61459	Nut @ 10UNFx32F" for the same	2
51	Non fornibile sep.	Lower valve disc, 2	2
52	Non fornibile sep.	Upper disk, valve 0.2	2
53	Non fornibile sep.	Valve disc sealing ring	2
54	107 BR 66901	Gasket between cylinder head and valve holder body	1

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
55	107 BR 66092	Complete cylinder head	1
56	107 BR 66093	Intermediate valve holder body assembly including valves	1
		gaskets	1
58	107 BR 66095	7/8" Rotalock valve	2
59	BNT 66101	Bolt @ 5/16" - 18 x 1 x 3/8" cylinder head fixing	4
60	BNT 66102	Bolt @ 5/16" - 18 x 11/2 cylinder head fixing	8
61	GOM 70065 *	Rubber for isobaric valve	1
62	107 BR 73843 *	Series of gaskets and rubbers for lids	1
63	107 BR 70063 *	Set of gaskets and rubbers for flange valve	1
64	107 BR 70064 *	Set of seals and rubbers for Rotalock valve	1
65	117 BR 72433 *	Pulley with clutch for compressor	1

* Parts without item numbers are listed at the foot of the illustrated plate.

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
1	20130 33994	Screwdriver, 2	1
2	115 VA 66832	Spark plug wrench	1
3	30140 33995	Universal pliers	1
4	30042 34917	Adjustable wrench	1
5	115 VA 66913	Allen key ch. 17 for oil drain plugs. n	1
6	30045 39507	Complete set of spanners 6 +22	1
7	30061 51012	6-7 spanner	1
8	30062 51013	8-9 spanner	1
9	30063 51014	Fixed wrench 10 + 11 2	1
10	30064 51015	12 +13 spanner	1
11	30065 51016	14 +15 spanner	1
12	30066 51017	16 +17 fixed wrench	1
13	30067 51018	18 +19 fixed wrench	1
14	30068 51019	20 +22 spanner	1
15	30125 34219	Steel hammer, 2.	1
16	107 VA 58398	Wrench for jacks and stud wheels	1
17	107 VA 58397	Car lifting jack fixed in the engine compartment	1
18	80002 33996	Tool bag	1
19	VFN 47496	Fuse valve from BA	2
20	VFN 47490	5A fuse valve	2
21	VFN 51306	5 A_N fuse valve	2
22	116 VA 71688	Complete spare fuse valve box. of 10 fuses	2

N. Fig.	N. d'ordinazione	DESCRIPTION	Quantità
US Ae: co AP. Asa o RESTORATION & PARTS P.O. Box 772 Mercer Isl Washington 98040 455-4449 FAX 206-646-5458			